



Ardes AR5ST30N Series Table Fan Instruction Manual

[Home](#) » [Ardes](#) » Ardes AR5ST30N Series Table Fan Instruction Manual 

Contents

- 1 Ardes AR5ST30N Series Table Fan
- 2 Product Usage Instructions
- 3 Frequently Asked Questions
- 4 SAFETY WARNING
- INSTRUCTION
- 5 ASSEMBLING
- 6 INSTRUCTIONS FOR USE
- 7 MAINTENANCE
- 8 USER INFORMATION
- 9 GUARANTEE
- 10 ASSEMBLING INSTRUCTION
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts



Ardes AR5ST30N Series Table Fan



Product Specifications

- **Model Numbers:** AR5ST30N, AR5ST30W, AR5ST30G, AR5ST40N, AR5ST40W, AR5ST40G
- **Age Recommendation:** 8 years and older
- **Power Supply:** Electric plug
- **Speed Settings:** 0 = off, 1 = minimum speed, 2 = medium speed, 3 = maximum speed
- **Features:** Oscillation function, adjustable vertical slope

Product Usage Instructions

Assembling

1. Place the base (1) on a flat, dry, and stable surface.
2. Attach the main body (2) to the base.
3. Connect the control panel (3) to the main body.
4. Insert the motor shaft (4) into the main body.
5. Attach the front grille (7) and back grille (10) using the respective lock rings (9, 11).
6. Secure the fan (8) onto the motor (12).

Instructions for Use

1. Place the fan on a flat, dry, and stable surface.
2. Insert the plug of the fan into a socket.
3. Select the desired speed by pressing the buttons on the control panel (3).
4. To enable automatic oscillation, press down on the knob (5) on top of the motor.
5. To adjust the vertical slope, move the front of the fan up or down as needed.

Maintenance

Regularly clean the fan to ensure optimal performance. Ensure that the fan is switched off from the power supply before performing any maintenance tasks.

Frequently Asked Questions

Q: Can children use this appliance?

A: This appliance is recommended for children 8 years of age and older under adequate supervision and instruction.

Q: What should I do if the power cable gets damaged?

A: The power cable must be replaced only at a service center approved by the manufacturer to prevent any risks.

Q: How do I adjust the speed of the fan?

A: Press the buttons on the control panel to select from the available speed settings: 0 = off, 1 = minimum speed, 2 = medium speed, 3 = maximum speed.

SAFETY WARNING INSTRUCTION

 
- This appliance may be used by children 8 years of age and older and people with reduced physical, sensory, or mental capacities or with a lack of experience and knowledge if they are adequately supervised or have been instructed on the safe use of the appliance and are aware of the related dangers.
- Children must not play with the appliance. Learning and maintenance must not be performed by children unless they are under supervision.
- Cleaning and maintenance operations must not be performed by children without supervision.
- If the power cable gets damaged, it has to be replaced only at a service center approved by the manufacturer in order to prevent any risks.
- Ensure that the fan is switched off from the supply mains before removing the guard. Don't connect the appliance to the power supply and don't use it unless it is completely assembled (see mounting instructions).
- **ATTENTION:** read this booklet carefully it contains important instructions for safe installation, use, and maintenance. Important instructions are to be kept for future reference.
- It is forbidden for children to play with the device.
- This device must be used only for the purpose it was expressly designed; any use not complying with the instructions contained in the manual is considered inappropriate and dangerous.
- The manufacturer is not responsible for possible damages caused by the inappropriate and/or unreasonable use.

- This device is NOT suitable for use in an explosive environment (in the presence of flammable substances such as gas, vapor, mist, or dust, in atmospheric conditions when, after ignition, the combustion is spread in the air).
- The packing materials (plastic bags, expanded polystyrene, etc.) must be kept out of the reach of children or disabled persons since they represent potential sources of danger.
- The installation/assembly of the device will be made/according to the indications of the manufacturer. A wrong procedure may cause damages to persons, animals, or objects, for which the manufacturer cannot be considered responsible.
- Place and use the device on a horizontal and stable surface.
- Before use check the integrity of the device and power cable. In case you are not sure contact a qualified person.
- Before powering the device make sure the rating (voltage and frequency) corresponds to the grid and the socket is suitable for the plug of the device. Make sure the power system is equipped with proper protection according to the law in force.
- DO NOT power the device using multiple sockets.
- If possible, avoid the use of adapters and/or extension cables; if their use is absolutely necessary, use only materials in compliance with the current safety regulations and according to the electrical parameters of the adapters.
- The device must not be switched on using external timers and/or other remote control devices which are not specified in this manual.
- DO NOT use or store the device near heat sources (heaters, stoves, etc.). DO NOT dip the device in water or other liquids; in case of an accidental fall in the water DO NOT try to take it out, but first of all, unplug immediately the power cable from the socket.
- If you use the device for the first time, make sure to remove any label or protective sheet that blocks its proper functioning.
- Plug and unplug the power cable with dry hands and hold it firmly. Before plugging make sure the start button of the device is in the "OFF" position (turned off).
- Always unplug the power cable to avoid overheating and avoid stretching it (do not pull it, tug it, or use it to drag the device to which is connected). Avoid placing the power cable on abrasive or sharp surfaces or in positions where it can be damaged easily.
- DO NOT obstruct totally nor partially the air vents or insert objects inside.
- During the functioning do not touch the device with wet body parts, and in any case, it is recommended to have between you and the standing surface, an isolating element (for ex. wearing shoes with rubber soles).
- During the use, the device must be kept at a safe distance from any object and/or flammable or potentially explosive substance.
- In case of malfunction or anomalies during the functioning, switch off the device immediately, turn off the power, and check the cause of the anomalies, if possible, with the support of a qualified person.
- Avoid carrying out operations that are not specified in this manual (such as disassembling and/or altering).
- Always remember to unplug the power cable of the device if it is not used for a long period, before storing, cleaning, or performing any maintenance operation.
- Store and use the device only indoors or in any case protected from weathering such as rain, direct radiation of the sun, and dust. The device is not designed for external use or storage.
- The cleaning and maintenance of the device MUST NOT be done by children without the supervision of an adult.

- Before unplugging the device, switch it off, using the proper command on the control panel.
- DO NOT hang the fan on the wall or ceiling unless this type of installation is provided and explained in this manual.
- Place the device at a proper distance from the objects or surrounding walls making sure that its functioning will not cause accidental damage. DO NOT use the device near gas stoves or open flames in general. DO NOT use the device near curtains or textiles.
- DO NOT hang the fan on the wall or ceiling unless this type of installation is provided and explained in this manual.
- DO NOT cover the device during functioning.
- DO NOT insert objects or body parts inside the protection grille of the fan. DO NOT leave the device unsupervised for a long period during functioning.
- DO NOT expose yourself for a long period to the airflow generated by the device because it can cause damage to your health.
- If the fan must be stored for a long period and is not used regularly, place the fan in its original packaging in a dry place.
- When you use it for the first time after a long period of inactivity, make sure the fan is clean and the motor blades turn freely (with the device not powered) without any restraint.

ASSEMBLING

1. Base
2. Main body
3. Control panel
4. Motor shaft
5. Oscillation knob
6. Safety screw
7. Front grille
8. Fan
9. Lock ring of the back grille
10. Back grille
11. Lock ring of the fan
12. Motor

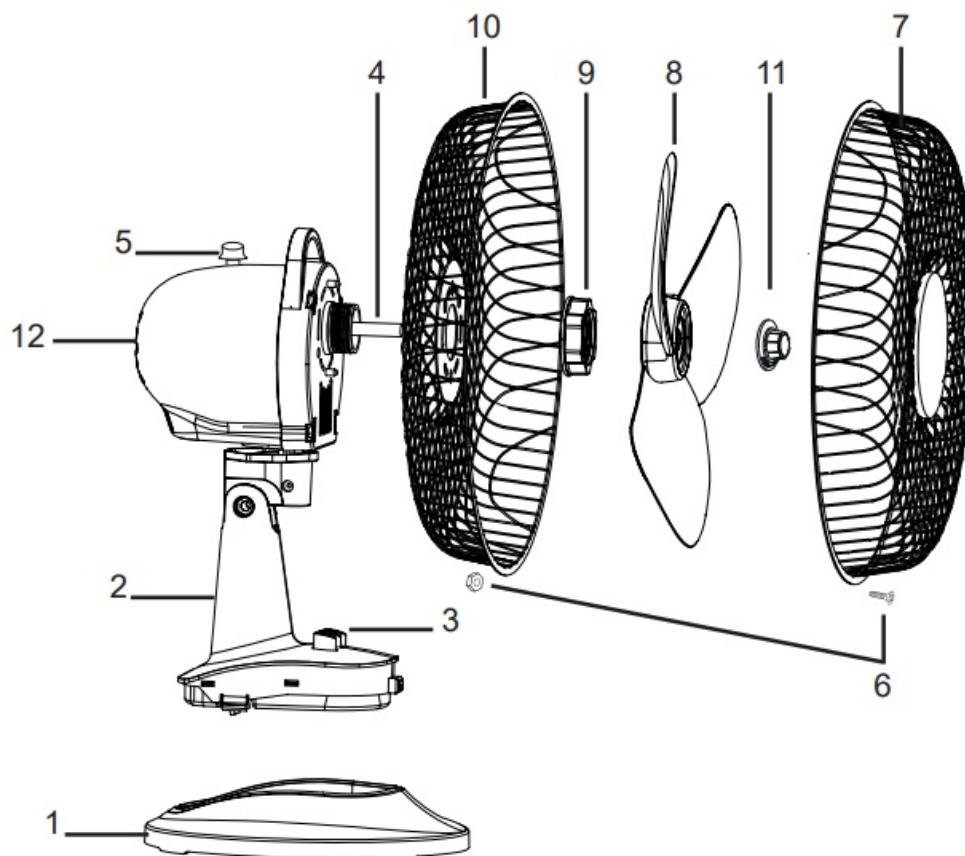

INSTRUCTIONS FOR USE

 
- Place the fan on a flat, dry, and stable surface, and insert the plug of the fan in a socket.
- Select the desired speed by pressing the buttons on the control panel (3): 0 = off 1 = minimum speed 2 = medium speed 3 = maximum speed

OSCILLATION:

- For the automatic oscillation from right to left press the knob (5) placed on top of the motor.
- To disable it, pull up the knob.

VERTICAL SLOPE:

You can vertically point the front of the fan choosing the desired angle. It is sufficient to move the front of the fan up or down according to the desired slope.

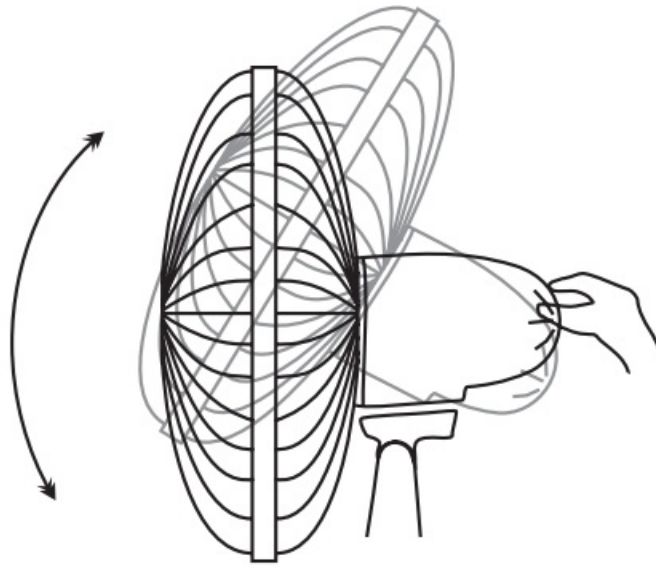

MAINTENANCE

- Before carrying out the regular cleaning operations turn off the fan and unplug it.
- Ensure that the fan is switched off from the supply mains before removing the guard.
- For external cleaning use a soft and dry cloth.
- DO NOT dip the device in water, or splash it with any other liquids.
- DO NOT use solvents or any other chemical products for cleaning it.
- Reinstall the guard after cleaning and before connecting the plug to the mains.
- When you do not use it, after cleaning it, store the fan in a dry place.

USER INFORMATION

PACKAGING

- In order to respect the environment, packaging material must be disposed of properly under separate collections.
- Check local regulations.

USER INFORMATION

- Implementation of Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE)", on reduced use of hazardous substances in electrical and electronic equipment, as well as to waste disposal.



- The symbol of the crossed-out wheellie bin on the equipment or on its packaging indicates that the product must be disposed of separately from other waste at the end of its service life.
- The user must therefore take the dismissed equipment to suitable separate collection centres for electrical and electronic waste.
- For more details, please contact the appropriate local authority.
- Suitable segregated collection of the equipment for subsequent recycling, treatment, or environmentally friendly disposal helps prevent damage to the environment and to human health and encourages the re-use and/or recycling of the materials that make up the equipment.

- Abusive disposal of the product by the user shall result in the application of administrative fines under the laws in force.

GUARANTEE

 
 
 
 
Terms and Conditions

 
 
 
- The guarantee is valid for 24 months.
- This guarantee applies only if it has been duly filled in and is submitted with the receipt showing the date of purchase.
- The guarantee covers the replacement or repair of parts making up the appliance that was faulty at the source due to manufacturing faults. After the guarantee has expired, the appliance will be repaired against payment.
- The manufacturer declines any responsibility for damage to persons, animals, or property due to misuse of the appliance and failure to observe the directions contained in the instructions.

Limits

- All rights under this guarantee and any responsibility on our part will be voided if the appliance has been.
- mishandled by unauthorized persons
- improperly used, stored, or transported.
- The guarantee does not cover damage to the outward appearance or any other that does not prevent regular operation.
- If any faults should be found despite the care taken in selecting the materials and in creating the product, or if any information or advice is required, please contact your local dealer.


ASSEMBLING INSTRUCTION

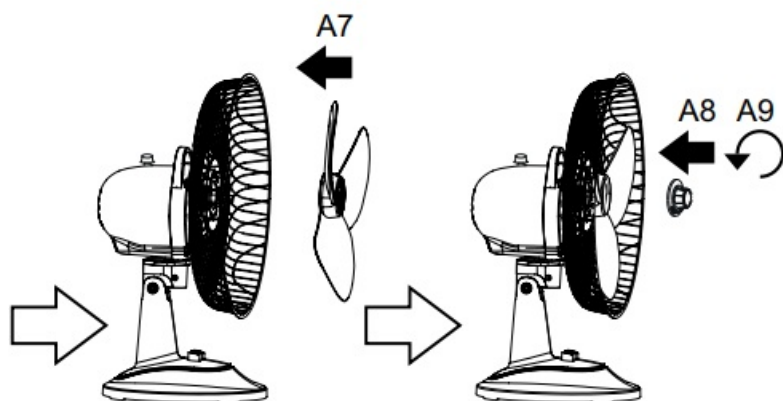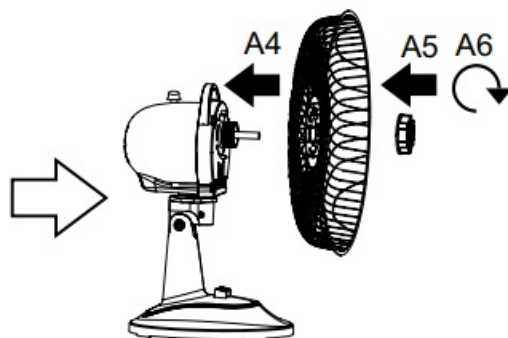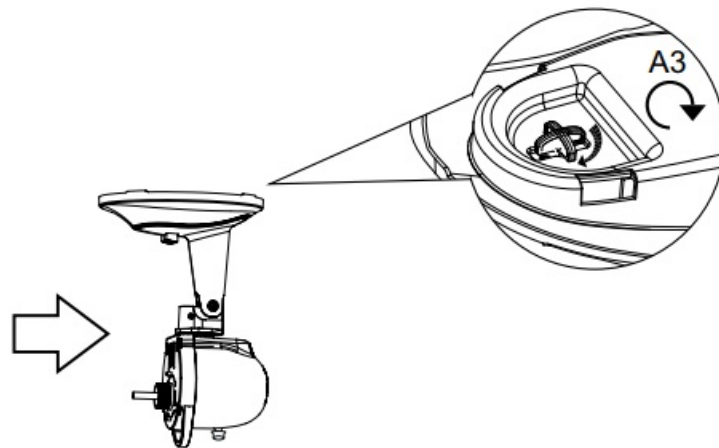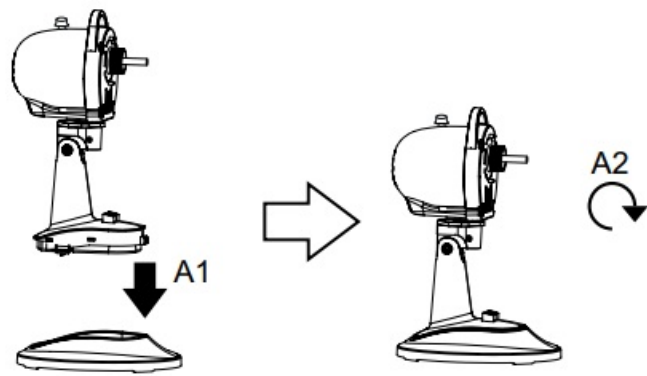

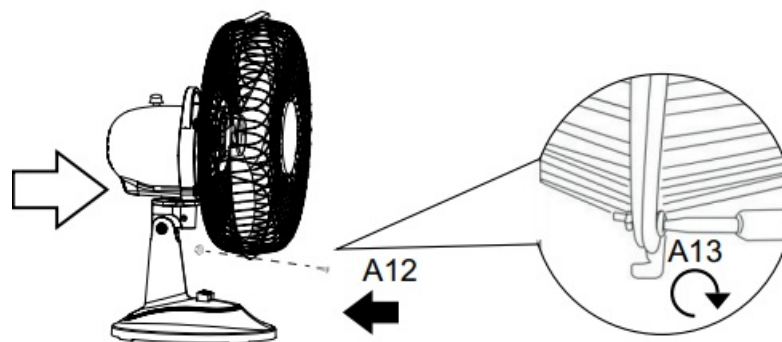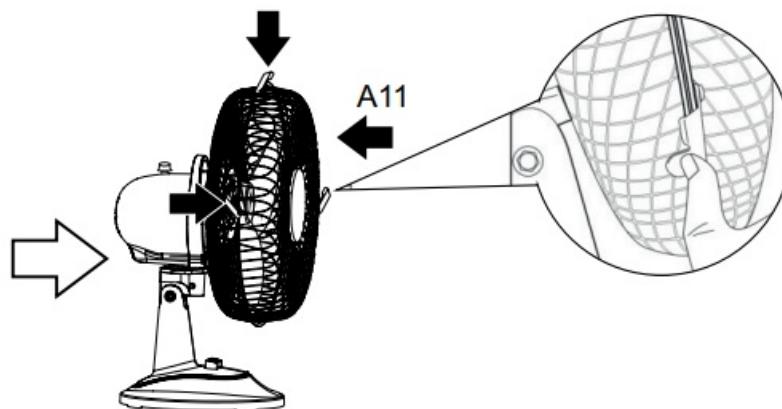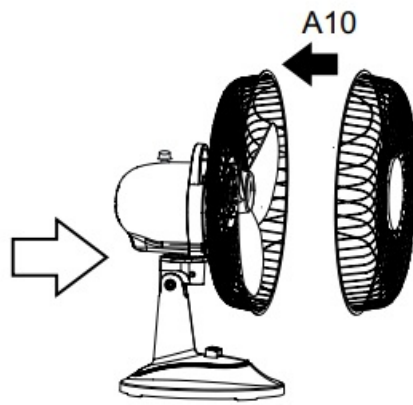

- **MULTIKOMPLEX BUDAPEST KFT.**
- tel.: +3614270325,
- 361 4270326;
- fax: +36-14270327
- www.multikomplex.hu
- Poly Pool S.p.A. Via Sottocorna, 21/B
- 24020 Parre (Bergamo) – Italy
- Tel. +39 035 4104000 r.a.
- Fax +39 035 702716
- <http://www.ardes.it>
- e-mail: polypool@polypool.it
- **MADE IN CHINA**
- 5ST30N-30W-30G-5ST40N-40W-40G.031123

Documents / Resources

	Ardes AR5ST30N Series Table Fan [pdf] Instruction Manual AR5ST30N, AR5ST30W, AR5ST30G, AR5ST40N, AR5ST40W, AR5ST40G, AR5ST30N Series Table Fan, AR5ST30N Series, Table Fan, Fan
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.