



ARKOSLIGHT 0434-01-62 BF Custom Surface Driver User Guide

[Home](#) » [ARKOSLIGHT](#) » ARKOSLIGHT 0434-01-62 BF Custom Surface Driver User Guide 

Contents


- [1 ARKOSLIGHT 0434-01-62 BF Custom Surface Driver](#)
- [2 BF CUSTOM SURFACE DRIVER OPTIONS](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

ARKOSLIGHT[®]

ARKOSLIGHT 0434-01-62 BF Custom Surface Driver



BF CUSTOM SURFACE DRIVER OPTIONS

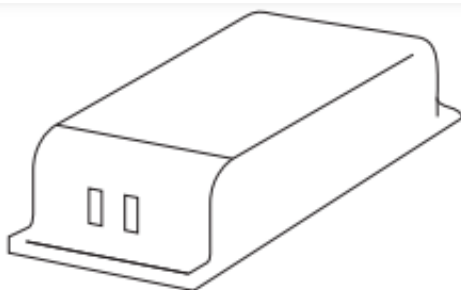

DRIVER OPTIONS

	P	V	D
0434-01-61*	100W	48 V	298 x 16 x 19mm
0434-01-62	150W	48 V	350 x 30 x 18mm

220
240 V~

* To be installed inside the track.


Calle N · Pol. Ind. EL OLIVERAL

46394 Ribarroja del Turia · Valencia (Spain)

Tel. +34 961 667 207 · Fax +34 961 667 054

info@arkoslight.com · www.arkoslight.com

Documents / Resources

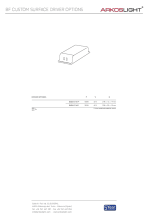	ARKOSLIGHT 0434-01-62 BF Custom Surface Driver [pdf] User Guide 0434-01-62 BF Custom Surface Driver, 0434-01-62, BF Custom Surface Driver, Custom Surface Driver, Surface Driver, Driver
---	---

References

- [A Home - Light & Life | Arkoslight](#)