



ARMSTRONG Remote Control Right Side Buttons User Guide

[Home](#) » [ARMSTRONG](#) » ARMSTRONG Remote Control Right Side Buttons User Guide 

Contents

- [1 ARMSTRONG Remote Control Right Side Buttons](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 REMOTE CONTROL](#)
- [5 REMOTE CONTROL ESSENTIALS](#)
- [6 USER INTERFACE](#)
- [7 SIMPLIFIED NAVIGATION](#)
- [8 CONTEXT AWARENESS](#)
- [9 Documents / Resources](#)

ARMSTRONG®

ARMSTRONG Remote Control Right Side Buttons



Product Information

The remote control is an essential accessory for controlling the EXP box. It has various buttons on both the right and left sides, as well as additional buttons on the front and back. The remote control allows users to navigate TiVo menus, watch live TV, access video-on-demand options, control volume and mute, and perform other functions.

The remote control features a total of 26 buttons, including buttons for selecting menu items, changing channels, recording shows, fast-forwarding, pausing, advancing in time increments, accessing Netflix, returning to the last channel viewed, and more. It also includes a microphone for voice commands.

To program the remote control, users need to press the TiVo Home button, followed by the left arrow button (#18), and select MENU > REMOTE SETTINGS. Further instructions for pairing the remote can be found inside the user manual or instructions.

Product Usage Instructions

1. To control your EXP box with your voice, make sure to pair your EXP voice remote correctly with your EXP box. Usually, the remote is paired when you insert the batteries. However, if you experience difficulty using voice commands, you may need to re-pair it.
2. Press the TiVo Menu button and go to Settings > Remote Settings to pair your remote with your box.
3. Press and hold the TiVo button and BACK button simultaneously until the activity light at the top of the remote illuminates.
4. Release the buttons. The activity light will flash slowly and then flash quickly.

For more information and troubleshooting tips, visit [OneWire.Help/Stream](https://www.onewirehelp.com/stream).

REMOTE CONTROL



LEFT SIDE BUTTONS

RIGHT SIDE BUTTONS ON BACK

1. **TIVO HOME** Takes you to the TiVo Home® screen, the starting point for all TiVo features and settings
2. **TV PWR** If programmed, turns your TV on or off
3. **INPUT** Selects the input your TV displays (such as DVD player, game system)
4. **BACK** Goes back to the previous screen (in certain apps)
5. **VOLUME AND MUTE**
If programmed, control the volume on your TV or A/V receiver
6. **GOOGLE ASSISTANT** Press to use Google Assistant for Voice Search
7. **GUIDE** Takes you to the program guide, where you can find shows to watch or record
8. **PLAY** Starts playing a show from the My Shows list
9. **REWIND** Rewinds a show. Press up to three times for three speeds
10. **STOP** Stops Playback and returns to previous UI Screen.
11. **REPLAY** Repeats the last eight seconds of the show. Press and hold to jump to the beginning of a show
12. **A, B, C, D** Sort and filter views. Activate the Talking Guide. Look for the on-screen tips. Starts Start Over where available
13. **CLEAR** Removes display of info banner or program guide and deletes titles from My Shows or To Do list

RIGHT SIDE BUTTONS

LEFT SIDE BUTTONS ON FRONT

14. **LIVE TV** Watch live TV, use it to cycle through the tuners
15. **INFO** Shows the info banner while watching Live TV. Press again to make it disappear
16. **OK/SELECT** Choose menu items. When watching Live TV, press to bring up the Trick Play menu
17. **EXIT** Leave your current viewing
18. **ARROWS** Use these buttons to navigate the TiVo menus. In live TV, press UP for the one-line guide, DOWN to see full info banner, LEFT for Trick Play menu, and RIGHT for Trick Play menu
19. **CHANNEL UP/DOWN** Change the channel and page up or down while in the program guide or TiVo menus
20. **RECORD** Starts recording the show you're watching, or sets up a recording for a show selected in the program guide
21. **FAST-FORWARD** Fast-forwards through a show. Press up to three times for three speeds
22. **PAUSE** Freezes a show. Press again to resume playing
23. **ADVANCE** Moves forward in 30-second increments. Shift the grid guide 24 hours ahead.
24. **ON DEMAND** Takes you to the main screen for video-on-demand options
25. **NETFLIX** Quick one-click access to Netflix
26. **ENTER/LAST** Returns to last channel viewed in Live TV

To program your remote, press the TiVo Home button then press the left arrow button (#18) and select MENU () > REMOTE SETTINGS.

See inside for more details on pairing your remote.

For more EXP tips, go to Channel 888 or visit [OneWire.help](#)

Visit



[OneWire.Help/Stream](#)

for more information and troubleshooting


REMOTE CONTROL ESSENTIALS

PAIRING

To control your EXP box with your voice, you must use an EXP voice remote that is paired correctly with your EXP box. Usually, the remote is paired when you insert the batteries, but if you are having trouble using voice commands, you may need to re-pair it.

1. TiVo Menu/Settings/Remote Settings. Pair your remote with your box.
2. Press and hold the TiVo button  and BACK button  simultaneously until the activity light at the stop of the remote illuminates.
3. Release the buttons. The activity light will flash slowly, then flash quickly five times.

VOICE COMMANDS


To issue a voice command, press and release the Google Assistant® button  and speak naturally into the remote. You'll see results from Google®, with additional results from the EXP service.

Here are some things you can do with voice:


- Search or browse: Say "Find Modern Family" or "Show me some action movies." HINT: Add on to your initial command to get more specific. For example, after the command, "Show me some action movies," you could add "Just the ones with Bruce Willis."

- Launch an app: Say “Launch Netflix.”
- Go to a TiVo menu screen: Say “Take me home” or “Show me the Guide.”

TIPS & TRICKS

- Press the TiVo button  once to go to the Home screen.
- While watching live TV or a recorded show, use your remote to bring up QuickView panels. UP shows you a mini guide; DOWN displays the Info Bar and Home menu.
- Channel Up/Down does more than change the channel!
- It also pages up or down through lists of shows or menu items.
- TalkBack is a voice guidance feature available free to EXP customers.
- It speaks the text on your screen making navigation of on-screen services and functions easier for customers with visual disabilities.
- Press TiVo/Settings/Device Settings/Device Preferences/Accessibility/ TalkBack = On or Off

USING THE VOICE REMOTE CONTROL

With EXP’s voice remote capabilities, you can find shows, sports, and movies by simply telling EXP what it is you want to watch. To start your search, just press and release the Google Assistant button  and speak into your voice remote. EXP does the rest. With voice remote, you can also change channels, launch apps and navigate the User Interface.

SEARCH Just say it, and EXP finds it. You watch it!

USER INTERFACE

- **Launch screens “Guide” “Home”**
Opens the screen with just your voice command.
- **Launch Apps “Launch Netflix”**
Launches the corresponding app.

SIMPLIFIED NAVIGATION

You never need to know what number a channel is, how to get to certain screens, or how to find content to play or record. With one command, you can accomplish any of this from any screen, bypassing many clicks, screens, and potential frustration!

- **Station title search “Watch FX” “HGTV”**
Even though there are hundreds of channels in most lineups and multiple versions of every channel, you don’t need to scroll through screen after screen to tune to the right station
- **Voice activated scrolling “Show me movies on tonight”**
When many results are available, you aren’t limited to a single screen. This makes it very simple for you to navigate without requiring a wake-up word.
- **Rewind or fast forward “Fast forward 1 minute” “Rewind 10 seconds”**
Rewind or fast forward by saying a specific amount of time.

CONTEXT AWARENESS

You can say something inaccurate but still receive the right response!

Speech to text error correction “Tom Thanks” (auto correct to Tom Hanks)

Corrects misspellings that might come through from the Automated Speech Recognition service, auto-correcting to your most likely intent.

Visit [OneWire.Help/Stream](https://onewire.help/stream) for more information and troubleshooting.

Visit

[OneWire.Help/Stream](https://onewire.help/stream) for more information and troubleshooting

Documents / Resources



[ARMSTRONG Remote Control Right Side Buttons](#) [pdf] User Guide

Remote Control Right Side Buttons, Remote Control Side Buttons, Right Side Buttons, Side Buttons, Right Buttons, Buttons