

## ARMYTEK C2 WG Multi Flashlight



# ARMYTEK C2 WG Multi Flashlight Instruction Manual

[Home](#) » [ARMYTEK](#) » ARMYTEK C2 WG Multi Flashlight Instruction Manual 

### Contents

- 1 ARMYTEK C2 WG Multi Flashlight
- 2 FAQ
- 3 Before use
- 4 CHARGER INSTRUCTIONS
  - 4.1 CHARGER COLOR INDICATION
- 5 WARRANTY AND SERVICE
- 6 Contact
- 7 Documents / Resources
  - 7.1 References



ARMYTEK C2 WG Multi Flashlight



## FAQ



### Frequently Asked Questions

- **Q:** What kind of batteries are recommended for the WIZARD C2 WG flashlight?
  - **A:** Branded 18650 Li-Ion batteries without PCB (unprotected) up to 70mm long are recommended for optimal performance.
- **Q:** How can I tell if the flashlight is fully charged using the magnetic charger?
  - **A:** When the charger shows a solid green light, it indicates that the charging is finished.
- **Q:** What should I do if the charger shows an orange blinking light?
  - **A:** Clean the tailcap and threads of the flashlight parts, and try using a different power source to resolve the issue.

Thank you for choosing the products of Armytek.

### Before use

**Before use:** Tighten the tailcap as far as it can go.

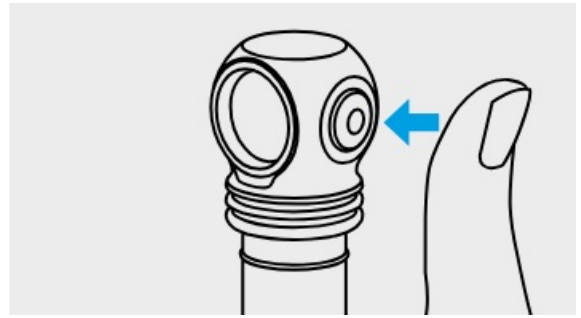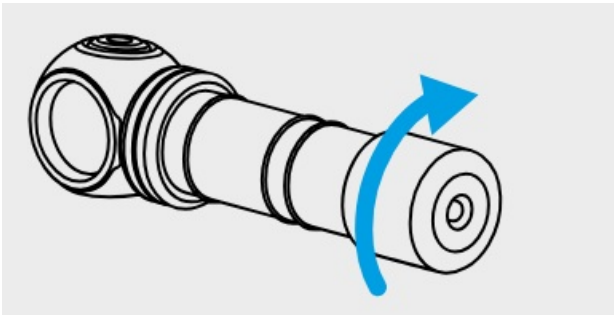

#### In OFF state:


1. **1 click:** To turn on the last used mode.
  - **Press and hold:** To turn on Firefly mode of the last used light. Keeping button pressed will start cycling through modes of the chosen light. Release to select.

#### In ON state:

1. **1 click:** To turn off the flashlight.
  - **Press and hold:** To start cycling through modes of the chosen light. Release to select.
2. **2 clicks:** To switch between white and green light in any mode.
3. **Add/Remove Strobe modes.** Unscrew the tailcap to 1/4 while the flashlight is off, press the button, tighten the tailcap while keeping the button pressed and then unscrew it again.
4. **Lock-out function.** Unscrew the tailcap to 1/4 for protection from accidental switching on.

## CHARGER INSTRUCTIONS

### HOW TO CONNECT THE MAGNETIC CHARGER

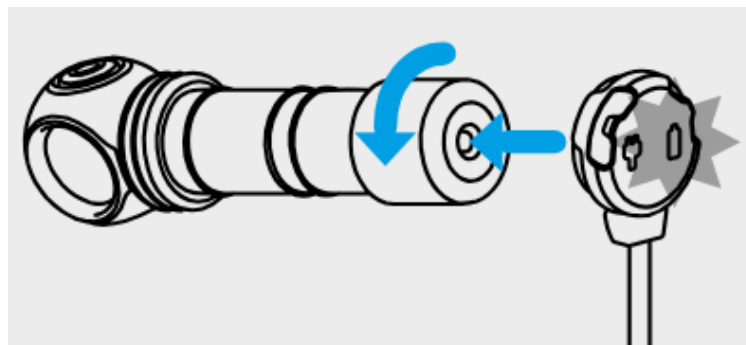

- Unscrew the tailcap to 1/4 of a circle and adjust the magnetic charger to the tailcap.

### CHARGER COLOR INDICATION

#### Charger not plugged in:

- **Green** — device is in waiting mode.

#### Charger plugged in:

- **Green blinking** — evaluation of battery voltage.
- **Red blinking** — unscrew the tailcap to 1/4 for charging.
- **Orange blinking** — clean the tailcap and the threads of the flashlight parts, use a different power source.
- **Red** — charging with rated charging current is going on.
- **Orange** — USB power source voltage is too low, charging current is reduced.
- **Green** — charging is finished.

## WARNINGS

- For effective operation of the flashlight we recommend branded 18650 Li-Ion batteries without PCB (unprotected) no more than 70 mm long.
- The flashlight can get hot in Turbo and Strobe modes quickly and discharge the battery with high current. Don't leave it without your attention as very bright light might heat objects and cause fire.
- For storage or transportation of the flashlight in a pocket or a bag it is necessary to activate the lock-out function to ensure protection from accidental switching on.
- It is forbidden to charge the battery inside the flashlight when the ambient temperature is below 0 °C.

## WARRANTY AND SERVICE

Armytek provides free warranty repairs for 10 years (excluding batteries, chargers, mounts, holders, switches and connectors, which have 2-year warranty) from the date of purchase if there is a document confirming the purchase. The warranty does not apply to magnets, silicone covers of connectors and buttons, silicone installation rings and holders, clips, silicone grips, holsters, lanyards, O-rings and pads, Velcro tapes. The warranty also does not extend to damage during:

1. Improper usage.
2. Attempts to modify or repair the flashlight by nonqualified specialists.
3. Application in chlorinated, contaminated liquids or seawater.
4. Immersion into liquids in case of broken leakproofness.
5. Exposure to high temperatures and chemicals, including the liquids from defected batteries.
6. Usage of low-quality batteries.

## Contact

### Armytek Worldwide / Representative in EU

- Germany, 10551 Berlin, Jonasstraße 6
- +1 (206) 785-95-74, +49 (30) 3119-68-00
- [service@armytek.com](mailto:service@armytek.com)
- [www.armytek.com](http://www.armytek.com)

Specifications are subject to change without notice.

Scan to view full manual



---

## Documents / Resources



[ARMYTEK C2 WG Multi Flashlight](#) [pdf] Instruction Manual  
C2 WG Multi Flashlight, C2 WG, Multi Flashlight, Flashlight

## References

- [User Manual](#)

### [Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.