



ARRIS MP2000 Universal Remote Control User Manual

[Home](#) » [Arris](#) » ARRIS MP2000 Universal Remote Control User Manual

Contents [[hide](#)]

- 1 User Manual
 - 1.1 ARRIS MP2000 Universal Remote Control
- 2 Overview
- 3 Installing Batteries
- 4 Functional Key Chart
- 5 PROGRAMMING DEVICE CONTROL
- 6 Searching for a Device code
- 7 Checking the Codes
- 8 Volume Control
- 9 Troubleshooting
- 10 SETUP CODES FOR TVS
- 11 Additional Information
- 12 Related Posts

User Manual





ARRIS MP2000 Universal Remote Control

Overview

The ARRIS MP2000 2 device Universal remote control is designed specifically for the ARRIS MEDIA PLAYER. This remote control also contains a universal TV and Audio library and is programmable to operate the Volume and Power of your TV or Audio device.

This remote requires 2 “AA” Alkaline batteries (included) and simple programming of your TV or Audio device. For best results, please read all instruction in this user manual before attempting to program your TV and/or Audio device.


Installing Batteries

1. Pull back the remote control's battery cover and remove it.
2. Insert the two (2) supplied AA batteries according to the + and – marks in the battery case.
3. Push the battery cover back into place.
4. Test the unit by pressing any button.
5. If batteries are inserted correctly, the Power button will flash red.

NOTE: When batteries need replacement, the remote control will stop operating. Replace the old batteries with

new “AA” alkaline batteries.

Functional Key Chart

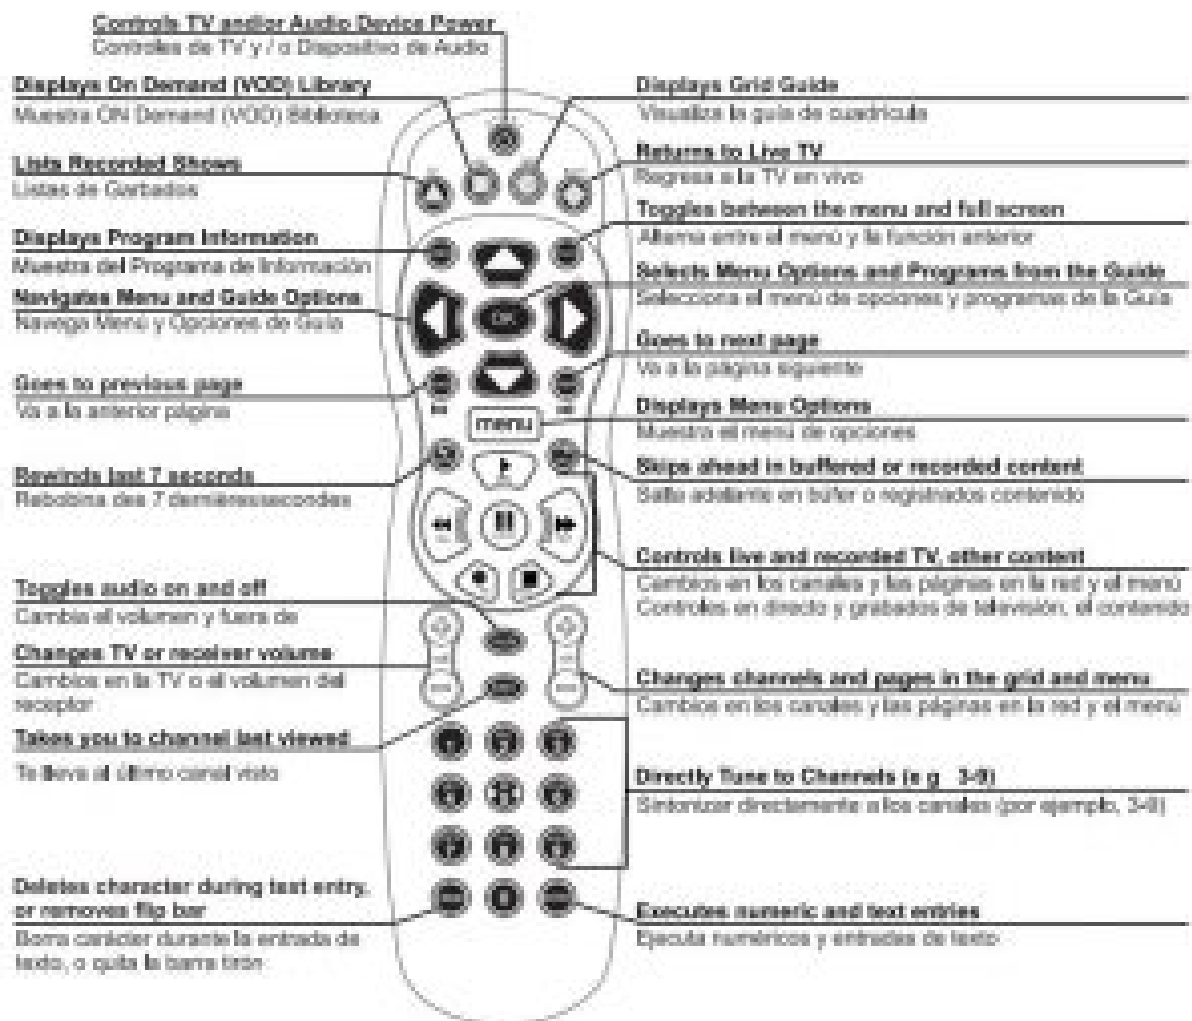

PROGRAMMING DEVICE CONTROL

Use the following instructions to program the remote for a TV and/or Audio device.

1. Turn on the TV you wish to control.
2. Locate the code for your TV among the Manufacturer's Codes on the back of this user manual. Brands are listed in alphabetical order with the most popular codes listed first.
3. Press and hold in the MENU and OK buttons until the Power button flashes twice and release both buttons.
4. Enter in the first 5 digit code for your brand of device. The Power button will flash twice. **NOTE:** If the red light emits one long flash, the remote has timed out or the code was not entered correctly. Repeat steps 3 – 4 entering the same code.
5. Aim the remote at the TV and press the Power key. If the TV turns off you have found the correct code. If the TV does not respond repeat steps 2-5 trying each code listed for your brand of TV. If none of the codes work, refer to “SEARCHING FOR A CODE”.

6. Repeat steps 2 through 5 to program in your Audio device.

NOTE: Depending on which device(s) you have programmed, the last device programmed will be the volume control source. See "VOLUME CONTROL" to change this setting.

TV Code:



--	--	--	--	--

Audio Code:

--	--	--	--	--

Searching for a Device code

If the Brand of your TV or Audio device is not listed in the code list, try searching for your code.
1=TV and 3=Audio

1. Turn on the device you wish to control.
 2. Press and hold in the MENU and OK buttons until the Power button flashes twice and release both buttons.
 3. Enter in 9 – 9 – 1.
 4. Press digit 1 to search for a TV code, or Press digit 3 to search for an Audio device code. The Power button will flash twice after the 1 or 3.
 5. While pointing the remote control at the device, press and release the CURSOR UP  button until the device turns off. (Note: You may need to press CURSOR UP  numerous times).
- NOTE:** In the search mode, the remote control will send IR codes from its library to the target device.
6. When the device turns off, press OK to lock in the code for that device. The Power button will flash twice.

Checking the Codes

If you have set up the remote control using the Searching For Your Code procedure, you may need to find out which five-digit code is operating your TV or Audio device. Perform the following steps after setting up your TV or Audio device to find out which five-digit code operates your TV or Audio device.

1. Press and hold in the MENU and OK buttons until the Power button flashes twice and release both buttons.
 2. Enter in 9 – 9 – 0 – A to find the TV code or 9 – 9 – 0 – B to find the Audio device code. The Power button will flash twice.
 3. To view the code for the first digit, press 1 once. Wait 3 seconds and count the number of times the light under Power flashes (e.g., 3 flashes =3) and write down the number in the left most TV or Audio Code box (at end of this section).
- NOTE: If a code digit is "0", the red light will not flash.
4. Repeat step 3 four more times for the remaining digits. Use 2 for the second digit, 3 for the third digit and 4 for the fourth digit and 5 for the 5th digit. Finish writing down the code in the TV and Audio Code boxes (at end of

this section).

TV Code:

--	--	--	--	--

Audio Code:

--	--	--	--	--

Volume Control

The ARRIS MP2000 can be configured to control the volume through any programmed device. Depending on how you configured the remote, will depend on where the volume is controlled.

When programming the remote for a TV and/or Audio device, the last programmed device will be the volume source. This setting can be changed at any time with the following sequence(s)

Volume Control Through TV

1. Press and hold in the MENU and OK buttons until the Power button flashes twice and release both buttons.
2. Enter in 9 – 9 – 3 – 1 (The Power button will flash twice).

Volume Control Through AUDIO

1. Press and hold in the MENU and OK buttons until the Power button flashes twice and release both buttons.
2. Enter in 9 – 9 – 3 – 3 (The Power button will flash twice).

RESETTING TV and AUDIO CODES

To reset the remote control to factory settings use the following instructions.

1. Press and hold in the MENU and OK buttons until the Power button flashes twice and release both buttons.
2. Enter in 9 – 9 – 9 – 9. The Power button will flash twice.

Troubleshooting

PROBLEM:	During programming, the Red Light displays one long blink.
SOLUTION:	An invalid entry has occurred. Check the code to be entered and try programming again.
PROBLEM:	The red light under the power key does not flash when a button is pressed.
SOLUTION:	Try replacing the batteries.
PROBLEM:	Tried all of the codes listed for my brand of device and none of the codes worked.
SOLUTION:	Try the CODE SEARCH method or go to www.urcsupport.com for model based look-up.

SETUP CODES FOR TVS

SETUP CODES FOR TVS

A-Mark	10003
Accutlan	11803
Action	10873
Admiral	10093, 10463, 10179
Advent	10761, 10817, 11933
Adventura	10046
Aiko	10092
Aiwa	10032, 10701, 11362, 11955
Akai	10812, 11675, 10030, 10672, 11207, 11385, 11676, 11888, 11689, 11692, 11935, 12232
Akron	10179
Albatron	10700, 10843
Allide	10672
Ambassador	10177
America Action	10180
Anam	10180
AOC	10030, 10003, 10019, 10052, 11089, 11365, 11580, 12014, 12087
Acnni	11623
Apex Digital	10743, 10879, 10765, 10890 11217, 12397
Archer	10003
Astar	11531, 11738
Audinac	10180

Digistar	11585
Digital Lifestyles	11765
Disney	11965, 12152
Dumont	10017, 10019
Durabrand	10463, 10180, 10178, 10171 11034, 10003, 11665
Dwin	10747
Dynex	12049, 11463, 11758
Electroband	10000
Electrograph	11755, 11623
Electrohome	10463, 11670, 11672
Element	11987, 12183
Emerson	11864, 10154, 10451, 10236, 10463, 10180, 10178, 10171, 11961, 11997, 11963, 11944, 11911, 11905, 11665, 10623, 10262, 10280, 10179, 10177, 10039, 10019
Emprex	11422, 11765
Encore	10876, 11474
Emission	10030, 10813, 11365, 12014, 12087
Epson	11122
ESA	10812, 10171, 11944, 11963
Fisher	10154, 10159
Flex/vision	10713
Fujitsu	10809, 10179, 10186, 10663, 10653
Funai	10000, 10180, 10171, 10179,

Audiovox	10451, 10180, 10062, 12513, 12413, 11952, 11951, 11937, 11868, 11803, 11769, 11766, 11284, 10875, 10846, 10802, 10713, 10623, 10003	11904, 11963	
Aventura	10171	Futuretech	10180
Axon	11937	Gateway	11755, 11756
Baysonic	10180	GE	10047, 10051, 10451, 10178, 10021, 10027, 10282, 10747, 11907, 11922
Belcor	10019	GFM	10171, 11665, 11963, 12167
Bell & Howell	10154, 10016	Gibraltar	10017, 10030, 10019
BenQ	11032, 11315	Go Video	10886, 11623
BGH	10876	GoldStar	10178, 10030, 10019, 10039, 10056
Blue Sky	11254	GPX	10179
Bradford	10180	Gradiente	10053, 10056
Brillan	11007	Grundig	10672, 10683
Brodwood	10019	Grumpy	10180, 10179
Broksonic	10236, 10463, 10003, 11905, 11911, 11935	H & B	11366
Bytesign	11309	Haler	11034, 10768, 11748, 12494
C&M	10700	Hallmark	10178
Cadia	11283	Hanns.G	11783
Candle	10030, 10046, 10056, 10186	Hannspree	11348, 11745, 11783
Carnivale	10030	Harley Davidson	10179, 11904
Carver	10054	Harman/Kardon	10054
Casio	11205	Harvard	10180
CCE	10623	Haverly	10093
Celebrity	10000	Hewlett Packard	11494, 11088, 11089, 11101
Celera	10785	Himitsu	10180
Champion	11362	Hicense	10748, 11314, 11660, 12089, 12365
Changhong	10785	Hitachi	11145, 10145, 10016, 10056, 10096, 10679, 10797, 11345,

Cineral	10451, 10092
Citizen	10060, 10030, 10092, 10039, 10046, 10056, 10186, 10280, 11669, 11671, 11672, 11935
Claron	10180
Classic	11984
Coby	11634, 12306, 12315, 12326, 12340, 12344, 12345, 12347, 12348, 12351, 12580
Commercial Solut.	10047
Concerto	10056
Contec	10180
Craig	10180
Crosley	10000, 10054
Crown	10180, 10039, 10672
Crown Mustang	10672
CTX	10700
Curtis	11200, 11326, 12352, 12466
Curtis Mathes	10047, 10054, 10154, 10451, 10093, 10060, 10030, 10145, 10166, 11661, 10016, 10039, 10056, 10466, 10747, 11569
CXC	10180
Cytron	11326
Daewoo	10154, 10451, 10092, 11661, 10019, 10039, 10623, 10661, 10672
Daytron	10019
Dell	11264, 11080, 11178
Delta	11369
Denon	10145
Diamond Vision	11996, 11997

	11904
HP	11454, 11066, 11069, 11101
Hyundai	10849, 11219, 11294
I-inc	11746
Ico	11286, 11603, 11665, 11664, 11990
Infinity	10054
Initial	11603, 11990
Insignia	12049, 11423, 10463, 10171, 11264, 11326, 11385, 11517, 11660, 11785, 11892, 11963 12417
Inteq	10017
IURTRIS	12189
IRT	10451, 11661
IX	10877
Janeil	10046
JBL	10054
JCB	10000
JCM	12189, 12256
Jensen	10761, 10617, 11299, 11326, 11933
JVC	10463, 10053, 10731
Kaypani	10052
KDS	11687
KEC	10180
Kenwood	10030, 10019
Koto	10054, 10706
KLH	10765
Koss	10046
KODG	12279

Konica	10632, 10638, 10707, 11365, 11939
Kost	11262
Kreisen	10875, 11474
KTV	10180, 10030, 10039, 10280
LG	11423, 10017, 10178, 10030, 10056, 10700, 10856, 11178, 11325, 11934
LiteOn	10088
Lloyd's	11904
Logik	10016
Luce	11031
Lumen	10058
LXI	10047, 10054, 10154, 10178, 10747
M&S	10054, 10236
MAG	11678
Magnavox	11454, 11755, 10054, 10051, 10030, 10171, 10706, 12597, 12372, 11930, 11963, 11944, 11931, 11904, 11525, 11365, 11254, 11198, 10802, 10396, 10187, 10186, 10179, 10096, 10020
Magnin	11907
Majestic	10016
Marantz	11454, 10054, 10030, 10854, 11398, 11714,
Matsushita	10250
Maxent	11755, 11211, 11714, 11757
MB Quar	11868
Megapower	10700
Megatron	10178, 10145, 10003
Memorex	10154, 10463, 10150, 10178, 10016, 10179, 10877, 11665, 11670, 11860, 11911, 11934

Polaroid	10766, 12120, 12117, 12063, 11789, 11787, 11786, 11762, 11687, 11595, 11385, 11341, 11328, 11327, 11326, 11316, 11314, 11286, 11276, 11262, 10865
Portland	10451, 10092, 11661, 10019, 10039
Prima	10761, 10817, 11785, 11933
Princeton	10700, 10717
Prism	10051
Proscan	10047, 10030, 10466, 10747, 11922, 12147, 12256
Proton	10178, 10003, 10052, 10466
Proview	11687
Pulsar	10017, 10019
Pyle	11200
Quasar	10250, 10051, 10165, 11934
RadioShack	10047, 10154, 10180, 10178, 10030, 10019, 10039, 10056, 10165, 10747, 11904
RCA	12434, 10047, 10051, 10093, 10060, 11661, 10016, 10019, 10090, 10679, 10747, 11907, 11922, 11953, 11968, 12746
Realistic	10154, 10180, 10178, 10030, 10019, 10039, 10056, 10165
RevolutionHD	11623
Runco	10017, 10030, 11286
Sampo	11755, 10030, 10039, 10052
Samsung	10812, 10060, 10178, 10030, 10019, 10039, 10056, 10587, 10766, 10814, 11959
Sansux	10039
Sansel	10451
Sansui	10463, 10171, 10165, 11670,

MGA	10150, 10178, 10030, 10019, 11907
Micro	11436
Midland	10047, 10017, 10061, 10039, 10747
Mitek	11603, 11990
Minut	10021
Mitsubish	11250, 10063, 10150, 10178, 10019
Monivision	10700, 10843
Motorola	10093
MTC	10060, 10030, 10019, 10056
Multitech	10180
NAD	10156, 10178, 10056
Nakamichi	11463
Nasa	11996
NEC	10030, 10019, 10056, 11398, 11797
NetTV	11755
Nexus Electronics	12183
Nikko	10178, 10030, 10092
Niko	11581
Nimbro	12104
Noblix	10430
Norcent	10748, 10824, 11089, 11365, 11590, 11591
Norwood Micro	11286, 11296
Noshi	10018
NTC	10092
NuVision	11657, 12518
Olevia	11610, 11144, 11240
Onwa	10180
Optimus	10250, 10154, 10188, 11924
Optoma	10887, 11348

Optonica	10093, 10185
Orion	10236, 10463, 11463, 10178, 11905, 11911
Panasonic	11460, 10250, 11457, 10051, 11924
Park	12104
PCI	11474
Penney	10047, 10156, 10051, 10060, 10178, 10030, 10003, 10018, 10019, 10021, 10027, 10039, 10747, 11907
Philco	10054, 10463, 10030, 10145, 10171, 11661, 10019, 10020, 10096, 10179, 10187, 10786, 11665, 11911, 11963
Philips	11454, 10054, 11744, 11981, 12372, 12597
Pilot	10030, 10019, 10039
Pioneer	11457, 10168, 10879, 11260, 11398
Planar	11496

	11882, 11904, 11911, 11935
Sanyo	10054, 10154, 10088, 11362, 11907
Scopline	10878, 11217, 11360, 11599, 12506
Scimitar	10019
Scotch	10178
Scott	10236, 10180, 10178, 10019, 10179, 11711
Seers	10047, 10054, 10158, 10154, 10178, 10171, 10056, 10179, 10747, 11007, 11904
Semivox	10180
Semp	10156
Sharp	10093, 10039, 10165, 10386, 10854, 12495
Sharper Image	11950
Sheng Chia	10093
Shogun	10019
Signature	10054, 10016
Signal	11262
Simpson	10186, 10187
Skyworth	11799
Sole	11031, 11368, 11623, 12075, 12076
Sony	10810, 10000, 11685, 11904
Soundesign	10180, 10178, 10179, 10186
Sova	11952
Soyo	11746, 11824, 11826
Spectricon	10003
Spectronic	11687
Squareview	10171
SSS	10180, 10019
Starlite	10180
Studio Experience	10843

SunBrite	11420, 12337
Superscan	10093, 10864, 01944
Supra-Macy	10046
Supreme	10000
SVA	10748, 10687, 10788, 10865, 10871, 10872, 11963
Sylvania	11864, 10054, 10030, 10171, 10020, 10096, 10187, 10587, 11314, 11665, 11931, 11944, 11963
Symphonic	10180, 10171, 11904, 11944
Syntax	11610, 11144, 11240
Tandy	10093
Tatung	10003, 11101, 11286, 11288, 11361, 11756
Technics	10250, 10051
Technol Ace	10179
Techview	12004
Techwood	10051, 10003, 10056
Teknika	10054, 10180, 10150, 10060, 10092, 10016, 10019, 10039

	10056, 10179, 10186
Telefunken	10056
Thomas	11904
TMK	10178, 10056, 10177
TNO	10017
Tophouse	10180
Toshiba	11524, 10156, 10154, 10093, 10060, 10003, 11325, 11343, 11369, 11935, 11959, 12006
Television	10039
TruTech	11665, 11723, 12066
TvS	10463
Universal	10027
US Logic	11286
Vector Research	10030
Venturer	11665
VEOS	11007
Victor	10053
Vidikon	10054, 11398
Vidtech	10178, 10019
Viewsonic	11755, 10797, 10857, 10864, 10885, 11330, 11365, 11576, 11627, 11742, 12014, 12087
Viking	10046
Viore	11207, 11684, 11811, 12104, 12352
Visart	11336
Vizio	11758, 10864, 10895, 11756
Wards	10000, 10047, 10054, 10017, 10156, 10154, 10051, 10180, 10060, 10178, 10030, 10187, 10186, 10179, 10165, 10096, 10056, 10016, 10027, 10021, 10020, 10019, 10018

Denon	32867, 31360, 30176, 31142, 32279
Dynex	32971
Electrohome	32026
Fisher	31801
Garand	30463
Gateway	31517
Hamani/Kardon	30110, 30189, 30891, 31306, 32443
Hitachi	31273, 31801
Insignia	31030, 31077, 31751, 31850, 32126, 32169, 32175, 32929, 32966, 32472
Integra	31805, 30135, 31298
iSymphony	32018, 32258, 32442
JBL	30110, 31306
JVC	30074, 30531, 31495, 31871
Kenwood	31313, 30077, 30186
KLH	31380, 31412, 31428
Koss	31366
Lexicon	31076
LG	31293, 32284
Linn	30189
Magnavox	31189, 31269, 30189, 30391, 30531, 31089, 31514
Marantz	31189, 31269, 30009, 30189, 31089, 31289
McIntosh	31289
MCS	30009
Micromega	31189
Mitsubishi	31393
Musimagic	31089
Myriad	31189

Waycon	10158
Westinghouse	11712, 10451, 10885, 10889, 10890, 11217, 11282, 11300, 11577, 12499
White Westinghouse	10483, 11861, 11909
Wyse	11365
Yamaha	10030, 10019, 10797
Zenith	11423, 10000, 10047, 10017, 10483, 10176, 10030, 11145, 10145, 10062, 11661, 10016, 11325, 11365, 11904, 11911
Zonda	10003

SETUP CODES FOR AMP'S

Adcom	31100
Bose	30674
Denon	32134
GE	30078
Marantz	31862
Optimus	30395, 30603
Pioneer	30623
Polk Audio	32342
RCA	30623
Realistic	30395
Sony	30689
Soundesign	30078
Wards	30078
Yamaha	30354

SETUP CODES FOR TUNER'S

ADC	30531
Aico	30158, 30189, 30121, 31089, 31160, 31161
Alco	31388, 31641
Alkal	31512
Aico	31390
Altec Lansing	32695
AMC	31077
Amphion Media	31563
AMW	31563
Anam	31609
Apex Digital	31257, 31430, 31774
Arcam	31189, 30189
Audiotronic	31189
Audiovox	31390
B & K	30620
Bose	31229, 31841, 31933
Cambridge Sound	31370
Capetronic	30531
Carver	31189, 30189, 30121, 31089
Coby	31389
Curtis	30797, 31389
Deewoo	31250

NAD	31743
Nakamichi	31313, 30097, 31555
NexTech	31751
Norcent	31389, 31751
Nova	31369
Onkyo	31805, 30135, 31298, 32451
Optimus	31023, 30189, 30531
Orion	31366
Panasonic	31308, 31518, 30039, 30367, 31316, 31548, 31633
Philco	31390
Philips	31189, 31269, 32311, 30189, 30391, 30891, 31089, 31269
Pioneer	31023, 30176, 30531, 30630, 31384, 31935
Polaroid	31508
Polk Audio	30189, 31289
Proscan	31254
Quasar	30039
RCA	31023, 31809, 31254, 30531, 31390, 31511, 32041
Rio	31869
Samsung	31868
Sansui	30189, 31089
Sanyo	31251, 31489, 31801
Sharp	30186
Sherwood	31077, 31423, 31517, 31653, 32169
Sherwood Newcastle	32169
Sonic Blue	31868
Sony	31622, 30158, 31758
Stereophonica	31023
Tasc	30463, 31390, 31528
Technica	31308, 31518, 30039, 31633
Thorens	31189
Toshiba	31768

Venturer	31390
Victor	30074
Vizio	31517
Yamaha	32061, 30176, 30186, 30376, 31176, 31276, 31331, 31375, 31376, 31476, 32455, 32467, 32471
Zenith	30857, 31293

AUDIO ACCESSORY CODES

Altec Lansing	32720
B&W	32441
Denon	32502
Samsung	32609
Vizio	32454, 32695
Yamaha	32021, 32458
ZVOX	32302

Additional Information

This product does not have any user serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your ARRIS MP2000 Remote Control.

For help via the Internet, visit us at: www.urcsupport.com

Copyright © 2011 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without prior written permission of Universal Electronics Inc.

Read More About This Manual & Download PDF:

ARRIS MP2000 Universal Remote Control User Manual – [Optimized PDF](#)

ARRIS MP2000 Universal Remote Control User Manual – [Original PDF](#)

Questions about your Manual? Post in the comments!