



Arrowhead Alarm Products NANO-O1 Single Output Expander Module for ESL System Instructions

[Home](#) » [Arrowhead Alarm Products](#) » Arrowhead Alarm Products NANO-O1 Single Output Expander Module for ESL System Instructions 


Contents

- [1 Arrowhead Alarm Products NANO-O1 Single Output Expander Module for ESL System](#)
- [2 Learning Optional Input](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)





Arrowhead
Alarm Products

Arrowhead Alarm Products NANO-O1 Single Output Expander Module for ESL System

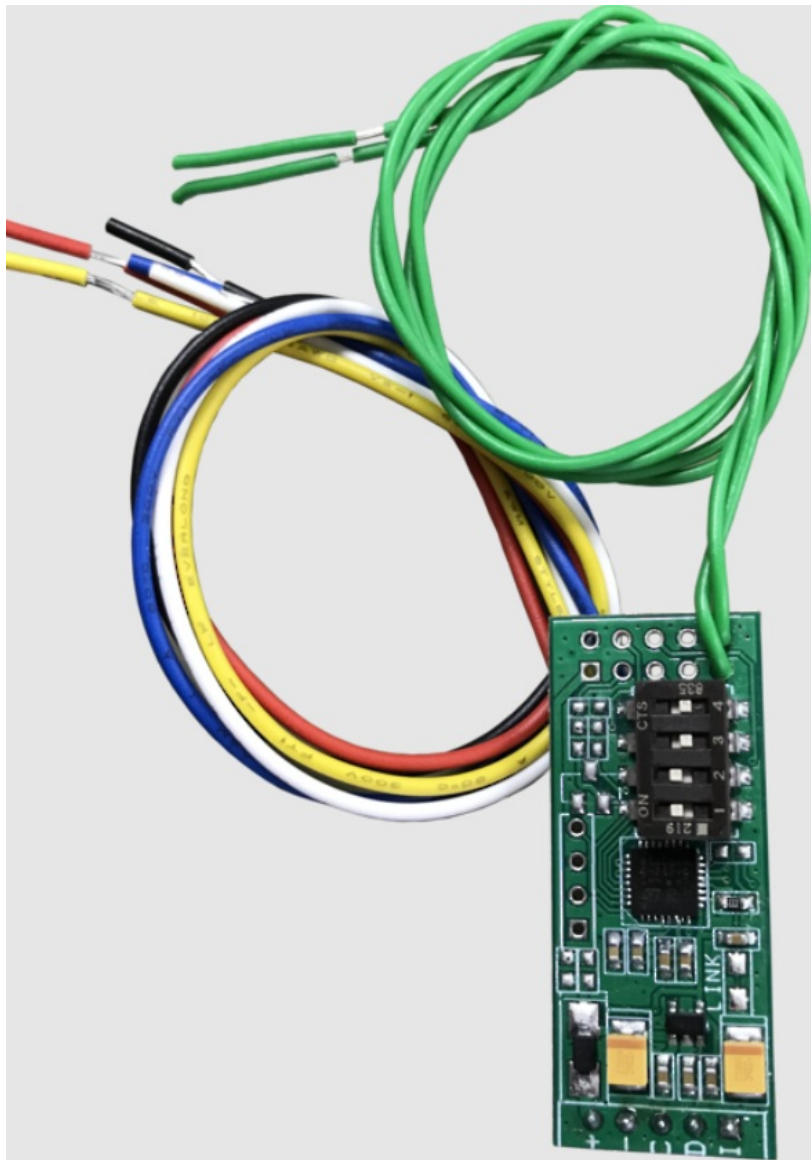

Single output expander module for ESL system.


This module wires directly onto the ESL keypad bus. It features a single clean normally open contact, rated to 30VDC 100mA, making this device ideal from controlling garage doors and gate controllers.

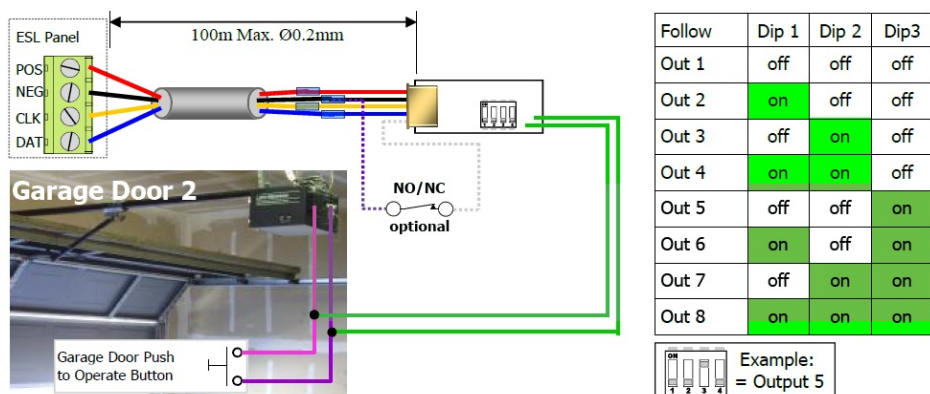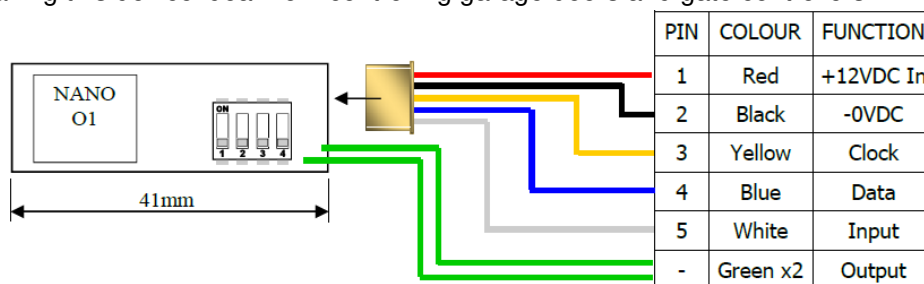


Learning Optional Input

For the Input of a NANO-O1 to work on the Elite system, you need to learn it in to a user slot. This is done at address 18. In Installer mode press <PROGRAM> <18> <ENTER> then choose the user slot <21-100> and <ENTER><ENTER>, trigger the device. (this should stop the keypad beeping.) i.e.

P 18 E 30 E E

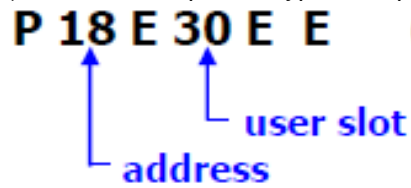

(device is now learnt in to user 30).

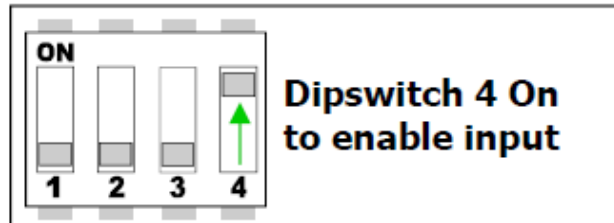

The User Slot can then be configure to, Trigger an output, Arm/Disarm, Panic Alarm. Please see the full programming manual for more information. www.aap.co.nz


ARROWHEAD ALARM PRODUCTS Ltd.

1A Emirali Road, Silverdale 0932, Auckland, NZ

Ph. 09 414 0085

www.aap.co.nz

Documents / Resources

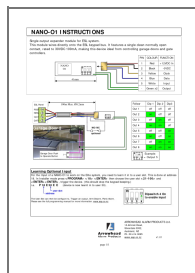	Arrowhead Alarm Products NANO-O1 Single Output Expander Module for ESL System [pdf] Instructions NANO-O1, Single Output Expander Module for ESL System, NANO-O1 Single Output Expander Module for ESL System, NANO-O1 Single Output Expander Module, Single Output Expander Module, Output Expander Module, Expander Module, Module
---	---

References

- [Intruder Alarm Systems, Security Products | Arrowhead Alarm Products](#)