



# Arrowhead Alarm Products PW KEYPAD-XK1 Access Systems Instruction Manual

[Home](#) » [Arrowhead Alarm Products](#) » Arrowhead Alarm Products PW KEYPAD-XK1 Access Systems Instruction Manual




PW KEYPAD-XK1 Access Systems  
Instruction Manual



#### Contents [ [hide](#) ]

- 1 PW KEYPAD-XK1 Access Systems
- 2 SPECIFICATIONS:
- 3 Advance Programming Options
- 4 USER OPERATION:
- 5 Documents / Resources
  - 5.1 References
- 6 Related Posts



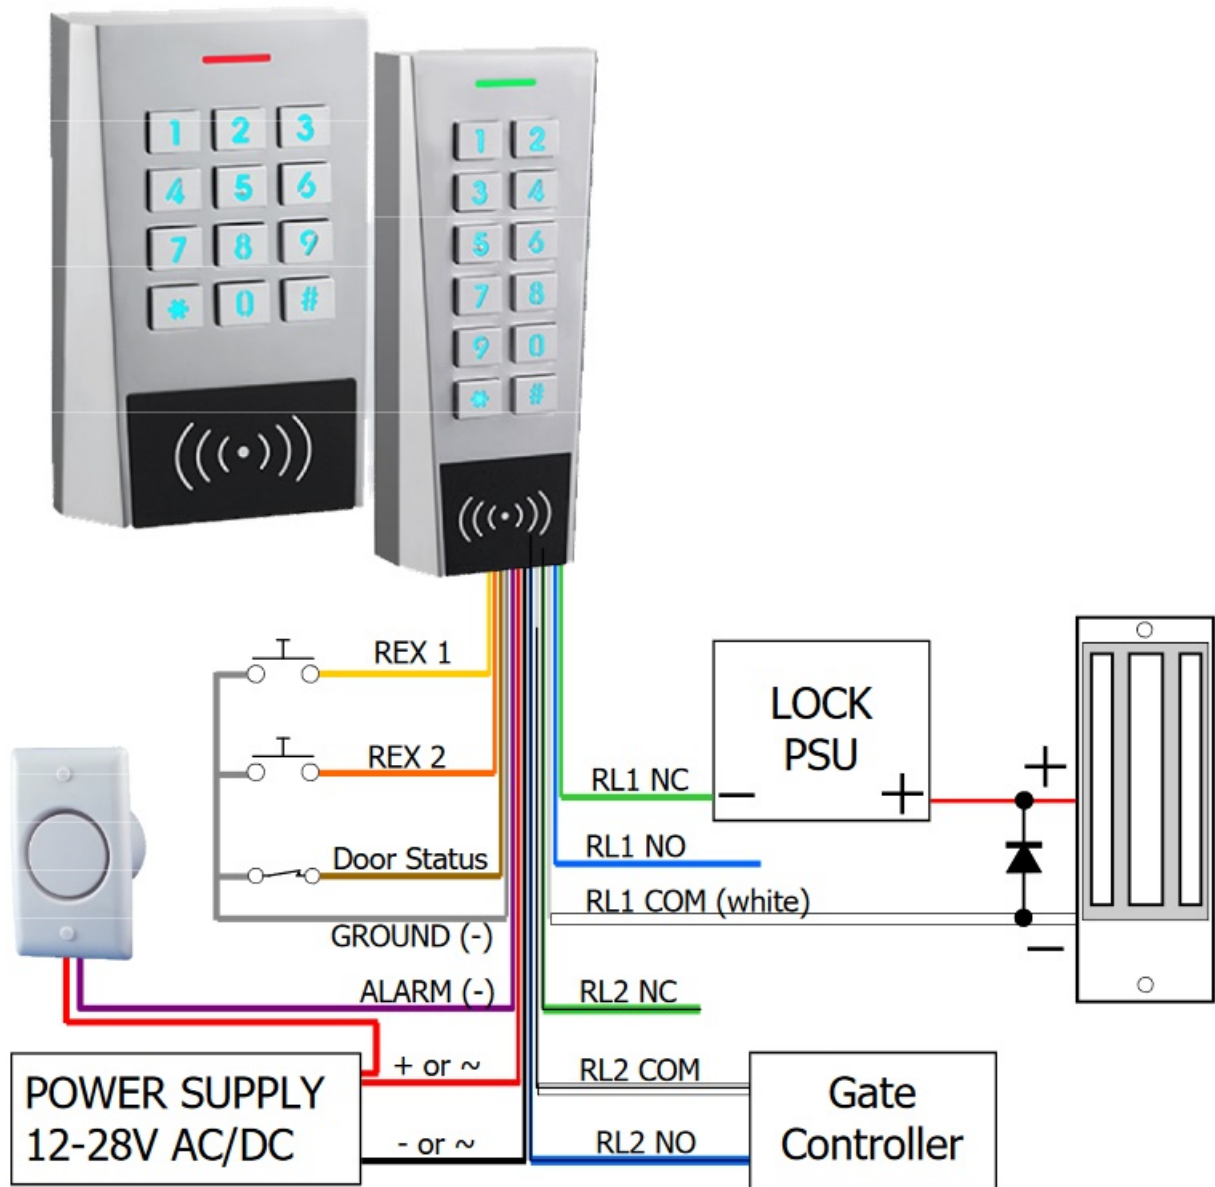


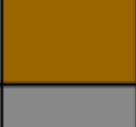







## PW KEYPAD-XK1 Access Systems



#### PW KEYPAD-XK1 & XK4

#### SPECIFICATIONS:



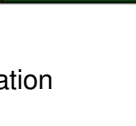





Voltage: 12-28V AC/DC  
 Standby Current: 50mA  
 Operating Current: 120mA  
 Up to 999 users code & tags  
 IP66 Rated  
 Built in Prox Reader  
 Relay Reset time: 1-300sec. or ON/OFF (toggle) Mode

RED		12-28V AD/DC INPUT	+ or ~
BLACK			- or ~
PURPLE		Alarm (Negative Out)	
YELLOW		REX Input for Relay 1	
ORANGE		REX Input for Relay 2	
BROWN		Door Input	
GREY		Ground (Negative)	
BLUE		Relay 1 Rated: 2 amp 30 volts	NO
WHITE			COM
GREEN			NC
BLACK & BLUE		Relay 2 Rated: 2 amp 30 volts	NO
BLACK & WHITE			COM
BLACK & GREEN			NC

Check [www.aap.co.nz/xk1](http://www.aap.co.nz/xk1) for more information

#### ENTERING ADMIN MODE:

 
To enter programming mode press \* (admin code) #.


i.e.         →   Orange Steady

Default admin code is: 888888.

The keypad will automatically time out after 30 seconds.


#### EXITING ADMIN MODE:



 Orange Steady


Then press:

└─ Address ─┘ └─ Delete All Codes ─┘

 Green Flash = User Slot Deleted Successfully


#### RELAY 1 RESET TIME: (default 5sec)

Relay 1 reset time can be set from 1 to 300 seconds. If 0 is selected the relay will toggle on & off.  
To change reset time you must be in Admin Mode.

 Orange Steady


Then press:   to

└─ Address ─┘ └─ Time in Seconds ─┘

 2 x Green Flashes = Timer Successfully changed


#### RELAY 2 RESET TIME: (default 5sec)

Relay 2 reset time can be set from 1 to 300 seconds. If 0 is selected the relay will toggle on & off.  
To change reset time you must be in Admin Mode.

 Orange Steady


Then press:   to

└─ Address ─┘ └─ Time in Seconds ─┘

 2 x Green Flashes = Timer Successfully changed

#### CHANGING ADMIN CODE:

To change Admin code you must be in Admin Mode first.

 Orange Steady


Then press:

└─ Address ─┘ └─ Enter Code (from 4 to 8 digits long) ─┘ └─ Repeat the New Admin Code ─┘

 2 x Green Flashes = Timer Successfully changed

### Advance Programming Options

For all programming addresses below you must first be in Admin Mode.

 Orange Steady

#### KEYPAD BACKLIGHT: (default always On)

Always On

└─ Address ─┘

Always Off

└─ Address ─┘

Auto Off after 60 seconds

└─ Address ─┘

Buzzer Volume: (default level 3)

**[6] [1] [0] to [5] [#]** (0= No sound - 5= Loudest)  
 [Address] [Volume Level]

DOOR BELL FEATURE: (Pressing 0 # triggers Relay 2) Note feature won't work if users are assigned to relay 2.

**[4] [1] [#] [1] to [3] [0] [0] [#]**  
 [Address] [Time in Seconds]

DOOR OPEN TOO LONG FEATURE: (requires reed switch connected between Brown & Grey wire).

**[7] [1] [1] [#] [1] to [3] [0] [0] [#] [1] or [2] [#] [1] or [2] [#]**  
 [Address] [Open Time in seconds] [On] [Off] [On] [Off]  
 Built-in Buzzer External Siren Connected to Purple Wire

**[7] [1] [2] [#]** = Feature Disabled  
 [Address]

DOOR FORCED FEATURE: (requires reed switch connected between Brown & Grey wire).

**[7] [2] [1] [#] [1] to [3] [0] [0] [#] [1] or [2] [#] [1] or [2] [#]**  
 [Address] [Alarm Time in seconds] [On] [Off] [On] [Off]  
 Built-in Buzzer External Siren Connected to Purple Wire

**[7] [2] [2] [#]** = Feature Disabled  
 [Address]

TAMPER ALARM:

**[7] [4] [1] [#] [1] to [3] [0] [0] [#] [1] or [2] [#] [1] or [2] [#]**  
 [Address] [Alarm Time in seconds] [On] [Off] [On] [Off]  
 Built-in Buzzer External Siren Connected to Purple Wire

**[7] [4] [2] [#]** = Feature Disabled  
 [Address]

**FACTORY RESET:**

This will erase timers, options and admin code. (note the user codes and tags are kept in memory)

Power Down the keypad, press and hold **[\*]** then Power Up the keypad (keeping the \* button pressed)

**👁️ — 4 x Green Flashes** = Keypad has successfully reset

**USER OPERATION:**

**[ ][ ][ ][ ][ ][ ][ ][ ][ ] [#]** = To Activate Relay  
 [User Code]

→ **👁️ — Green Solid (follow reset timer)** = Relay 1 Activated  
 → **👁️ — Blue Solid (follow reset timer)** = Relay 2 Activated  
 → **👁️ — Green & Blue Flashing** = Relay 1 & 2 Activated

SLOT	NAME	CODE	Relay 1	Relay 2	TAG
------	------	------	---------	---------	-----

---

001					
002					
003					
004					
005					
006					
007					
008					
009					
010					
011					
012					
013					
014					
015					
016					
017					
018					
019					
020					
021					
022					
023					
024					
025					
026					
027					
028					
029					
030					
031					
032					



033					
034					
035					
036					
037					
Admin					



Go to [www.aap.co.nz/xk1](http://www.aap.co.nz/xk1) for more wiring diagrams and Information.



Arrowhead Alarm Products Ltd.  
1A Emirali Road, Silverdale 0932,  
Auckland, NZ Ph. 09 414 0085  
[www.aap.co.nz](http://www.aap.co.nz)

v1.01

## Documents / Resources

	<p><a href="#">Arrowhead Alarm Products PW KEYPAD-XK1 Access Systems</a> [pdf] Instruction Manual PW KEYPAD-XK1 Access Systems, PW KEYPAD-XK1, Access Systems</p>
--	---

## References

- [Intruder Alarm Systems, Security Products | Arrowhead Alarm Products](#)
- [PW KEYPAD-XK1 - Access Systems - Access Control - Arrowhead Alarm Products](#)