



Arrowhead Alarm USB A-LINK USB Serial Connection Cable User Guide

[Home](#) » [Arrowhead Alarm](#) » Arrowhead Alarm USB A-LINK USB Serial Connection Cable User Guide

Contents [[hide](#)]

- 1 [Arrowhead Alarm USB A-LINK USB Serial Connection Cable](#)
- 2 [Product Information](#)
- 3 [Product Usage Instructions](#)
- 4 [Documents / Resources](#)
 - 4.1 [References](#)
- 5 [Related Posts](#)



Arrowhead Alarm USB A-LINK USB Serial Connection Cable



Product Information

The USB A-Link is a specialized cable designed by Arrowhead Alarm Products to connect their software to their hardware. It is a USB to Serial connection cable that facilitates communication between the AAP software and AAP hardware. The USB A-Link is compatible with various hardware devices, including ESL/ Elite-S/ Elite-S Lite/ Runner Elite 16D v6/ PW-16 Elite 8D/ Alert 8D/ PW8/ Elite-Lite Elite 64/ PW64 AC2W I P-Module/ ESL-2 APP POD. It is also compatible with various operating systems, including Windows 2000, XP, 7, 8, 10 & 11 (drivers may be required).

Product Usage Instructions

1. Go to <https://www.aap.co.nz/alink> and download the USB A-Link Driver.
2. Choose the driver that matches your operating system/CPU type and run the .exe file.
3. Once the installation is complete, plug the USB A-Link into one of your PC's USB ports.
4. Download the software for the product you wish to connect to from <https://www.aap.co.nz/alink>.
5. Once the software is installed, go to (setup/communication/source) and choose the (Direct via COM?) that has been assigned.
6. If you want to update your IP-MODULE & ESL-2 APP POD, go to <https://www.aap.co.nz/updater>.

The USB A-Link is a specialised Arrowhead Alarm Products USB to Serial connection cable. It allows AAP software to communicate with AAP hardware.

Compatible Hardware:

- ESL/Elite-S/Elite-S Lite/Runner
- Elite 16D v6/PW-16
- Elite 8D/Alert 8D/PW8/Elite-Lite
- Elite 64/PW64
- AC2W
- IP-Module/ESL-2 APP POD



Compatible Operating Systems: Windows 2000, XP, 7, 8, 10 & 11 (drivers may be required)

Setup and Installation:

1. go to (www.aap.co.nz/alink) and download the USB A-Link Driver
2. Choose the Driver to match your operating system/CPU type and run the .exe file.
3. When installation is complete, plug the USB D-Link into one of your PC's USB ports.
4. Now Install the software for the product you wish to connect to. Download the software from


(www.aap.co.nz/alink)

5. Once software is installed, go to (setup/communication/ source) and choose the (Direct via COM?) That has been assigned.
6. For Updating IP-MODULE
7. & ESL-2 APP POD please
8. **got to:**
9. www.aap.co.nz/updater.
10. For Instructions and
11. Software

ARROWHEAD ALARM PRODUCTS Ltd

- 1A Emirali Road,
- Silverdale 0932,
- Auckland, NZ
- Ph. 09 414 0085
- www.aap.co.nz.
- v1.0

Documents / Resources

 <p>USB A-LINK The USB A-Link is a specialized Arrowhead Alarm Products USB to Serial connection cable. It allows AHP software to communicate with AHP hardware.</p> <p>Compatible Hardware: ESL-2000 (ESL-2) Pod System ESL-2000 (ESL-2) Pod System ESL-2000 (ESL-2) Pod System ESL-2000 (ESL-2) Pod System ESL-2000 (ESL-2) Pod System ESL-2000 (ESL-2) Pod System</p> <p>Compatible Operating Systems: Windows XP, Vista, 7, 8, 10. A USB to Serial adapter may be required.</p> <p>Setup and Installation: 1. Download the USB A-Link USB Serial Connection Cable (USB A-LINK) from the Arrowhead Alarm Products website. 2. Connect the USB A-Link USB Serial Connection Cable (USB A-LINK) to your computer and the ESL-2000 (ESL-2) Pod System. 3. Follow the instructions in the USB A-Link USB Serial Connection Cable (USB A-LINK) User Guide to complete the setup.</p> <p>For Uploading of Modules: 1. Download the Arrowhead Alarm Products (AHP) software from the Arrowhead Alarm Products website. 2. Connect the Arrowhead Alarm Products (AHP) software to the USB A-Link USB Serial Connection Cable (USB A-LINK) and the ESL-2000 (ESL-2) Pod System. 3. Follow the instructions in the Arrowhead Alarm Products (AHP) software to complete the setup.</p>	<p>Arrowhead Alarm USB A-LINK USB Serial Connection Cable [pdf] User Guide</p> <p>USB A-LINK USB Serial Connection Cable, USB A-LINK, USB Serial Connection Cable, Connection Cable, Cable</p>
--	--

References

- [Intruder Alarm Systems, Security Products | Arrowhead Alarm Products](#)
- [IoT Updater](#)