



## Artemide Tizio MICRO Table Lamp Installation Guide


[Home](#) » [Artemide](#) » Artemide Tizio MICRO Table Lamp Installation Guide 

# Artemide®

TIZIO MICRO

Patent pending design : Richard Sapper

Apparecchio in classe II IP20

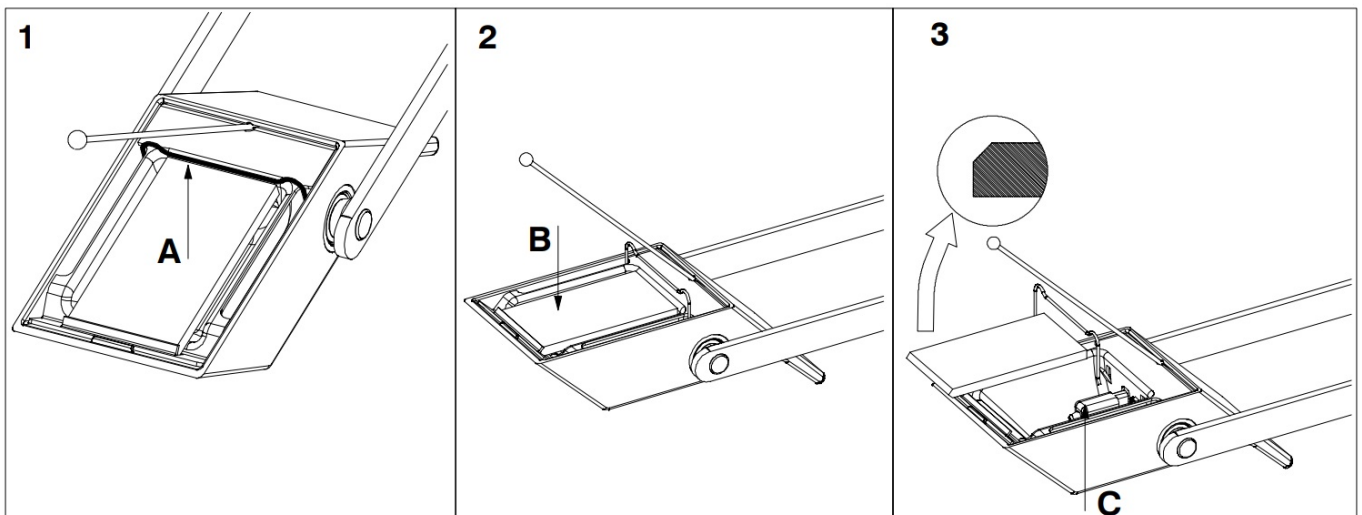

### Contents

- [1 Tizio MICRO Table Lamp](#)
- [2 General warnings for indoor light fittings.](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)
- [4 Related Posts](#)

**Note:**

Prior to any work on the Trailways disconnect the power.

**Caution:**

Only use lamp softhearted indicated on the tinplate.

ARTEMIS spa ARTEMIS does not accept any responsibilities should products be modification prior authorization.

**BULB REPLACEMENT**

Pull the spring A and remove from its housing.

Remove the glass B and replace the lamp C. Replacement

a similar one (base: G 4 frosted)press —fit it in the socket and make sure that it is properly placed.

Do not touch the lamp glass with your bare hands. Should this happen, clean it with some alcohol Reposition the cover glass B,insert the spring in the proper sea and push gently until it is fixed Attention: during this operation, check that the chamber of the cover glass B is positioned on the front side of the head and turned outwards.

Press the red switch button to turn it on or adjust the light intensity.

**Bulb:**

20W 12V HSG G 4 halogen bi- -pin frosted




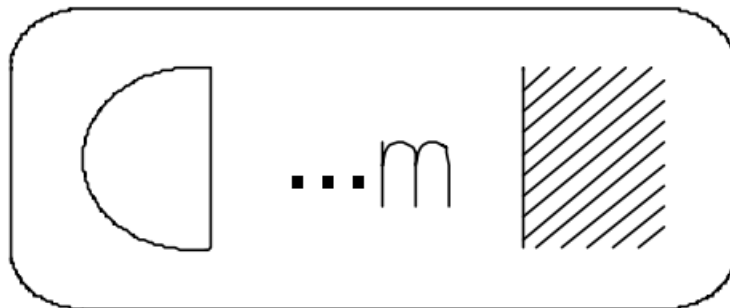
Use low pressure lamps only

**General warnings for indoor light fittings.**

The symbol indicates the suitability of fixtures to be mounted directly on normal inflammable surfaces. Fixtures without the above symbol are only suitable for installation on non- inflammable surfaces.

**All ARTEMIDE** products fall within the range of application of the European electromagnetic compatibility E.M.C. directive 89/336 and subsequent amendment 92/31 and 93/68, and/or the European low voltage directive B.T.

73/23 and subsequent amendment 93/68, meet the required specifications and bear "  " labelling.



The number enclosed within the symbol indicates the minimum distance in metres to which the objects to be illuminated should be placed.

The distance is measured on the axis of vision of the fixture from the fixture side or from the lamp nearer to the illuminated object.

For the replacement of the power supply cable, please contact ARTEMIDE service centre.

Artemide reserves the right to introduce all the technical and structural changes required for the improvement of the product.


**Attention:** This equipment is guaranteed only when used as indicated in these instructions. Therefore they should be kept for future reference.

In case of complaint, please quote number Cod Y503000637

# Artemide®

via Bergamo, 18- -20010 Pregnana Milanese (Milano)- -ITALIA

tel:93.51.81- -(a ricerca automatica)

telefax 02/93.59.02.54- -93.59.04.96 

## Documents / Resources



[Artemide Tizio MICRO Table Lamp](#) [pdf] Installation Guide

Tizio MICRO Table Lamp, Tizio, MICRO Table Lamp, Table Lamp, Lamp

## References

- [A. Artemide - Home](#)