

# AruNicho Bluetooth Earbuds ENC Noise Canceling for iPhone Android, Hi-Fi Stereo Sound Wireless Earbuds-Complete Features/User Instruction

Home » AruNicho Bluetooth Earbuds ENC Noise Canceling for iPhone Android, Hi-Fi Stereo Sound Wireless Earbuds-Complete Features/User Instruction



### **Contents**

- 1 AruNicho Bluetooth Earbuds ENC Noise Canceling for iPhone Android, Hi-Fi Stereo Sound Wireless Earbuds
- 2 Specifications
- 3 Introduction
- **4 HOW TO SETUP**
- **5 HOW TO RESET**
- **6 HOW TO CONNECT**
- **7 HOW TO RESET**
- **8 Frequently Asked Questions**
- 9 Related Posts

AruNicho Bluetooth Earbuds ENC Noise Canceling for iPhone Android, Hi-Fi Stereo Sound Wireless Earbuds



# **Specifications**

• BRAND: AruNicho

• EAR PLACEMENT: In Ear

· COLOR: White

• CONNECTIVITY TECHNOLOGY: Wireless

• FORM FACTOR: In Ear

DYNAMIC DRIVERS: 13mm
LISTENING TIME: 6 hours
BATTERY LIFE: 30 hours

• **BLUETOOTH**: 5.0

• WATERPROOF RATING: IPX5

# Introduction

With crystal clear treble and well-balanced bass, AruNicho Wireless earbuds with HD rendering technology produce audio quality that is CD-like. With 13mm dynamic drivers, you may listen to music whenever you want, anywhere. With the environmental noise canceling (ENC) system, you may make crystal-clear phone calls and enjoy amazing sound. You can use either earbud singly or in stereo mode. Once connected, you can easily switch between songs, accept or reject calls, and activate Siri with just one touch. It's ideal for exercise, working from home, and other activities. A full charge provides six hours of listening time. It has a Battery life of up to 30 hours is provided by the charging case, which can be recharged four times.

TWS Bluetooth earphones are small and incredibly light, making them ideal for running, sports, and gaming. It has Fast pairing and a solid connection between your device and wireless earphones are made possible by Bluetooth 5.0. You can Play games or watch movies while listening to great music with reduced latency. Simply take the

wireless earbuds out of the charging case, and pairing will take place.

### **HOW TO SETUP**

Pull down the phone's top shade on an Android device, then long-press the Bluetooth icon. It will immediately take you to the Bluetooth menu, where you may enable it and then start looking for devices. To link a pair of headphones, tap their name.

# **HOW TO RESET**

- On your Galaxy phone, first navigate to and launch the Galaxy Wearable app. Galaxy Buds Live, Galaxy Buds
   Pro, and Galaxy Buds.
- Reset the Watch settings by tapping it, then tap it one again to confirm.
- Tap About earphones on your Galaxy Buds.
- After selecting Reset, confirm by selecting Reset again.

### **HOW TO CONNECT**

- Put your headphones in pairing mode as a first step. Put your earbuds in pairing mode as a first step.
- Step 2: On your phone, go to Bluetooth Settings.
- Step 3: Look for new Bluetooth-enabled devices to scan for.
- Choose your device and connect in step 4...
- Play your preferred music in step five.

## **HOW TO RESET**

Touch and hold the sensors on both of your Samsung earphones simultaneously for at least 10 seconds. Place them in the charging case properly, and then wait inside for at least 30 seconds. Pair your earbuds with your device once more after 30 seconds to check if the problems have been resolved.

# **Frequently Asked Questions**

# How can I tell when my earbuds have finished charging?

When your AirPods Pro or AirPods (3rd generation) are charging (showing an amber light) or fully charged, you may check by tapping the case while it's on the charging pad (green light).

### . The MFB button: what is it?

The term "mob" stands for "multi-function button," which can be used to answer calls, pause or play audio, and start a voice command that will reply to your voice! The arrow on the back right side is for restarting the current track or going to a previous track, and the arrow on the front right side plays the next audio track.

# Why just one of my earbuds is playing music?

Depending on the audio settings on your headset, it might only play in one ear. So make sure the mono option is off in your audio properties by checking your audio properties. Make sure the voice levels on both earbuds are balanced as well.

# Why won't my phone and Bluetooth headphones pair?

If your Bluetooth devices aren't connecting, they probably aren't in pairing mode or are out of range. Try rebooting your devices or letting your phone or tablet "forget" the connection if you're experiencing persistent

Bluetooth connection issues.

# • On Bluetooth headphones, where is the power button located?

You are referring to the middle of the number "3." All of the functions are on the same side, which is fantastic. When connecting to your phone, the center button also serves as the "answer and hang up" button.

# · How are Bluetooth earbuds charged?

Close the charging case's cover after putting the earbuds inside. The battery LED within the charging case is red, yellow, or green when the lid is open to show the earbuds' current battery state. The earphones need about two hours to fully recharge.

# · Should I always have earbuds on hand?

When not in use, the case will charge both earbuds and keep them together. The majority of cases have a lithium-ion battery that keeps the earphones charging until they are fully charged. The earbuds should always be kept on hand just in case.

# · How do wire-free earphones function?

Wireless headphones function by radio or infrared signal pairing with the device you want to use. To facilitate connections for users, Bluetooth technology is used by many gadgets. Bluetooth-enabled devices may communicate and share data across incredibly short distances utilizing radio signals.

# How are genuine earbuds reset?

Place the two earphones in the charging case, open the top cover, and push and hold the touch areas of both earphones simultaneously for longer than five seconds. Until the reset is successful and the phone performs a Bluetooth search for the realme Buds Q.

### · How are TWS earbuds reset?

Take out the earphones from the case, then turn them off by pressing the buttons for a short period of time. Hold down the buttons on both earbuds for around 5 seconds starting with the earbuds in the OFF position. Approximately 5 seconds after turning white, the LEDs will switch off. Your earbuds will reset as a result.

Manuals+,