



---

[Home](#) » [Support](#) » **Asani A9 Rechargeable Portable Blender User Manual** 

**Contents** [ [hide](#) ]

- [1 Asani A9 Rechargeable Portable Blender](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 References](#)

# ASANI

**Asani A9 Rechargeable Portable Blender**



## INTRODUCTION

For active lifestyles, the Asani A9 Rechargeable Portable Blender is the ideal wellness partner. This stylish and small blender, which was introduced by Asani and costs only **\$16.99**, combines portability, performance, and ease of use into a clever package. It can make smoothies, shakes, juices, and even frozen fruits and nuts in 30 seconds thanks to its 20-oz capacity and strong 270-watt engine. It has a 4000mAh USB-rechargeable battery, Type-C charging, and an easy-to-use 12-LED battery status indicator, making it ideal for a life on the go. The dual-layer leak-proof cover keeps your beverages safe whether you're traveling, going to the gym, or camping, and the BPA-free construction guarantees safe, healthful blending. The blender breaks down into three components and is simple to clean. Asani is both practical and gift-ready because of its considerate additions, which include silicone straws, brushes, and a leather handle. Never before has wellness been so affordable, fashionable, or portable.

## SPECIFICATIONS

<b>Brand</b>	Asani
<b>Model</b>	A9
<b>Price</b>	\$16.99
<b>Color</b>	Black
<b>Capacity</b>	20 Fluid Ounces
<b>Material</b>	BPA-Free, Stainless Steel Blades
<b>Special Feature</b>	Compact, Leak-Proof, Dual Blending Modes
<b>Dimensions</b>	3.54" D x 3.54" W x 11.26" H
<b>Weight</b>	2.07 pounds
<b>Wattage</b>	270 Watts
<b>Voltage</b>	7.4 Volts
<b>Power Source</b>	Battery Powered (Rechargeable via USB Type-C)
<b>Battery Capacity</b>	4000mAh
<b>Speed Settings</b>	1-Speed with 2 Blending Modes (Soft & Tough Ingredients)
<b>Control Type</b>	Push Button
<b>Lighting</b>	12 LED indicators for battery status
<b>Portability</b>	Designed for travel, gym, camping

<b>Cleaning</b>	Dishwasher safe; disassembles into 3 parts; includes cleaning tools
<b>Included Accessories</b>	Leather handle, travel bottom cover, silicone straws, straw brush, cup brush, ice cube tray, blade cloth, charge cable, user manual
<b>Style</b>	Mini Blender
<b>Warranty</b>	Lifetime Warranty
<b>Recommended Uses</b>	Smoothies, shakes, juice, mixed drinks
<b>UPC</b>	610395676096


## WHAT'S IN THE BOX

- blender
- leather handle
- Travel bottom cover
- silicone straws
- straw brush
- cup brush
- ice cube tray
- blade cleaning cloth
- charge cable
- user manual

## FEATURES

- **Portable Convenience:** Designed for active lifestyles, this compact blender offers fresh smoothies wherever you are—be it the gym, work, or travel.

# 2-IN-1 VERSATILITY

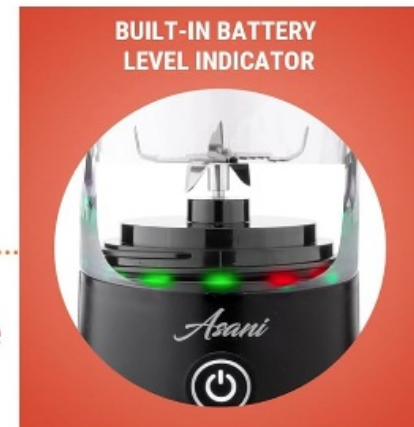

- **Dual Blend Modes:** Features two settings—one for soft fruits, another for tougher items like frozen berries or nuts.

## TWO BLEND MODES TO CHOOSE FROM

### MODE 1: BLEND

For soft ingredients



Fresh Fruit



Drink Powders



Vegetables



### MODE 2: PULSE

For tougher ingredients



Ice



Frozen Fruit



Nuts

- **Quick Blending:** Delivers smooth results in as little as 30 seconds thanks to its efficient motor.
- **Leak-Proof Design:** Includes a double-lock buckle system to prevent spills during transport.
- **Rechargeable Battery:** Equipped with a 4000mAh battery that charges via Type-C for convenient power on the go.



# CUT THROUGH ICE AND FROZEN FRUIT

WITH 270 WATTS OF POWER AT 18,000RPM



- **Battery Indicator Lights:** A ring of 12 LEDs shows battery level and operational status at a glance.
- **Durable Construction:** Built with stainless steel blades and BPA-free materials for long-lasting, safe use.
- **Compact Size:** With a 20 oz. Capacity and slim design, it fits easily in bags and cup holders.
- **User-Friendly Controls:** Simple push-button operation makes blending fast and hassle-free.
- **Stylish Finish:** Features a sleek black exterior with diamond-cut texture for a modern look.
- **Dishwasher Safe:** Easy-to-clean components are top-rack dishwasher safe (excluding the base).
- **Multipurpose Use:** Perfect for making shakes, smoothies, protein drinks, or even baby food.

# THE ULTIMATE PORTABLE BLENDER

*BLEND ON-THE-GO OR  
USE AS A BOTTLE*



- **Travel Accessories:** Includes a leather handle, bottom cover, and silicone straws for added portability.
- **Complete Kit:** Comes with useful extras like a straw brush, cup brush, blade cleaner, ice tray, and charging cable.
- **Ideal Gift Choice:** Packaged with care, this blender makes a thoughtful gift for health-conscious individuals.

## SETUP GUIDE

- **Unbox Carefully:** Remove the blender and accessories from the packaging and inspect for damage.
- **Charge First:** Fully charge the blender using the included Type-C cable before first use.



- **Understand the Modes:** Familiarize yourself with the two blending settings for different food types.
- **Check Blade Tightness:** Ensure the blades are securely in place before using.
- **Assemble Properly:** Attach the jar to the base, ensuring the lid is also tightly secured.
- **Avoid Overfilling:** Fill only up to the max line (20 oz.) to prevent overflow.
- **Cut Ingredients Small:** Chop fruits and vegetables into smaller pieces for better blending performance.
- **Use the Right Mode:** Use soft mode for bananas, hard mode for frozen or dense ingredients.
- **Hold Upright:** Always use the blender in an upright position during operation.
- **Secure Lid Before Blending:** Confirm the lid is properly locked to prevent leaks.
- **Press to Start:** Use the push-button control to begin blending.
- **Observe LED Lights:** Watch the LED indicators for battery and blending status.
- **Use Provided Tools:** Utilize the included brushes and cleaning cloths for setup and hygiene.
- **Store Accessories Neatly:** Keep all parts together for easy access when traveling.

## CARE & MAINTENANCE

- **Clean After Each Use:** Rinse the jar and blades immediately after use to prevent residue buildup.
- **Use Cleaning Tools:** Use the included brushes and cloth for thorough cleaning of the blades and jar.
- **Don't Submerge Base:** Never immerse the motor base in water; wipe it down with a damp cloth instead.
- **Air-Dry Fully:** Let all parts air dry completely before reassembling or storing.
- **Disassemble for Cleaning:** Separate the lid, jar, and base to clean

thoroughly after each use.

- **Avoid Abrasive Cleaners:** Use mild soap only; avoid harsh chemicals or scouring pads.
- **Dishwasher Safety:** Only the cup and lid are dishwasher-safe. Keep the base hand-washed.
- **Store with Lid Off:** When storing long-term, leave the lid off to prevent odors.
- **Charge Safely:** Always use the provided charging cable and avoid overcharging the battery.
- **Avoid Overuse:** Don't run the blender continuously for more than 1 minute to preserve motor life.
- **Inspect Regularly:** Check for cracks or loose parts and replace damaged components promptly.
- **Handle Blades Carefully:** The stainless-steel blades are sharp—handle with caution when cleaning.
- **Keep Vent Clear:** Ensure the air vents on the motor base are free of dust and debris.
- **Avoid Hot Liquids:** Do not blend boiling or very hot liquids to prevent pressure buildup.

## TROUBLESHOOTING

Issue	Possible Cause	Solution
Blender is not turning on	The battery is dead or not fully charged	Connect to a power source via U SB Type-C and charge fully
The motor starts, but the blades don't spin	Ingredients are too hard or packed too tightly	Reduce quantity; cut ingredients into smaller pieces
Blender stops mid-use	Safety lid not locked properly, or battery is low	Ensure the lid is tightly sealed and the battery is charged
Leaking from the lid	Lid or buckle not secured properly	Tighten all parts and ensure proper alignment

Issue	Possible Cause	Solution
Poor blending performance	Using the wrong mode or dull blades	Switch to high mode; clean or replace blades if needed
LED lights are not working	Faulty charging cable or battery error	Use a different cable; reset or recharge the unit
Strange noise during operation	Debris stuck in the blades or a loose base	Turn off, clean blades, and tighten base
Doesn't hold a charge	Battery degradation or charging issue	Replace battery if under warranty ; avoid overcharging
Blender smells like burning	Overloaded motor or continuous long use	Turn off immediately; let it cool; avoid prolonged use
Blades won't rotate after cleaning	Improper reassembly or misaligned parts	Reassemble correctly and check all connections

## PROS & CONS

### PROS

- Dual blending modes for soft and hard ingredients.
- Powerful 4000mAh battery with USB Type-C charging.
- Travel-friendly design with leak-proof buckles.
- Easy to clean and dishwasher-safe components.
- Budget-friendly and comes with useful accessories.

### CONS

- Single-speed blending limits custom textures.
- Not suitable for hot liquids.
- It can be noisy at full power.
- The battery takes several hours to fully charge.
- The blade cannot be removed for deep cleaning.

## **WARRANTY**

The Asani A9 Rechargeable Portable Blender is backed by a lifetime warranty from the manufacturer. This warranty covers defects in materials and workmanship under normal usage. Any issues arising from accidental damage, misuse, or unauthorized modifications are not covered. To claim, a valid purchase receipt may be required.

## **FREQUENTLY ASKED QUESTIONS**

What are the blending modes on the Asani A9 blender?

The Asani A9 has two blending modes: one for soft ingredients like bananas and berries, and another for harder items such as frozen fruit or nuts.

How is the Asani A9 blender powered?

The Asani A9 runs on a built-in 4000mAh rechargeable battery and charges via USB Type-C cable for convenient, cordless blending.

How can I check the battery level of the Asani A9?

The Asani A9 features 12 LED battery indicators on the base that display the real-time battery level and charging progress.

Why does my Asani A9 blender stop mid-blend?

The battery may be low, or the motor may be overloaded. Recharge the unit fully and avoid overfilling or blending solid ice chunks for extended time.

Why is the Asani A9 leaking during blending?

Check that the lid and base are tightened correctly. Ensure the silicone seals are clean and not damaged or misaligned.

Why is my Asani A9 not charging?

Confirm the USB Type-C cable is working and securely connected. Try another cable or adapter and inspect the charging port for debris.

Why does the blade of my Asani A9 spin slowly?

A low battery or overloaded jar may cause slow spinning. Recharge the unit fully and reduce the contents to improve performance.

## References

- [User Manual](#)

🔍 A9, Asani, Asani A9, B0CSQW2XCY, Rechargeable Portable Blender, user

📁 Asani manual

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name



Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.