




# Ascion RC-WM-108 Remote Control User Guide

[Home](#) » [Ascion](#) » Ascion RC-WM-108 Remote Control User Guide 

## Contents

- [1 Ascion RC-WM-108 Remote Control](#)
- [2 Remote Control Operation](#)
- [3 HEAD AND FOOT ADJUSTMENTS \(A,C\)](#)
- [4 ADDITIONAL REMOTE FEATURES](#)
- [5 TANDEM FEATURE](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

# Ascension

## Ascion RC-WM-108 Remote Control



## Remote Control Operation

- A. RAISE & LOWER HEAD SECTION \_\_\_\_\_
- B. FLAT \_\_\_\_\_
- C. RAISE & LOWER FOOT SECTION \_\_\_\_\_
- D. ZERO GRAVITY \_\_\_\_\_
- E. MEMORY POSITION 1 \_\_\_\_\_
- F. MEMORY POSITION 2 \_\_\_\_\_
- G. ANTI - SNORE \_\_\_\_\_
- H. HEAD MESSAGE INTENSITY \_\_\_\_\_
- I. STOP MESSAGE \_\_\_\_\_
- J. FOOT MESSAGE INTENSITY \_\_\_\_\_
- K. FULL BODY MESSAGE \_\_\_\_\_
- L. WAVE MESSAGE PATTERNS \_\_\_\_\_



### HEAD AND FOOT ADJUSTMENTS (A,C)

- Adjusts the head and foot sections to the desired positions.

### FLAT (B)

- Returns both head and foot to the flat position.

### ZERO GRAVITY (D)

- Allows your legs to be lifted to a position slightly above the chest, which enables blood flow to easily circulate back to the heart, thus reducing stress and fatigue.

### MEMORY POSITION PRESETS (E,F)

- You can store 2 personalized memory positions. Press and hold the Memory button for 5 seconds until the LED light flashes 3 times to store the setting. To recall a Memory Position, press the corresponding button.

**NOTE:** Do not hold the memory position for more than 5 seconds or the setting will overwrite.

### ANTI SNORE (G)

- Raises the HEAD slightly for easier breathing.

## **HEAD AND FOOT MESSAGE CONTROLS (H,J)**

- Turns on the corresponding message unit and slowly increases or decreases message intensity.

**NOTE:** The message feature is designed to automatically shut off after 30 minutes of continuous use.

## **MESSAGE STOP (I)**

- Press to stop all message features.

**NOTE:** The lowest setting will turn off the corresponding message unit.

## **FULL BODY MESSAGE (K)**

- Turns the Head and Foot Massage units on at the same time.

## **WAVE MESSAGE PATTERN (L)**

- Turns on both head and foot massage motors to 3 different wave presets.

**NOTE:** Any control button on the remote will interrupt and stop the FLAT, ZERO-G, Anti-Snore and MMemory Position presets.

## **REMOTE LOCKOUT FEATURE (A,B)**

- We created the remote lockout feature to help owners prevent unintended use of the base.

### **Activating Remote Lockout**

- At the same time, press and hold the HEAD UP and FLAT buttons for 3 seconds. The LED will flash twice to indicate activation. Pressing any buttons on the remote while in lockout mode will result in no movement from the power base.

### **Deactivating Remote Lockout**

- Repeat the same process, press and hold the HEAD UP and FLAT buttons at the same time for 3 seconds. The LED will flash twice to indicate deactivation. The remote and power base will work normally.

## **ADDITIONAL REMOTE FEATURES**

- The buttons are back-lit when a button is pressed, to aid the visibility of the remote in low light environments.
- Customers can control the remote without facing the receiver (best transmission range is within 30 feet or 10 meters).

- This Base uses a RF (Radio Frequency) remote control system.
- The included remote is already paired with your power base, so should be operational right out of the box. Please test some of the features to ensure functionality.
- Only replacement remote controls require pairing instruction on following pages.
- If you find that your remote is not paired with the bed, please follow those Bluetooth pairing instructions.

## **NOTE**

- This power base may have minor intermittent performance due to RF Interference. This is a normal operation of the power base and is not a defect.
- Please remember to recycle all electronics.

**NOTICE:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **IMPORTANT NOTE**

- To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted.
- Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

**NOTE:** This device complies with part 15 of the fcc rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including Minterference that may cause undesired operation.

## **TANDEM FEATURE**

If you want 2 sides to move in sync when using one remote (recommended for Split King/Cal King units) you can pair to both sides using the Tandem Feature. You can also pair two remotes to two sides, so that either remote can control both sides at the same time. You're remote should already be paired to one of the control boxes. Identify which one this is before you begin. You must pair to the second control box in order to use the tandem feature. Repeat this process if you want 2 remotes paired to both sides.

### **STEP 1**

- Press the FLAT button 3 times to enter Tandem Mode. You will see a solid green light on the remote to confirm.

### **STEP 2**

- Press and hold the pairing button on the second control box then press any button on the remote control.
- You are now paired to the secondcontrol box. The remote light will still be green.


### **STEP 3**

- To now control both sides in tandem, press the FLAT button 3 times. The remote light will now flash between red and green.

## TO CHANGE BETWEEN ONE SIDE AND TANDEM CONTROL

- To change between one side and tandem control, press the FLAT button three times, repeat this to toggle between sides and the Tandem Feature.

## Documents / Resources

	<p><a href="#">Ascion RC-WM-108 Remote Control</a> [pdf] User Guide RC-WM-108, RCWM108, VFK-RC-WM-108, VFKRCWM108, RC-WM-108 Remote Control, RC-WM-108, Remote Control</p>
---	--