

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fujifilm](#) /
- › [The Complete Guide to Fujifilm's X-T3 \(B&W Edition\) - User Manual](#)

## Fujifilm X-T3

# Fujifilm X-T3 Camera User Manual

Based on "The Complete Guide to Fujifilm's X-T3 (B&W Edition)"

## 1. INTRODUCTION TO THE FUJIFILM X-T3

This manual serves as a comprehensive guide to operating your Fujifilm X-T3 mirrorless digital camera. Drawing insights from "The Complete Guide to Fujifilm's X-T3," it aims to help you understand and utilize the full potential of your camera, from basic setup to advanced photographic techniques. The Fujifilm X-T3 is renowned for its outstanding image quality, robust build, and intuitive controls, making it a favorite among enthusiasts and professionals alike.



Image: The Fujifilm X-T3 camera, as featured on the cover of its comprehensive guide. This camera is known for its classic design and advanced imaging capabilities.

## 2. INITIAL SETUP

---

Before you begin capturing stunning images, it's essential to properly set up your X-T3 camera.

### 2.1. Battery and Memory Card Installation

- **Battery:** Open the battery compartment cover on the bottom of the camera. Insert the NP-W126S battery with the arrow facing inwards until it clicks into place. Close the cover securely.
- **Charging:** Connect the supplied USB cable to the camera's USB-C port and a USB power adapter. The charging indicator will light up. A full charge typically takes approximately 150 minutes.
- **Memory Card:** The X-T3 supports SD, SDHC, and SDXC memory cards. Open the memory card slot cover on the side of the camera. Insert the card with the label facing the front of the camera until it clicks. Close the cover.

### 2.2. Attaching a Lens

1. Remove the body cap from the camera and the rear cap from the lens.
2. Align the white dot on the lens with the white dot on the camera body.
3. Mount the lens by rotating it clockwise until it clicks into place.

### 2.3. Initial Settings

Upon first power-on, the camera will prompt you to set the date, time, and time zone. Use the selector buttons and the rear command dial to navigate and confirm your selections.

## 3. OPERATING THE CAMERA

---

Understanding the various modes and controls will allow you to capture diverse photographic scenarios effectively.

### 3.1. Exposure Modes

The X-T3 offers several exposure modes, accessible via the top dials:

- **Program AE (P):** Camera sets both aperture and shutter speed.
- **Shutter-Priority AE (S):** You set shutter speed, camera sets aperture. Ideal for controlling motion blur.
- **Aperture-Priority AE (A):** You set aperture, camera sets shutter speed. Ideal for controlling depth of field.
- **Manual (M):** You set both aperture and shutter speed. Offers full creative control.

### 3.2. Focusing

The X-T3 features advanced autofocus capabilities:

- **Single AF (AF-S):** Focus locks when the shutter button is pressed halfway. Suitable for stationary subjects.
- **Continuous AF (AF-C):** Focus continuously adjusts as long as the shutter button is pressed halfway. Ideal for moving subjects.
- **Manual Focus (MF):** Allows precise manual adjustment of focus using the lens's focus ring.

### 3.3. Video Recording

To record video, set the drive dial to the movie icon. Press the dedicated movie recording button to start and stop recording. The X-T3 supports 4K video recording at up to 60fps.

## 4. MAINTENANCE AND CARE

---

Proper maintenance ensures the longevity and optimal performance of your Fujifilm X-T3.

- **Cleaning the Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, a slightly dampened cloth can be used, followed by a dry wipe. Avoid harsh chemicals.
- **Lens Care:** Use a lens brush or blower to remove dust. For smudges, use a specialized lens cleaning solution and a microfiber cloth. Never touch the lens glass directly.
- **Sensor Cleaning:** While the X-T3 has a sensor cleaning mechanism, professional cleaning is recommended for persistent dust spots. Avoid attempting deep sensor cleaning yourself unless experienced.
- **Battery Storage:** When not in use for extended periods, store batteries in a cool, dry place, partially charged (around 50%) to prolong their lifespan.
- **Storage:** Store the camera in a dry, dust-free environment, ideally with desiccant packs to prevent mold and mildew, especially in humid climates.

## 5. TROUBLESHOOTING

---

Here are solutions to some common issues you might encounter with your X-T3.

Problem	Possible Cause / Solution
Camera won't turn on.	Check if the battery is charged and correctly inserted. Ensure the battery compartment cover is closed.
Images are blurry.	Verify focus mode (AF-S/AF-C/MF). Check shutter speed (too slow for handheld shooting). Ensure lens is clean.
Memory card error.	Reinsert the memory card. Try a different card. Format the card ( <i>note: this will erase all data</i> ).
Battery drains quickly.	Reduce screen brightness. Turn off Wi-Fi/Bluetooth when not in use. Limit continuous shooting. Consider purchasing spare batteries.
No image displayed on LCD/EVF.	Check the DISPLAY/BACK button. Ensure the lens cap is removed.

## 6. TECHNICAL SPECIFICATIONS (FUJIFILM X-T3)

---

Key specifications of the Fujifilm X-T3 camera:

- **Sensor:** 26.1MP APS-C X-Trans CMOS 4
- **Processor:** X-Processor 4
- **Autofocus:** 425-point Hybrid AF system (Phase Detection + Contrast Detection)
- **ISO Range:** 160-12800 (expandable to 80-51200)
- **Video:** DCI 4K/60p 10-bit 4:2:0 internal, 4K/60p 10-bit 4:2:2 HDMI output
- **Viewfinder:** 3.69M-dot OLED EVF with 0.75x magnification
- **LCD:** 3.0-inch 1.04M-dot 3-way tilting touchscreen

- **Connectivity:** Wi-Fi, Bluetooth, USB-C, HDMI, Microphone, Headphone
- **Dimensions (Body Only):** Approx. 132.5 x 92.8 x 58.8 mm (5.22 x 3.65 x 2.31 in.)
- **Weight (Body Only, including battery and memory card):** Approx. 539 g (1.19 lbs)

## 7. WARRANTY AND SUPPORT

---

For official product warranty information and technical support regarding your Fujifilm X-T3 camera, please refer to the official Fujifilm website or the warranty card included with your camera purchase. This manual, based on "The Complete Guide to Fujifilm's X-T3," serves as an educational resource and does not replace official manufacturer documentation or support channels.

For additional resources and insights related to the book itself, you may visit the publisher's website:

[www.FriedmanArchives.com](http://www.FriedmanArchives.com)

The ISBN for "The Complete Guide to Fujifilm's X-T3 (B&W Edition)" is **978-0359409396**.



Image: Back cover of the guide, displaying the ISBN and the publisher's website for further information.