

## Sony Pictures Home Entertainment 0767809726

# No Mercy DVD Instruction Manual

Model: 0767809726 | Brand: Sony Pictures Home Entertainment

## INTRODUCTION

---

This manual provides essential information for the proper use, care, and maintenance of your *No Mercy* DVD. Please read these instructions carefully to ensure optimal viewing experience and longevity of your disc. This DVD is compatible with standard DVD players and drives.

## SETUP

---

To begin watching your *No Mercy* DVD, follow these steps:

- 1. Prepare Your DVD Player:** Ensure your DVD player is connected to your television or display device and powered on. Refer to your DVD player's manual for specific connection instructions.
- 2. Open Disc Tray:** Press the "Open/Close" button on your DVD player to open the disc tray.
- 3. Insert DVD:** Carefully place the *No Mercy* DVD into the disc tray with the label side facing up. Avoid touching the playback surface of the disc.
- 4. Close Disc Tray:** Press the "Open/Close" button again to close the disc tray. The DVD player will typically begin reading the disc automatically.

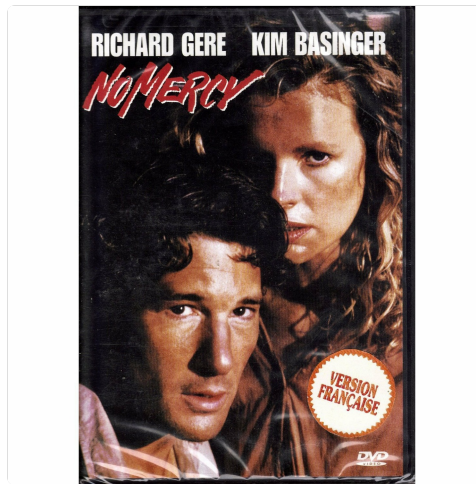


Image: Front cover of the No Mercy DVD. The cover features actors Richard Gere and Kim Basinger, with a dramatic background suggesting action and suspense. The title "No Mercy" is prominently displayed.

## OPERATING INSTRUCTIONS

---

Once the DVD is loaded, use your DVD player's remote control to navigate the menu and control playback.

- **Main Menu:** After loading, the DVD will display a main menu. Use the arrow keys on your remote to select options like "Play Movie," "Scene Selection," "Audio Options," or "Special Features."
- **Play Movie:** Select "Play Movie" to start the film from the beginning.
- **Pause/Play:** Press the "Play/Pause" button to temporarily stop or resume playback.
- **Stop:** Press the "Stop" button to end playback and return to the main menu or stop the disc.
- **Fast Forward/Rewind:** Use the "FF" (Fast Forward) or "RW" (Rewind) buttons to quickly scan through the movie.
- **Skip Chapters:** Use the "Next Chapter" or "Previous Chapter" buttons to jump between scenes.
- **Audio Options:** Access the "Audio Options" menu to select different audio tracks (e.g., English, Spanish) or audio formats if available.
- **Subtitles:** Access the "Subtitles" menu to turn subtitles on or off, and select preferred languages if available.

## CARE AND MAINTENANCE

---

Proper care ensures the longevity and optimal performance of your DVD.

- **Handling:** Always hold the DVD by its edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Do not bend the disc or expose it to sharp objects that could scratch the surface.

## TROUBLESHOOTING

---

If you encounter issues while playing your DVD, try the following solutions:

Problem	Solution
Disc does not load or play.	<ul style="list-style-type: none"><li>• Ensure the disc is inserted correctly (label side up).</li><li>• Clean the disc surface with a soft cloth.</li><li>• Check if your DVD player is functioning correctly with other discs.</li><li>• Verify your DVD player supports the DVD format (Region 1 for this disc, if applicable).</li></ul>
No audio or poor audio quality.	<ul style="list-style-type: none"><li>• Check your TV and audio system volume settings.</li><li>• Ensure audio cables are securely connected.</li><li>• Select the correct audio track from the DVD's "Audio Options" menu.</li></ul>
No video or poor video quality.	<ul style="list-style-type: none"><li>• Check your TV input source.</li><li>• Ensure video cables are securely connected.</li><li>• Clean the disc surface.</li></ul>
Disc freezes or skips.	<ul style="list-style-type: none"><li>• Clean the disc surface for smudges or fingerprints.</li><li>• Inspect the disc for deep scratches. Severely scratched discs may not play correctly.</li><li>• Try playing the disc in another DVD player to rule out player issues.</li></ul>

## SPECIFICATIONS

---

Feature	Detail
Title	No Mercy
Model Number (ASIN)	0767809726
Brand/Studio	Sony Pictures Home Entertainment
Format	DVD
Aspect Ratio	1.33:1, 1.85:1
MPAA Rating	R (Restricted)
Audio Language	English (Dolby Digital 2.0 Surround)
Subtitles	None
Number of Discs	2
Release Date	May 12, 1998
Product Dimensions	7.5 x 5.38 x 0.6 inches; 3.2 ounces

## WARRANTY INFORMATION

---

This DVD is covered by a standard limited warranty against manufacturing defects. If you receive a defective disc, please contact the retailer from whom you purchased it for a replacement or refund. Damage due to improper handling, storage, or misuse is not covered under warranty.

## CUSTOMER SUPPORT

---

For further assistance regarding your *No Mercy* DVD, please contact Sony Pictures Home Entertainment customer service or the retailer where the product was purchased. Please have your model number (ASIN: 0767809726) available when contacting support.

You may also visit the official Sony Pictures Home Entertainment website for general information and FAQs related to their products.