

Beko BE68MSW

Beko BE68MSW Inner Oven Door Glass Instruction Manual

MODEL: BE68MSW

Dimensions: 415mm x 335mm

INTRODUCTION

This instruction manual provides essential information for the safe and correct handling, installation, and maintenance of your Beko BE68MSW Inner Oven Door Glass. Please read this manual thoroughly before attempting any installation or maintenance procedures. Retain this manual for future reference.

SAFETY INFORMATION

Warning: Always disconnect the oven from the main power supply before beginning any installation or maintenance work. Failure to do so can result in electric shock or serious injury.

Caution: Oven glass can be fragile. Handle with extreme care to prevent breakage and injury. Wear appropriate protective gloves and eye protection during installation.

- Ensure the oven has completely cooled down before handling any parts.
- Do not use damaged glass. Inspect the new glass for any cracks or chips before installation.
- If you are unsure about any step, consult a qualified technician.

PRODUCT OVERVIEW

The Beko BE68MSW Inner Oven Door Glass is a replacement component designed to fit specific Beko oven models. It serves as an insulating layer and part of the viewing window within the oven door assembly. This particular glass measures 415mm in width and 335mm in height.



This image displays the Beko BE68MSW Inner Oven Door Glass, a clear, rectangular pane with slightly rounded corners. The glass is designed to fit inside an oven door, providing insulation and a viewing window. The surface appears smooth and reflective.

SETUP (INSTALLATION)

Tools Required: Screwdriver set (Phillips and flathead), protective gloves, soft cloth.

1. **Power Disconnection:** Ensure the oven is completely disconnected from the electrical supply.
2. **Oven Cooling:** Allow the oven to cool down completely to room temperature.
3. **Door Removal (if necessary):** Depending on your oven model, it may be easier to remove the entire oven door. Consult your oven's primary instruction manual for specific door removal procedures.
4. **Accessing the Inner Glass:** Carefully open the oven door. Locate the screws or clips that secure the inner panel of the oven door. These are typically found along the top or sides of the inner door frame.
5. **Removing the Old Glass:** Unscrew or unclip the retaining mechanisms. Gently lift out the old inner glass. If the old glass is broken, carefully remove all fragments, ensuring no small pieces remain within the door assembly.
6. **Cleaning:** Clean the interior of the oven door frame to remove any grease or debris before installing the new glass.
7. **Installing the New Glass:** Carefully place the new Beko BE68MSW Inner Oven Door Glass into the designated slot within the oven door frame. Ensure it sits flush and securely.
8. **Securing the Glass:** Reattach the retaining screws or clips, ensuring they are tightened sufficiently to hold the glass firmly in place, but do not overtighten, as this could damage the glass.
9. **Reassemble Door:** If the oven door was removed, reattach it according to your oven's primary instruction manual.
10. **Final Check:** Gently open and close the oven door to ensure the new glass is stable and there are no

unusual noises or movements.

OPERATING (POST-INSTALLATION)

After successful installation, the oven door glass functions as an integral part of the oven's thermal insulation and viewing window. No specific 'operation' is required for the glass itself beyond its passive role.

- Ensure the oven door closes properly and seals tightly after installation.
- Avoid slamming the oven door, as this can stress the glass and other components.
- Do not place heavy objects on the oven door when it is open.

MAINTENANCE

Regular cleaning and inspection will help prolong the life of your oven door glass.

- **Cleaning:** Clean the inner oven door glass with a soft cloth and a non-abrasive oven cleaner or a mixture of warm water and mild dish soap. Avoid harsh chemicals or abrasive scrubbing pads, which can scratch or damage the glass surface. Ensure the oven is cool before cleaning.
- **Inspection:** Periodically inspect the glass for any signs of cracks, chips, or damage. If any damage is observed, the glass should be replaced immediately to ensure safety and maintain oven efficiency.
- **Seal Check:** Check the door seal (gasket) around the oven door for any signs of wear or damage. A compromised seal can affect oven performance and potentially lead to heat escaping.

TROUBLESHOOTING

This section addresses common issues related to the inner oven door glass.

Problem	Possible Cause	Solution
Glass does not fit correctly.	Incorrect model part; improper alignment during installation.	Verify the part number (BE68MSW) matches your oven model. Re-align the glass carefully, ensuring it sits flush in its frame.
Glass rattles or feels loose.	Retaining screws/clips are loose or not properly secured.	Ensure all retaining screws or clips are tightened securely. Do not overtighten.
Condensation between glass panes.	This is often normal during cooking, especially with high moisture foods. Persistent condensation may indicate a faulty door seal.	Ensure the door seal is clean and intact. If condensation persists and affects visibility, inspect the door seal for damage and replace if necessary.
Glass is cracked or broken.	Impact damage; thermal stress; manufacturing defect.	Immediately discontinue oven use. Replace the glass with a new, undamaged Beko BE68MSW Inner Oven Door Glass.

SPECIFICATIONS

Model: BE68MSW

Type: Inner Oven Door Glass

Dimensions (Width x Height): 415mm x 335mm

Material: Tempered Glass

Item Weight: 0.66 Kilograms


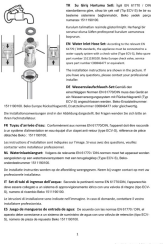
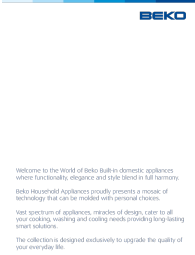
ASIN: 1020100664



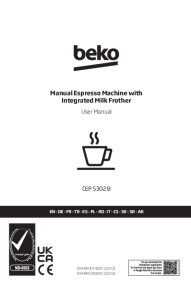
WARRANTY AND SUPPORT

For warranty information or technical support regarding your Beko BE68MSW Inner Oven Door Glass, please refer to the original purchase documentation or contact Beko customer service directly. Ensure you have your oven model number and the part's ASIN (1020100664) available when contacting support.

For further assistance, visit the official Beko website or contact your local authorized Beko service center.

Related Documents - BE68MSW

	<p>Beko Appliance Guarantee: 12-Month Warranty and Service Information</p> <p>Details the 12-month manufacturer's guarantee for Beko appliances, covering terms, conditions, exclusions, and how to obtain service and support.</p>
	<p>Beko Water Inlet Hose Set: Installation Guide and Specifications</p> <p>Essential information for installing the Beko Water Inlet Hose Set (Part Number 1511190100). Details connection requirements to water supply systems with a Type ECV-S check valve, adhering to EN 61770/DIN standards. Includes a textual description of installation visuals and guidance for professional assistance.</p>
	<p>Beko Built-in Appliances: InnovaChef & Chef Series for Your Kitchen</p> <p>Explore Beko's innovative built-in kitchen appliances, including the InnovaChef and Chef series. Discover features, recipes, and step-by-step cooking guides designed to enhance your culinary experience.</p>

	<p>Beko Barbaros FS Good Timer Oven Service Manual</p> <p>This service manual provides detailed instructions and technical specifications for the Beko Barbaros FS Good Timer Oven with 4 induction hobs. It covers safety warnings, product assembly, usage guidelines, technical specifications, troubleshooting, and component replacement.</p>
	<p>Beko CTB 6253 X Hood Cooker User Manual</p> <p>This user manual provides comprehensive instructions for the Beko CTB 6253 X Hood Cooker, covering safety precautions, operation details, installation guides, maintenance procedures, and troubleshooting tips.</p>
	<p>Beko CEP 5302 B Espresso Machine User Manual - Operation, Safety & Maintenance</p> <p>Comprehensive user manual for the Beko CEP 5302 B Espresso Machine with Integrated Milk Frother. Covers setup, operation, safety guidelines, cleaning, and troubleshooting for optimal coffee preparation.</p>