

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic Lumix DMC-FZ200 Digital Camera User Manual](#)

## Panasonic DMC-FZ200

# Panasonic Lumix DMC-FZ200 Digital Camera User Manual

Comprehensive Guide for Setup, Operation, and Maintenance

## INTRODUCTION

This manual provides detailed instructions for operating the Panasonic Lumix DMC-FZ200 digital camera. It covers essential camera setup, various shooting modes, and practical advice for both still photography and video recording. The aim is to help users understand and utilize the full capabilities of their camera, from basic functions to advanced settings.

# Panasonic Lumix

## DMC-FZ200



## User's Manual

by **Graham Houghton**

Image of the Panasonic Lumix DMC-FZ200 digital camera, showcasing its lens and body design.

## 1. SETUP

---

### 1.1 Initial Preparation

- **Battery Installation and Charging:** Insert the battery into the camera. Connect the AC adapter to the camera and a power outlet to charge the battery. Ensure the charging indicator light confirms charging status.
- **Memory Card Insertion:** Open the memory card slot cover and insert a compatible SD card until it clicks into place. Ensure the card is inserted correctly to avoid damage.
- **Attaching the Lens Cap and Strap:** Securely attach the lens cap when the camera is not in use. Attach the neck strap for safe handling and to prevent accidental drops.

### 1.2 Basic Camera Settings

- **Setting Date and Time:** Upon first use or after battery replacement, set the correct date and time through the camera's menu system. This ensures accurate timestamping of photos and videos.
- **Language Selection:** Choose your preferred display language from the camera's system settings.
- **Formatting the Memory Card:** It is recommended to format a new memory card or one used in another device within the camera. This prepares the card for optimal performance with the FZ200 and deletes all existing data.

## 2. OPERATING THE CAMERA

---

### 2.1 Still Photography Modes

The DMC-FZ200 offers various modes to suit different shooting conditions and user preferences.

- **Intelligent Auto (iA) Mode:** This mode automatically detects the scene and adjusts settings for optimal results, ideal for beginners.
- **Program AE (P) Mode:** The camera sets both aperture and shutter speed, but allows the user to adjust other settings like ISO and white balance.
- **Aperture Priority (A) Mode:** Users set the aperture to control depth of field, and the camera selects the appropriate shutter speed.
- **Shutter Priority (S) Mode:** Users set the shutter speed to control motion blur, and the camera selects the appropriate aperture.
- **Manual (M) Mode:** Provides full control over aperture, shutter speed, and ISO for advanced users.
- **Scene Modes:** Pre-set modes optimized for specific scenarios like portrait, landscape, sports, and night photography.

### 2.2 Basic Photography Techniques

- **Holding the Camera:** Use a stable grip, supporting the camera with both hands to minimize shake.
- **Focusing:** Half-press the shutter button to activate autofocus. The camera will indicate when focus is achieved. Manual focus is also available for precise control.
- **Zooming:** Use the zoom lever around the shutter button to adjust the focal length. The FZ200 features a powerful optical zoom.
- **Taking a Picture:** Fully press the shutter button after focusing to capture the image.

### 2.3 Video Recording

The DMC-FZ200 is capable of recording high-quality video.

- **Starting and Stopping Recording:** Press the dedicated video record button to start and stop video capture.
- **Audio Recording:** The camera has a built-in microphone. For enhanced audio quality, consider using an external microphone connected via the camera's microphone input.

- **Video Settings:** Adjust video resolution, frame rate, and other settings through the camera's menu to suit your needs.

## 3. MAINTENANCE

---

### 3.1 Cleaning and Care

- **Lens Cleaning:** Use a soft brush to remove dust, then gently wipe with a microfiber cloth and lens cleaning solution. Avoid touching the lens surface with fingers.
- **Camera Body Cleaning:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals.
- **Storage:** Store the camera in a dry, dust-free environment, ideally with a desiccant packet to prevent moisture buildup.

### 3.2 Battery and Memory Card Management

- **Battery Longevity:** Fully charge batteries before use. Store partially charged batteries if not used for extended periods. Avoid extreme temperatures.
- **Memory Card Care:** Always turn off the camera before inserting or removing a memory card. Regularly back up your photos and videos to a computer or external storage.

## 4. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your Panasonic Lumix DMC-FZ200.

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is depleted or incorrectly inserted.	Charge the battery fully. Reinsert the battery correctly.
Images are blurry.	Camera shake, incorrect focus, or low light.	Hold the camera steady, use a tripod. Ensure proper focus. Increase ISO or use flash in low light.
Memory card error.	Card is full, corrupted, or incompatible.	Delete unnecessary files or use a new card. Format the card (this will erase all data). Use a compatible SD card.
Flash does not fire.	Flash is set to off or forced off mode.	Check flash settings in the menu and set to auto or forced on.

If problems persist, consult the official Panasonic support resources or a qualified service technician.

## 5. SPECIFICATIONS (PANASONIC LUMIX DMC-FZ200 CAMERA)

---

This section outlines key features and capabilities of the Panasonic Lumix DMC-FZ200 camera, as detailed in this comprehensive guide.

- **Lens:** Leica DC Vario-Elmarit lens with 25-600mm equivalent focal length and a constant f/2.8 aperture.
- **Image Sensor:** High-sensitivity MOS sensor for clear images in various lighting conditions.
- **Image Stabilization:** Optical Image Stabilizer (O.I.S.) to reduce blur from camera shake.
- **Shooting Modes:** Intelligent Auto, Program AE, Aperture Priority, Shutter Priority, Manual, and various Scene Modes.
- **Video Recording:** Full HD video recording capabilities with stereo sound.
- **Viewfinder:** Electronic Viewfinder (EVF) for precise framing.
- **Display:** Articulating LCD screen for flexible viewing angles.
- **Connectivity:** USB, HDMI, and external microphone input.

*Note: Specific technical specifications such as exact sensor size, megapixel count, and detailed video formats are typically found in the official manufacturer's documentation. This manual focuses on operational guidance.*

## 6. WARRANTY AND SUPPORT

---

For official warranty information, product registration, and technical support, please refer to the Panasonic official website or contact their customer service directly. This manual serves as an instructional guide and does not replace official manufacturer support.

Additionally, the author of this guide, Mr. Graham Houghton, provides several hours of online video tutorials and hints and tips related to the Panasonic Lumix FZ200. These resources can be a valuable supplement to this manual for visual learners and those seeking further practical advice.

- **Official Panasonic Support:** Visit the official Panasonic website for your region.
- **Online Tutorials:** Search for "Graham Houghton FZ200 tutorials" on video platforms for supplementary guidance.

This manual is intended for informational purposes only. Panasonic is a registered trademark.