

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [PI Kids](#) /

> [PI Kids Gabby's Dollhouse A-meow-zing Music! Squishy Button Sound Book Instruction Manual](#)

**PI Kids 1503765636**

# PI Kids Gabby's Dollhouse A-meow-zing Music! Squishy Button Sound Book Instruction Manual

Brand: PI Kids | Model: 1503765636

## 1. INTRODUCTION

---

The Gabby's Dollhouse A-meow-zing Music! Squishy Button Sound Book offers an interactive reading experience for young children. This board book features a squishy button that plays the Gabby's Dollhouse theme song, engaging readers through tactile and auditory stimulation. It is designed to provide a multisensory experience, making story time more enjoyable and stimulating for young minds.



Front cover of the Gabby's Dollhouse A-meow-zing Music! Squishy Button Sound Book, featuring Gabby, Pandy Paws, and a large squishy button.

## 2. SAFETY INFORMATION

**WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.**

**BUTTON CELL BATTERY WARNING:** This product contains a button cell battery. A button cell battery can cause severe internal chemical burns in just 2 hours if swallowed, leading to potential perforation of the esophagus and can be fatal. Keep new and used batteries away from children. If you suspect your child has swallowed a button battery, seek immediate medical attention. In the USA, call the National Battery Ingestion Hotline at 202-625-3333. In other countries, contact your local poison control center.

Ensure the battery compartment cover is properly secured. If it does not close securely, stop using the product and keep it away from children.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Conforms to ASTM F963-17. Conforms to the safety requirements of ASTM F963.

## 3. SETUP

## Battery Installation

The book comes with 2 replaceable long-life 357/AG13/LR44 alkaline manganese non-rechargeable button cell batteries already installed. These batteries are hazardous if swallowed.

1. Locate the battery compartment on the back cover of the book.
2. Using a small screwdriver, remove the screw securing the battery compartment cover.
3. Carefully remove the cover.
4. Insert new batteries, ensuring correct polarity (the plus (+) sign facing up).
5. Replace the cover and secure it with the screw.

### **Important Battery Guidelines:**

- Only an adult should replace batteries.
- Remove exhausted batteries immediately and dispose of them safely.
- Do not dispose of batteries in fire.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be short-circuited.
- Remove batteries if the product is not used for a long period of time.

# DREAMWORKS GABBY'S DOLLHOUSE

Gabby discovers that getting ready for a party can be part of the fun. Press the **SQUISHY** button to hear the Gabby's Dollhouse theme song!

3 replaceable long-life 357/AG13LR44 alkaline manganese (non-liquid) button cell batteries included, which are hazardous to young children.

#### Instructions for Battery Replacement

A child should never use this product unless the battery compartment cover has been properly secured. Only an adult should replace batteries. Use a Phillips screwdriver to remove the screw. Open the battery compartment cover. Remove old batteries and dispose of immediately and safely. Flat batteries can still be dangerous. Do not dispose of batteries in fire; batteries may explode or leak. Install new batteries with the plus (+) sign facing up. Close the cover and secure it with the screw. Make sure the screw is tightened. Do not use if compartment is not secure. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries. Do not recharge non-rechargeable batteries. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. This product uses three 357/AG13LR44 button cell batteries (3 x 1.5V = 4.5V). Use batteries of the same or equivalent type as recommended. The supply terminals are not to be short-circuited. Batteries should be changed when sounds mix, distort, or become otherwise unintelligible as batteries weaken. The electrostatic discharge may interfere with the sound module. If this occurs, please simply reset the sound module by pressing any key. In Europe, the dustbin symbol indicates that batteries, rechargeable batteries, button cells, battery packs, and similar materials must not be discarded in household waste. Batteries containing hazardous substances are harmful to the environment and to health. Please help to protect the environment from health risks by disposing of batteries properly and by taking batteries to local collection points. Batteries handled in this manner are safely recycled.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**WARNING:** Not suitable for children under 36 months due to small parts.

**WARNING: KEEP BATTERIES OUT OF REACH OF CHILDREN.** Dispose of used batteries immediately. This product contains a button battery. If swallowed, it can cause severe injury or death in just 2 hours, due to chemical burns and potential perforation of the esophagus. If you suspect your child has swallowed or inserted a button battery, seeks medical attention immediately. In the USA, immediately call the 24-hour National Battery Ingestion Hotline at 1-800-498-8666. In other countries, have the doctor call your local poison control center. Tell others about the risk associated with button batteries and how to keep their children safe.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio TV technician for help.

This publication may not be reproduced in whole or in part by any means whatsoever without written permission from the copyright owners. Permission is never granted for commercial purposes.

Play-a-Sound and Pi Kids are trademarks of Phoenix International Publications, Inc., and are registered in the United States. Product and sound element design, engineering, and reproduction are proprietary technologies of Phoenix International Publications, Inc. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. GAN ICES-3 (B) NMB-3 (B) Conforms to the safety requirements of ASTM F963.



An imprint of Phoenix International Publications, Inc.  
8501 West Higgins Road, Chicago, Illinois 60631  
34 Seymour Street, London W1H 7JE  
Heimhuder Straße 81, 20148 Hamburg  
[www.pikidsmedia.com](http://www.pikidsmedia.com)

Play-a-Sound®

3 years +  
Manufactured in China.



DREAMWORKS  
DreamWorks Gabby's Dollhouse © 2023 DreamWorks Animation LLC.  
All Rights Reserved.  
Customer Service: 1-877-277-9441 or  
customerservice@pikidsmedia.com



ISBN: 978-1-5037-6563-4



9 781503 765634

Back cover showing the battery compartment and safety warnings.

## 4. OPERATING INSTRUCTIONS

### Playing the Music

To hear the Gabby's Dollhouse theme song, simply press the large squishy button located on the front cover of the book. The button is designed for easy tactile interaction.

Gabby and Pandy Paws visit Cakey in the kitchen.  
"We'd like to add a little music to your recipe," says Gabby.  
She turns on the tunes, and the friends get to frosting.  
"Sprinkle party!" says Cakey.



An inside page depicting Gabby and Pandy Paws in the kitchen, preparing for a party. The squishy button is visible on the right page.

## Reading and Interaction

Turn the pages to follow Gabby's adventures as she prepares for a party. The story encourages hands-on interaction and stimulates imagination through its multisensory design.

The Gabby Cats are getting ready for a dance party in the Fairy Tale Garden today. Gabby can't wait!  
"Maybe we can take the party to the kitties," says DJ Catnip.  
"That's a great idea," says Gabby. "We can make it a getting-ready party!"



Another inside page showing Gabby and her friends in the Fairy Tale Garden, ready for a dance party.

## 5. MAINTENANCE

### Cleaning

Wipe the book with a dry, soft cloth. Do not immerse the book in water or use harsh cleaning agents, as this may damage the electronic components.

### Battery Replacement

Refer to the **Setup** section for detailed instructions on how to safely replace the button cell batteries. Always ensure the battery compartment is securely closed after replacement.

## Storage

Store the book in a cool, dry place away from direct sunlight and extreme temperatures to preserve its condition and battery life. Remove batteries if the product is not used for a long period of time.

## 6. TROUBLESHOOTING

---

### Sound Not Working

- **Check Batteries:** Ensure the batteries are correctly installed and not depleted. Replace them if necessary, following the instructions in the **Setup** section.
- **Electrostatic Discharge:** The sound module may be affected by electrostatic discharge. If this occurs, remove and reinsert the batteries to reset the sound module.
- **Secure Compartment:** Verify that the battery compartment cover is securely closed.

## 7. SPECIFICATIONS

---

<b>Publisher</b>	PI Kids
<b>Publication Date</b>	October 26, 2022
<b>Language</b>	English
<b>Print Length</b>	12 pages
<b>ISBN-10</b>	1503765636
<b>ISBN-13</b>	978-1503765634
<b>Item Weight</b>	2.31 pounds
<b>Dimensions</b>	7 x 1 x 6.8 inches
<b>Recommended Age</b>	3 years and up
<b>Batteries</b>	2 x 357/AG13/LR44 button cell (included)

## 8. CONTACT AND SUPPORT

---

For customer service or inquiries regarding this product, please contact Phoenix International Publications, Inc. (PI Kids).

- **Publisher:** Phoenix International Publications, Inc.
- **Address (USA):** 8501 West Higgins Road, Chicago, Illinois 60631
- **Address (UK):** 34 Seymour Street, London W1H 7JE
- **Address (Germany):** Heimhuder Straße 81, 20148 Hamburg
- **Website:** [www.pikidsmedia.com](http://www.pikidsmedia.com)

This product is manufactured in China.

