

[Manuals.plus /](#)

- › [Crown Entertainment /](#)
- › [Born Again DVD User Manual](#)


## Crown Entertainment 1897020724

# Born Again DVD User Manual

*A guide to the 30th Anniversary Release of the film starring Dean Jones as Chuck Colson.*

## INTRODUCTION

This manual provides essential information for the "Born Again" DVD, a compelling film based on the true story of Charles Colson's transformation during the Watergate era. Directed by Irving Rapper and John Sheperd, and starring Dean Jones, this film explores Colson's journey from White House counsel to prison, and his subsequent establishment of Prison Fellowship.

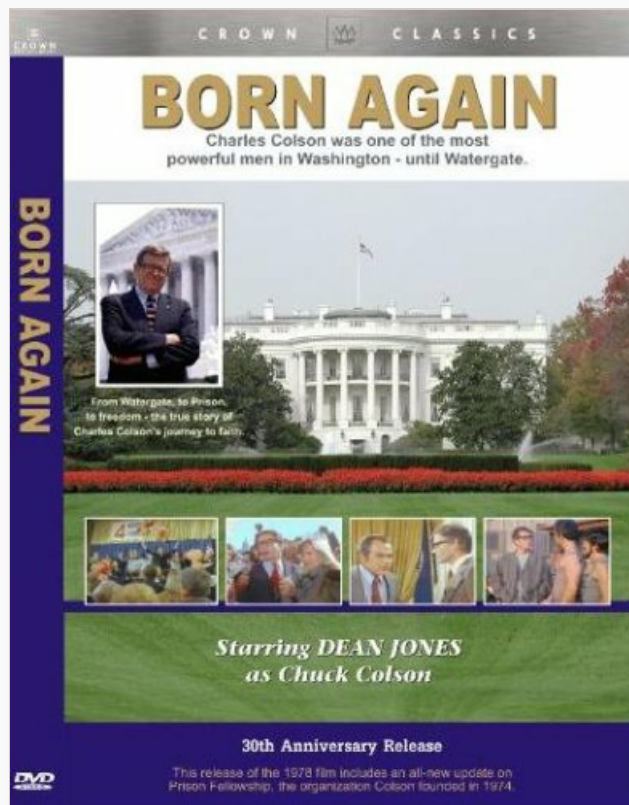

*Image: The official DVD cover for "Born Again," showcasing the White House, a portrait of Charles Colson, and smaller stills from the film, with "Starring DEAN JONES as Chuck Colson" prominently displayed.*

To begin watching your "Born Again" DVD, follow these simple steps:

1. **Unpack the DVD:** Carefully remove the DVD disc from its case. Hold the disc by its edges to avoid touching the playing surface.
2. **Insert the Disc:** Open the disc tray of your DVD player, Blu-ray player, or computer's optical drive. Place the "Born Again" DVD disc onto the tray with the label side facing up.
3. **Close the Tray:** Gently close the disc tray. The player should automatically detect the disc and begin loading.
4. **Connect to Display:** Ensure your DVD player is properly connected to your television or monitor via HDMI, RCA, or component cables.
5. **Power On:** Turn on your DVD player and display device.

## OPERATING INSTRUCTIONS

Once the DVD has loaded, you can navigate the menu and control playback using your remote control or player buttons.

- **Main Menu:** The DVD will typically display a main menu with options such as "Play Movie," "Scene Selection," and "Special Features." Use the arrow keys on your remote to highlight an option and press "Enter" or "OK" to select it.
- **Play Movie:** Select "Play Movie" to start the film from the beginning.
- **Scene Selection:** If available, use "Scene Selection" to jump to specific chapters or scenes within the movie.
- **Playback Controls:**
  - **Play/Pause:** Press the Play/Pause button to start or temporarily stop the movie.
  - **Stop:** Press the Stop button to end playback and return to the main menu or stop the disc.
  - **Fast Forward/Rewind:** Use the FF/RW buttons to quickly move through the movie. Press multiple times for faster speeds.
  - **Skip:** Use the Skip (>>|) or Previous (|<<) buttons to jump to the next or previous chapter.
- **Volume Control:** Adjust the volume using your television or audio receiver's remote control.

## MAINTENANCE AND CARE

Proper care will ensure the longevity and optimal performance of your "Born Again" DVD.

- **Handling:** Always hold the DVD by its outer edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., microfiber) from the center outwards in a straight line. Do not wipe in circular motions. For stubborn marks, use a specialized DVD cleaning solution.
- **Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity. Keep it in a vertical position to prevent warping.
- **Avoid Scratches:** Do not place the disc on rough surfaces. Be careful when inserting and removing it from the player.

## TROUBLESHOOTING

If you encounter issues while playing the "Born Again" DVD, refer to the table below for common problems and solutions.

Problem	Solution
Disc does not play or load.	Ensure the disc is clean and free of scratches. Try inserting the disc again. Check if your player supports DVD format. Power cycle your DVD player.
Picture or sound skips/freezes.	Clean the disc thoroughly. Check for visible scratches. Try playing the disc in another DVD player to determine if the issue is with the disc or the player.
No sound.	Check the volume level on your TV and audio receiver. Ensure all audio cables are securely connected. Verify that the correct audio input is selected on your TV/receiver.
No picture.	Ensure all video cables are securely connected between the DVD player and the TV. Verify that the correct video input is selected on your TV.

## SPECIFICATIONS

Key technical details for the "Born Again" DVD:

Feature	Detail
Title	Born Again
Format	DVD (Full Screen, NTSC)
ASIN	1897020724
MPAA Rating	G (General Audience)
Run Time	1 hour and 50 minutes
Release Date	January 13, 2009
Director	Irving Rapper and John Sheperd [updated]
Actors	Dean Jones, Jay Robinson, Anne Francis, Dana Andrews, Raymond St. Jacques
Studio	Crown Entertainment
Number of Discs	1
Product Dimensions	7.1 x 5.42 x 0.58 inches; 2.88 ounces

## WARRANTY AND SUPPORT

For information regarding any warranty or support for this "Born Again" DVD, please refer to the packaging or contact the distributor, Crown Entertainment, directly. As this is a media product, specific warranties may vary.

