

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Jeep](#) /

› [2018 Jeep Wrangler JK Owner's Manual](#)

Jeep Wrangler JK

2018 Jeep Wrangler JK Owner's Manual

Your comprehensive guide to operating and maintaining your vehicle.

[Introduction](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your 2018 Jeep Wrangler JK. Please read it thoroughly to familiarize yourself with the vehicle's features, controls, and maintenance requirements. Proper understanding and adherence to these instructions will ensure optimal performance and longevity of your vehicle.

Keep this manual in your vehicle for quick reference. For any questions not covered in this guide, please consult an authorized Jeep service center.

2. INITIAL SETUP AND FAMILIARIZATION

2.1. Key Fob and Entry

Your Jeep Wrangler JK comes with a remote key fob. Press the **lock** button once to lock all doors and the tailgate. Press the **unlock** button once to unlock the driver's door, or twice within five seconds to unlock all doors and the tailgate.

2.2. Seat Adjustment

To adjust the driver's seat, locate the lever under the front of the seat cushion for fore/aft adjustment. Use the recline lever on the side of the seat to adjust the seatback angle. Ensure the seat is securely locked in place before driving.

2.3. Mirror Adjustment

Adjust the side mirrors using the control knob located on the driver's door panel. Select the left or right mirror, then use the directional pad to position the mirror for optimal rear visibility. Adjust the rearview mirror manually.



Image: Cover of the 2018 Jeep Wrangler JK Owner's Manual. This manual provides detailed instructions for vehicle operation and maintenance.

3. OPERATING YOUR VEHICLE

3.1. Starting the Engine

Insert the key into the ignition and turn it to the "ON" position. For automatic transmissions, ensure the gear selector is in **Park (P)** or **Neutral (N)**. For manual transmissions, depress the clutch pedal fully. Turn the key to "START" and release once the engine begins to run.

3.2. Driving Controls

- **Steering Wheel:** Controls vehicle direction.
- **Brake Pedal:** Depress to slow down or stop the vehicle.
- **Accelerator Pedal:** Depress to increase vehicle speed.
- **Turn Signal Lever:** Located on the left side of the steering column. Push up for a right turn, down for a left turn.
- **Wiper/Washer Control:** Located on the right side of the steering column. Rotate for intermittent, low, or high-speed wiping. Push in for washer fluid.

3.3. Four-Wheel Drive System (4WD)

Your Wrangler JK is equipped with a Command-Trac® or Rock-Trac® 4WD system. The transfer case lever is located next to the gear selector. Available modes include:

- **2H (Two-Wheel Drive High):** For normal, dry road driving.
- **4H (Four-Wheel Drive High):** For slippery conditions (snow, ice, loose gravel). Do not use on dry pavement.
- **N (Neutral):** For flat towing.
- **4L (Four-Wheel Drive Low):** For extreme off-road conditions requiring maximum traction and low speed.

Refer to the detailed instructions in the manual for proper engagement and disengagement of 4WD modes.

4. MAINTENANCE

Regular maintenance is crucial for the performance, safety, and longevity of your Jeep Wrangler JK. Adhere to the recommended service schedule.

4.1. Fluid Checks

- **Engine Oil:** Check oil level regularly using the dipstick. Add recommended oil type if low.
- **Coolant:** Ensure coolant level is between MIN and MAX marks when the engine is cool.
- **Brake Fluid:** Check level in the reservoir. If low, consult a service center.
- **Windshield Washer Fluid:** Keep reservoir filled for clear visibility.

4.2. Tire Care

Maintain correct tire pressure as specified on the tire placard located on the driver's side door jamb. Rotate tires every 6,000 to 8,000 miles to ensure even wear. Inspect tires for damage or excessive wear regularly.

4.3. Service Schedule

Consult the maintenance schedule section in your physical owner's manual for detailed intervals for oil changes, filter replacements, spark plug inspection, and other critical service items. Adhering to this schedule helps prevent costly repairs and maintains vehicle warranty.

5. TROUBLESHOOTING COMMON ISSUES

This section addresses common issues you might encounter with your Jeep Wrangler JK.

5.1. Warning Lights

- **Check Engine Light:** If illuminated, it indicates an emission control system issue. It may be a minor fault or a more serious problem. Consult a service center.
- **Oil Pressure Warning Light:** If illuminated while driving, pull over safely and turn off the engine

immediately. Check oil level. Do not drive with this light on.

- **Battery Charge Warning Light:** Indicates a problem with the charging system. Have the system checked by a qualified technician.

5.2. Engine Not Starting

If the engine cranks but does not start, check the fuel level. Ensure the battery terminals are clean and tight. If the engine does not crank, check the battery charge and ensure the transmission is in Park or Neutral (automatic) or the clutch is depressed (manual).

5.3. Flat Tire

Your vehicle is equipped with a spare tire and a jack kit. Refer to the "Changing a Flat Tire" section in your physical manual for detailed, step-by-step instructions on safely replacing a flat tire.

6. SPECIFICATIONS

Key specifications for the 2018 Jeep Wrangler JK (may vary by trim level):

Category	Detail
Engine Type	3.6L Pentastar V6
Horsepower	285 hp @ 6,400 rpm
Torque	260 lb-ft @ 4,800 rpm
Transmission	6-speed manual or 5-speed automatic
Fuel Tank Capacity	18.6 gallons (2-door), 22.5 gallons (4-door)
Overall Length	164.3 inches (2-door), 184.9 inches (4-door)
Curb Weight	Approx. 3,879 - 4,340 lbs

For a complete list of specifications, refer to your vehicle's original documentation or the physical owner's manual.

7. WARRANTY INFORMATION

Your 2018 Jeep Wrangler JK is covered by a limited warranty. Details regarding coverage periods, terms, and conditions for the Basic Limited Warranty, Powertrain Limited Warranty, and Corrosion Perforation Limited Warranty are provided in a separate Warranty Information Booklet included with your vehicle. Please review this document carefully to understand your rights and responsibilities.

Any modifications to the vehicle or failure to perform scheduled maintenance may affect your warranty coverage. Always use genuine Jeep parts for repairs and maintenance.

8. CUSTOMER SUPPORT

For technical assistance, service appointments, or general inquiries regarding your Jeep Wrangler JK, please contact your authorized Jeep dealership. They are equipped with trained technicians and genuine parts to provide the best service for your vehicle.

You can also find additional support and resources on the official Jeep website or by calling the customer service hotline listed in your warranty booklet.

© 2018 Jeep. All rights reserved. Information subject to change without notice.