

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Lexus](#) /
- › [2014 Lexus LX570 LX 570 Owners Manual 14](#)

Lexus LX570

2014 Lexus LX570 LX 570 Owner's Manual

Official Owner's Manual for the 2014 Lexus LX570.

1. INTRODUCTION AND OVERVIEW

This manual provides comprehensive instructions and information for the safe and efficient operation, maintenance, and care of your 2014 Lexus LX570. Please read this manual thoroughly to familiarize yourself with the vehicle's features and capabilities.

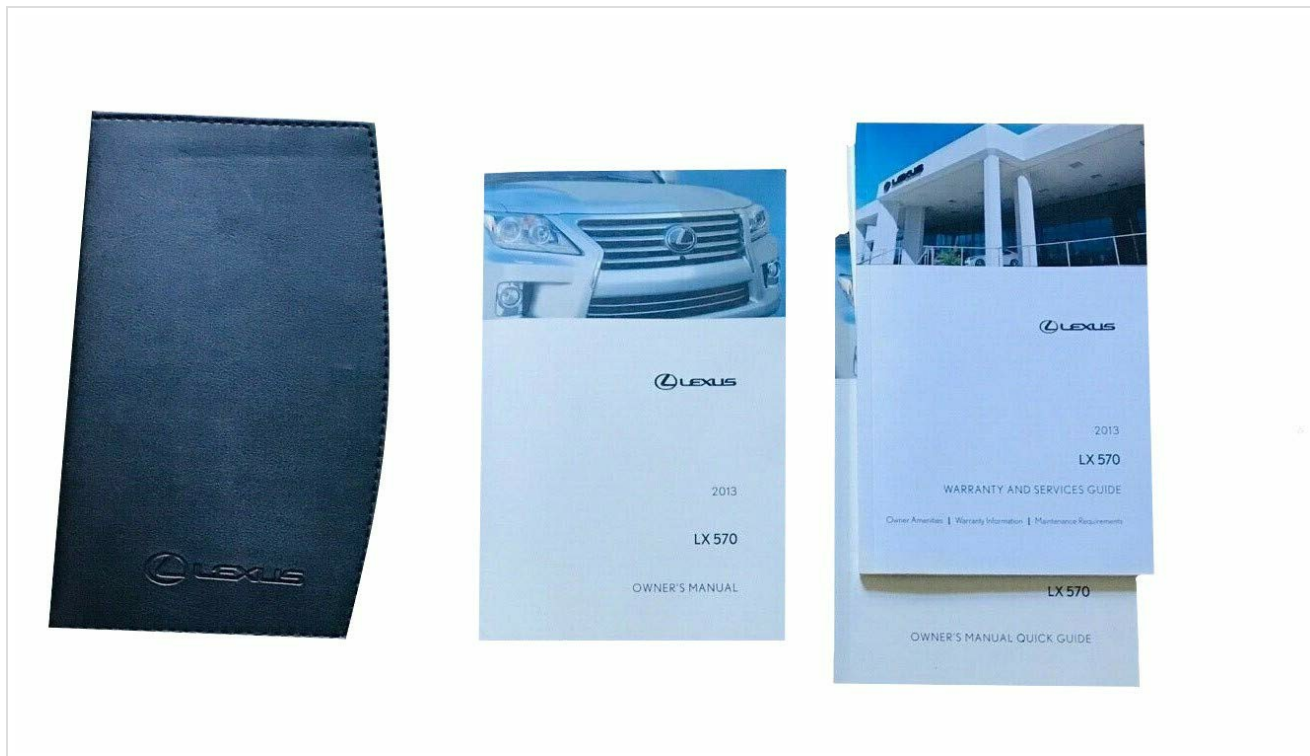


Figure 1.1: The complete set of manuals for the 2014 Lexus LX570, including the main Owner's Manual, a Quick Guide, and the Warranty and Services Guide, all housed within a protective black leatherette case.

2. INITIAL SETUP AND FAMILIARIZATION

Before operating your Lexus LX570, it is important to familiarize yourself with its basic controls and features. This section covers initial setup procedures.

- **Key Fob Operation:** Understand how to lock, unlock, and start the vehicle using the smart key system.
- **Seat Adjustments:** Learn to adjust the driver and passenger seats for optimal comfort and safety.
- **Steering Wheel Controls:** Familiarize yourself with audio, cruise control, and multi-information display controls on the steering wheel.
- **Mirror Adjustments:** Properly adjust side and rearview mirrors for clear visibility.

3. OPERATING YOUR VEHICLE

This section details the procedures for operating your Lexus LX570, including starting, driving, and utilizing various vehicle systems.

3.1 Starting and Stopping the Engine

1. Ensure the vehicle is in Park (P) and the parking brake is engaged.
2. Press the brake pedal firmly.
3. Press the ENGINE START/STOP button.
4. To stop the engine, ensure the vehicle is in Park (P) and press the ENGINE START/STOP button again.

3.2 Driving Modes and Features

The LX570 offers various driving modes and features to enhance your driving experience:

- **Drive Mode Select:** Adjust vehicle performance characteristics (e.g., ECO, NORMAL, SPORT).
- **Multi-Terrain Select:** Optimize traction for different off-road conditions.
- **Crawl Control:** Maintain a low, constant speed on challenging terrain.
- **Navigation System:** Detailed instructions for using the integrated navigation system.
- **Climate Control:** Operation of the multi-zone automatic climate control system.

4. MAINTENANCE AND CARE

Regular maintenance is crucial for the longevity and optimal performance of your Lexus LX570. This section outlines recommended service intervals and basic care procedures.

4.1 Scheduled Maintenance

Service Item	Interval (Miles/Months)
--------------	-------------------------

Service Item	Interval (Miles/Months)
Engine Oil and Filter Change	5,000 miles / 6 months
Tire Rotation	5,000 miles / 6 months
Brake Inspection	10,000 miles / 12 months
Cabin Air Filter Replacement	15,000 miles / 18 months

Note: Refer to the Warranty and Services Guide for a complete maintenance schedule and detailed service requirements.

4.2 Exterior and Interior Care

- **Washing:** Use mild automotive soap and soft cloths to wash the exterior.
- **Interior Cleaning:** Regularly vacuum and wipe down surfaces with appropriate cleaners.
- **Tire Pressure:** Check tire pressure regularly and maintain recommended levels.

5. TROUBLESHOOTING COMMON ISSUES

This section provides guidance on identifying and resolving common operational issues you might encounter with your Lexus LX570.

5.1 Warning Lights

If a warning light illuminates on your dashboard, consult the following:

- **Check Engine Light:** Indicates a potential issue with the engine or emissions system. Seek professional inspection.
- **Low Tire Pressure Warning:** Check tire pressures and inflate to recommended levels.
- **Oil Pressure Warning:** Stop the vehicle immediately and check engine oil level. Do not drive if oil pressure is low.

5.2 Starting Problems

- **Engine Cranks but Won't Start:** Check fuel level, ensure the smart key is detected, and verify battery charge.
- **No Crank/No Start:** Check battery terminals for corrosion, ensure the transmission is in Park (P) or Neutral (N).

6. SPECIFICATIONS

Key specifications for the 2014 Lexus LX570 Owner's Manual:

- **Publisher:** Lexus 4th Edition
- **Publication Date:** January 1, 2013

- **Language:** English
- **ISBN-10:** 2990498702
- **ISBN-13:** 978-2990498708
- **Item Weight:** 2 pounds

7. WARRANTY AND SUPPORT


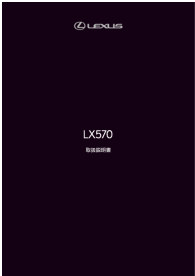
Your 2014 Lexus LX570 comes with a comprehensive warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the dedicated *Warranty and Services Guide* included with your vehicle's documentation.





For further assistance, authorized Lexus dealerships are equipped to provide expert service and support. Contact information for customer support can typically be found in the Warranty and Services Guide or on the official Lexus website.

Important: Always use genuine Lexus parts and authorized service centers for maintenance and repairs to ensure continued vehicle performance and warranty validity.

© 2014 Lexus. All rights reserved. This manual is for informational purposes only.

Related Documents - LX570

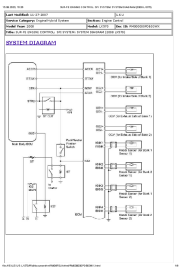	<p>Lexus LX 2021 Owner's Manual</p> <p>Comprehensive guide for the 2021 Lexus LX, covering safety, operation, maintenance, and specifications. Learn about instrument cluster features, interior controls, driving assistance systems, and troubleshooting.</p>
	<p>Lexus LX570</p> <p>Lexus LX570</p>

 <p>The diagram is a detailed electrical schematic for the Sequential Fuel Injection (SFI) system of a 2008 Lexus LX570. It shows the power flow from the battery through various relays and fuses to the fuel injectors. Key components labeled include the ECM (Engine Control Module), various sensors like the MAP (Manifold Absolute Pressure) and MAF (Mass Air Flow), and the fuel pump. The diagram is organized into sections for different parts of the vehicle, such as the engine compartment and the rear cargo area.</p>	<p>2008 Lexus LX570 3UR-FE Engine Control SFI System Diagram</p> <p>Detailed system diagram illustrating the Sequential Fuel Injection (SFI) system for the 2008 Lexus LX570's 3UR-FE engine, showing electrical components, sensors, actuators, and their connections.</p>
 <p>The image shows the cover of the 2014 Lexus IS 250C Warranty and Services Guide. It features a photograph of the front of a white Lexus IS 250C. The text on the cover includes the Lexus logo, the model name 'IS 250C', and the title 'Warranty and Services Guide'.</p>	<p>2014 Lexus IS 250C Warranty and Services Guide</p> <p>Comprehensive guide for the 2014 Lexus IS 250C, detailing owner amenities, warranty information, maintenance schedules, and authorized dealership services. Learn how to maximize your Lexus ownership experience.</p>
 <p>The image shows the cover of the 2014 Lexus RX 350 Warranty and Services Guide. It features a photograph of the front of a white Lexus RX 350. The text on the cover includes the Lexus logo, the model name 'RX 350', and the title 'Warranty and Services Guide'.</p>	<p>2014 Lexus RX 350 Warranty and Services Guide</p> <p>Comprehensive guide detailing warranty coverage, complimentary services, and scheduled maintenance for the 2014 Lexus RX 350, including owner benefits and dispute resolution procedures.</p>
 <p>The image shows the cover of the Lexus CES (2018-2022) Electric Tailgate Lift Installation Manual. It features a grid of small photographs showing various steps of the installation process, from unpacking the components to the final installation of the tailgate lift system.</p>	<p>Lexus CES (2018-2022) Electric Tailgate Lift Installation Manual 8-ETTY-5111-01-00</p> <p>Comprehensive installation guide for the 8-ETTY-5111-01-00 electric tailgate lift system for Lexus CES models (2018-2022). Includes parts list, step-by-step instructions, and operational details.</p>