

[manuals.plus](#) /

› [XENON](#) /

› [Firehouse VHS Tape User Guide](#)

XENON 6302308224

Firehouse VHS Tape User Guide

Model: 6302308224

1. INTRODUCTION TO FIREHOUSE VHS

This guide provides essential information for the proper use and care of your **Firehouse** VHS tape. *Firehouse* is a dramatic film released on VHS tape, offering a unique viewing experience from the era of analog media.

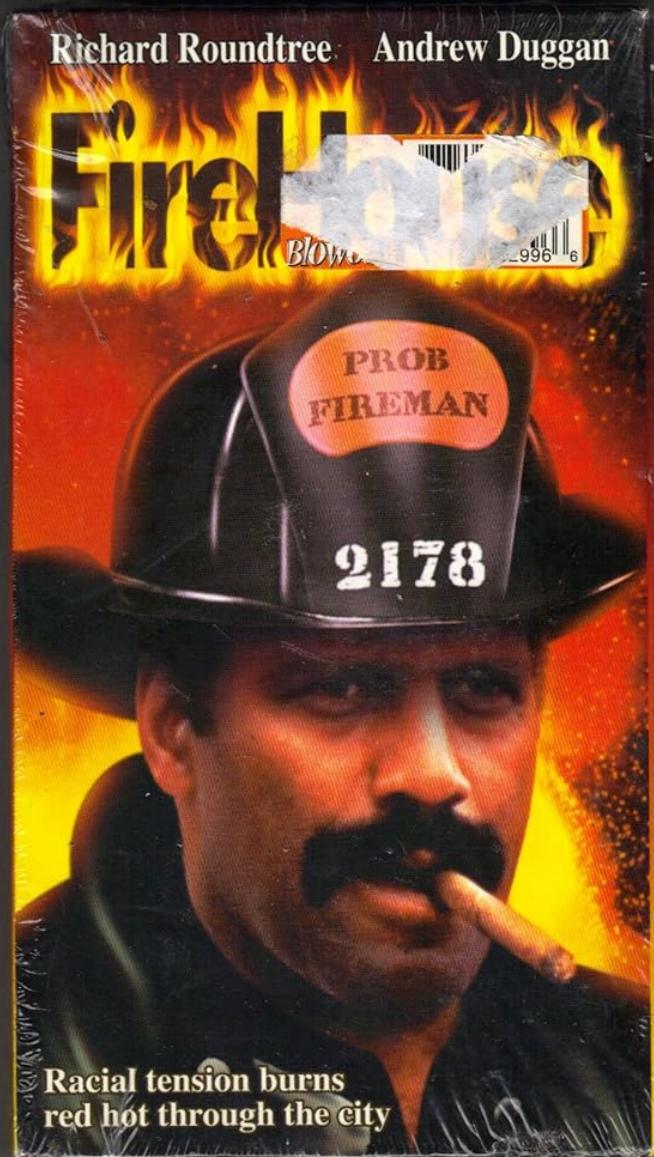


Figure 1: Front cover of the *Firehouse* VHS tape. This image displays the primary artwork and title of the film.

2. USING YOUR VHS TAPE

To enjoy the *Firehouse* film, follow these steps for proper playback on a compatible VHS player:

- Power On:** Ensure your VHS player and television are connected and powered on.
- Insert Tape:** Gently insert the *Firehouse* VHS tape into the VHS player's tape slot with the label facing upwards. The player should automatically pull the tape in.
- Select Input:** On your television, select the correct input source (e.g., AV1, Video 1) that corresponds to your VHS player connection.
- Play:** Press the "Play" button on your VHS player or its remote control. The film should begin playing.
- Adjust Volume:** Adjust the volume on your television to a comfortable listening level.
- Eject:** When the film concludes or you wish to stop viewing, press the "Stop" button, then the "Eject" button to safely remove the tape.

Note: Always ensure the tape is fully rewound before ejecting for optimal storage and future playback.

3. CARE AND MAINTENANCE

Proper care extends the life of your VHS tape and ensures consistent playback quality:

- Storage:** Store the VHS tape vertically in its original protective sleeve or case, away from direct sunlight, extreme temperatures, and high humidity.
- Dust Protection:** Keep the tape free from dust and debris. Avoid touching the magnetic tape itself.
- Rewinding:** Always rewind the tape completely to the beginning after viewing. This helps prevent tension on the tape and preserves its integrity.
- Cleaning:** If playback issues arise due to dirt, consider using a specialized VHS head cleaner tape. Do not attempt to manually clean the tape or player heads without proper knowledge.
- Avoid Magnetic Fields:** Keep the tape away from strong magnetic fields, which can damage the recorded content.

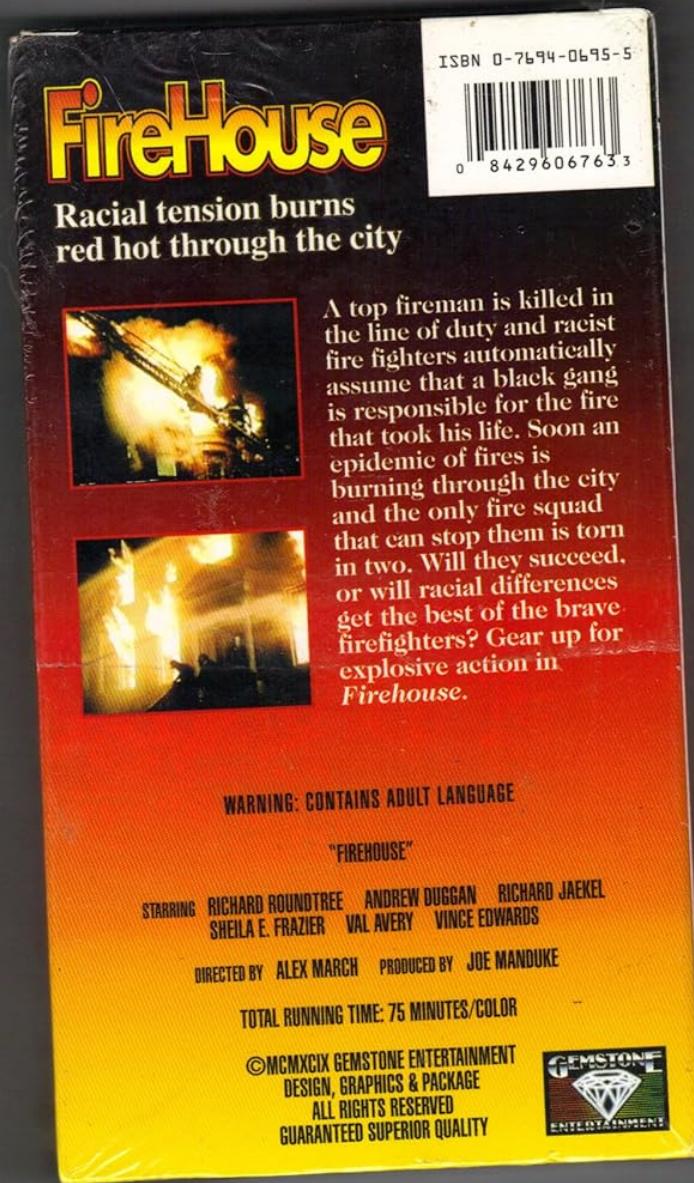


Figure 2: Back cover of the *Firehouse* VHS tape. This image provides a summary of the film's plot and production credits.

4. TROUBLESHOOTING COMMON ISSUES

If you encounter problems while playing your *Firehouse* VHS tape, refer to the following table for potential solutions:

Problem	Possible Cause	Solution
No picture or sound	Incorrect TV input, loose cables, tape not inserted correctly.	Verify TV input, check all cable connections, re-insert tape.
Fuzzy or distorted picture	Dirty VHS player heads, damaged tape, tracking issues.	Use a VHS head cleaner tape. Adjust tracking on your VHS player. Inspect tape for visible damage.
Tape gets stuck or chewed	Damaged tape, faulty VHS player mechanism.	Do not force the tape. If the player is chewing tapes, it may require professional repair.
No audio, but picture is present	Audio cables disconnected, TV volume muted, tape audio track damage.	Check audio cable connections. Ensure TV volume is up and not muted.

5. TECHNICAL SPECIFICATIONS

Key technical details for the *Firehouse* VHS tape:

- Format:** VHS Tape, NTSC
- ASIN:** 6302308224
- UPC:** 084296067633, 000799102138
- Release Date:** January 31, 1991
- Studio/Manufacturer:** XENON
- Genre:** Action & Adventure
- Package Dimensions:** 7.32 x 4.19 x 1.12 inches
- Item Weight:** 6.13 ounces

6. IMPORTANT INFORMATION

This VHS tape contains content as described on its packaging. Please be aware of the following:

- Content Warning:** As noted in editorial reviews, this film contains adult language. Viewer discretion is advised.
- Copyright:** All content on this VHS tape is protected by copyright law. Unauthorized duplication, distribution, or public performance is prohibited.
- Disclaimer:** The quality of playback may vary depending on the condition of the VHS player and the age of the tape.

7. SUPPORT INFORMATION

For further assistance regarding this product, please refer to the original retailer or the manufacturer, XENON. Due to the nature of vintage media, direct product support may be limited.

For general information about VHS playback and maintenance, numerous online resources and enthusiast communities are available. You may also consult the user manual for your specific VHS player model.

© 2024 XENON. All rights reserved.