

Paramount 6305182086


Breakdown DVD User Manual

Model: 6305182086

Brand: Paramount

1. INTRODUCTION

This manual provides essential information for the proper use and care of your *Breakdown* DVD. This action-thriller, starring Kurt Russell and Kathleen Quinlan, is presented in a widescreen format, offering an immersive viewing experience. Please read through these instructions to ensure optimal performance and longevity of your DVD.

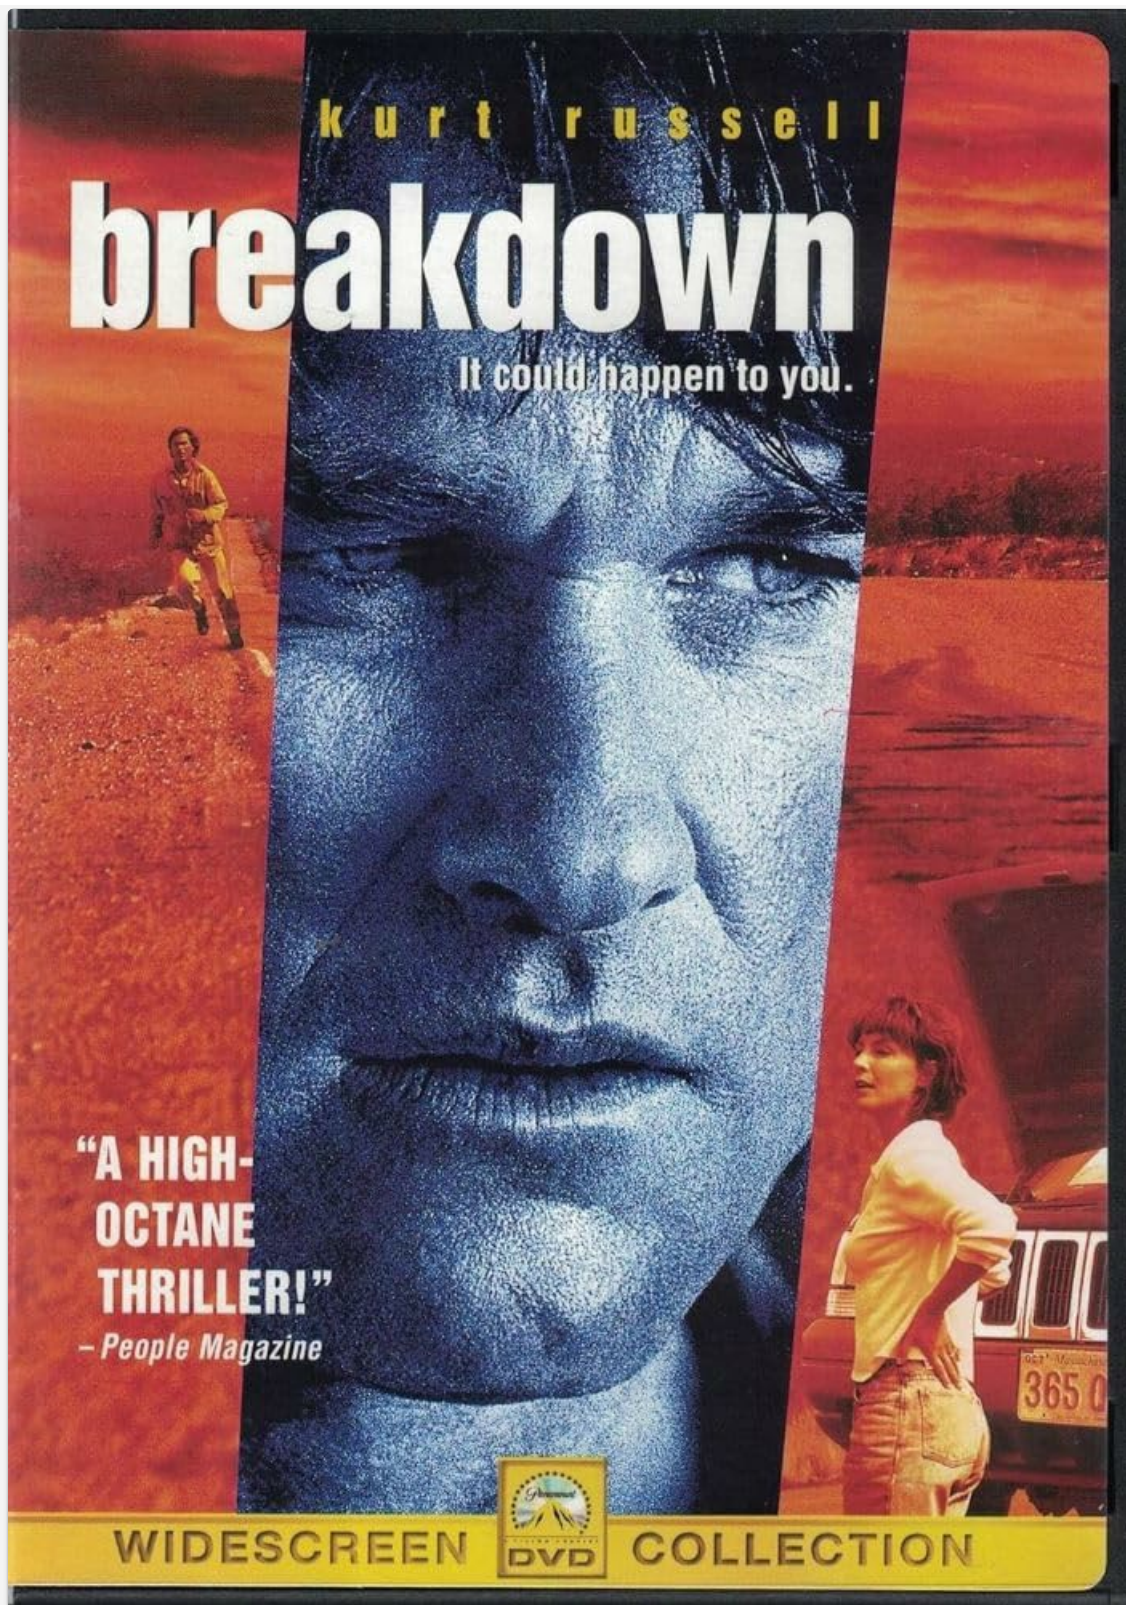

This image displays the front cover of the 'Breakdown' DVD. The artwork prominently features a large, blue-tinted close-up of actor Kurt Russell's face, looking intensely forward. To the left, a smaller image shows a man running on a desert road under an orange sky. To the right, another smaller image shows a woman standing next to a vehicle, also in a desert setting. The title 'breakdown' is in large white letters at the top, with 'Kurt Russell' above it and the tagline 'It could happen to you.' below. The bottom of the cover indicates 'WIDESCREEN DVD COLLECTION' and includes a small Paramount DVD logo.

2. SETUP

1. **Unpack the DVD:** Carefully remove the DVD disc from its case. Hold the disc by its edges to avoid touching the playing surface.
2. **Prepare Your DVD Player:** Ensure your DVD player is connected to your television or display device and powered on. Refer to your DVD player's manual for specific connection instructions.
3. **Insert the Disc:** Open the disc tray or slot of your DVD player. Gently place the *Breakdown* DVD disc into the tray with the label side facing up. Close the tray or allow the player to draw the disc in.
4. **Power On Display:** Turn on your television or display and select the correct input source (e.g., HDMI 1, AV) that corresponds to your DVD player's connection.

3. OPERATING INSTRUCTIONS

1. **Main Menu Navigation:** Once the disc loads, the main menu will typically appear. Use the arrow keys on your DVD player's remote control to navigate through options such as "Play Movie," "Scene Selection," "Audio Setup," and "Subtitles." Press the "Enter" or "OK" button to select an option.
2. **Playing the Movie:** Select "Play Movie" from the main menu to begin playback of *Breakdown*.
3. **Audio Options:** To change the audio language (English or French) or sound format (Dolby Digital 2.0 Surround, Dolby Digital 5.1), select "Audio Setup" from the main menu or use the "Audio" button on your remote during playback.
4. **Subtitle Options:** To enable or disable subtitles (Spanish), select "Subtitles" from the main menu or use the "Subtitle" button on your remote during playback.
5. **Scene Selection:** Use the "Scene Selection" option to jump to specific chapters or scenes within the movie.
6. **Playback Controls:** Use the standard playback controls on your remote (Play, Pause, Stop, Fast Forward, Rewind, Skip Chapter) as needed during the movie.

4. MAINTENANCE

- **Cleaning the Disc:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Always store the DVD in its original case when not in use to protect it from dust, scratches, and direct sunlight. Avoid exposing the disc to extreme temperatures or humidity.
- **Handling:** Always handle the disc by its edges or the center hole. Avoid touching the playing surface to prevent fingerprints and scratches.

5. TROUBLESHOOTING

- **Disc Will Not Play:**

- Ensure the disc is inserted correctly with the label side up.
 - Check if the disc is clean and free of scratches. Clean if necessary.
 - Verify your DVD player is functioning correctly by trying another known-good DVD.
- **No Picture or Sound:**
 - Check all cable connections between your DVD player and television.
 - Ensure your television is set to the correct input source.
 - Verify the volume on your TV and DVD player is turned up and not muted.
- **Skipping or Freezing:**
 - Clean the disc thoroughly.
 - Check for deep scratches on the disc surface. Severe damage may prevent proper playback.
 - Ensure your DVD player is on a stable surface and not subject to vibrations.

6. SPECIFICATIONS

Feature	Detail
Title	Breakdown
Model Number (ASIN)	6305182086
Format	DVD
Media Format	AC-3, Closed-captioned, Color, Dolby, Letterboxed, Multiple Formats, NTSC, Widescreen
Aspect Ratio	2.35:1
Run Time	1 hour and 33 minutes
Release Date	December 1, 1998
MPAA Rating	R (Restricted)
Number of Discs	1
Main Actors	Kurt Russell, Kathleen Quinlan, J.T. Walsh, M. C. Gainey, Rex Linn, Jack Noseworthy
Director	Jonathan Mostow
Languages (Audio)	English (Dolby Digital 2.0 Surround, Dolby Digital 5.1), French (Dolby Digital 2.0 Surround)
Subtitles	Spanish
Studio	Paramount
Product Dimensions	0.7 x 7.5 x 5.4 inches; 2.4 ounces

7. WARRANTY AND SUPPORT

This DVD product is manufactured to high-quality standards. For any issues related to manufacturing defects or playback problems not resolved by the troubleshooting steps, please contact the retailer from whom you purchased the DVD. For general inquiries about Paramount Home Entertainment products, please refer to the official Paramount Pictures website or customer service channels.

Please note that physical damage to the disc due to improper handling or storage is not covered by any implied warranty.