

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rounder](#) /

› [Brazil: Forró Audio CD Instruction Manual](#)

Rounder B00000039J

Brazil: Forró Audio CD Instruction Manual

Model: B00000039J

INTRODUCTION TO BRAZIL: FORRÓ

This manual provides essential information for the proper use and care of your **Brazil: Forró** Audio CD. This compilation features vibrant Forró music, a popular genre from Brazil, known for its lively rhythms and traditional instrumentation. To ensure the best listening experience and longevity of your CD, please read through the following instructions.



This image displays the album cover for the 'Brazil: Forró' Audio CD. The artwork is a distinctive woodcut illustration depicting three stylized figures, each representing a musician. The figure on the left holds what appears to be a pandeiro or similar percussion instrument. The central figure is playing an accordion, a key instrument in Forró music. The figure on the right holds

a triangle. The title 'BRAZIL: FORRO' is prominently displayed at the top in bold blue letters, with 'MUSIC FOR MAIDS AND TAXI DRIVERS' at the bottom, also in blue.

SETUP

Setting up your **Brazil: Forró** Audio CD for playback is straightforward. Follow these steps:

1. **Choose a Compatible Player:** This Audio CD is designed for playback on any standard CD player, including home stereo systems, portable CD players, car CD players, and computers with CD-ROM or DVD-ROM drives.
2. **Insert the CD:** Gently hold the CD by its edges to avoid touching the playing surface. Locate the CD tray or slot on your player. Insert the CD with the label side facing up (or as indicated by your player's instructions).
3. **Close the Tray/Slot:** If your player has a tray, gently push it back into the unit. If it's a slot-loading player, the CD will be pulled in automatically.

OPERATING INSTRUCTIONS

Once the CD is loaded, you can begin enjoying the music. Basic operation typically involves the following:

- **Play:** Press the **PLAY** button on your CD player or remote control to start playback from the beginning of the first track.
- **Pause:** Press the **PAUSE** button to temporarily stop playback. Press it again to resume.
- **Skip Tracks:** Use the **NEXT** (*forward arrow*) or **PREVIOUS** (*backward arrow*) buttons to navigate between tracks.
- **Stop:** Press the **STOP** button to end playback and reset the CD to the beginning.

Track List

The **Brazil: Forró** Audio CD features 17 tracks by various artists. The approximate timings are provided for your convenience:

1. Toinho de Alagoas - Balanco Da Canoa (2:14)
2. Duda da Passira - De Pernambuco Ao Maranhao (2:16)
3. Jose Orlando - Eu Tambem Quero Beijar (2:56)
4. Toinho de Alagoas - Bicho Da Cara Preta (1:54)
5. Heleno Dos Oito Baixos - Comeco De Verrao (2:54)
6. Toinho de Alagoas - Peca Licenca P'ra Falar De Alagoas (1:50)
7. Duda da Passira - Recordacao Da Passira (2:37)
8. Jose Orlando - Agricul Tor P'ra Frente (1:59)
9. Heleno Dos Oito Baixos - Entra E Sai (2:10)
10. Jose Orlando - Linda Menina (3:01)
11. Duda da Passira - Casa De Tauba (1:45)
12. Jose Orlando - Morena Da Palmeira (2:40)
13. Toinho de Alagoas - Carater Duro (1:33)
14. Jose Orlando - Minha Zeze (2:10)
15. Toinho de Alagoas - Sonho de Amor (1:45)
16. Toinho de Alagoas - Namoro No Escuro (1:53)

MAINTENANCE AND CARE

Proper care will extend the life of your Audio CD and ensure optimal sound quality:

- **Handling:** Always hold the CD by its outer edges or by placing a finger through the center hole. Avoid touching the shiny playing surface, as fingerprints and oils can degrade sound quality.
- **Cleaning:** If the CD becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., a microfiber cloth). Wipe from the center of the disc outwards in straight lines, rather than in a circular motion. Do not use abrasive cleaners, solvents, or harsh chemicals.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity, which can warp the disc or damage the data layer.
- **Avoid Scratches:** Be careful not to drop the CD or slide it across rough surfaces, as scratches can cause playback errors.

TROUBLESHOOTING

If you encounter issues with your Audio CD, try these common troubleshooting steps:

- **CD Skipping or Freezing:**
 - Inspect the playing surface for dirt, dust, or scratches. Clean the CD as described in the Maintenance section.
 - Ensure the CD player is on a stable, level surface to prevent vibrations.
 - Try playing another CD to determine if the issue is with the player or the specific disc.
- **No Sound:**
 - Check that your audio system is powered on and the volume is turned up.
 - Verify all audio cables are securely connected between the CD player and your amplifier/speakers.
 - Ensure the correct input source is selected on your amplifier.
- **CD Not Recognized by Player:**
 - Ensure the CD is inserted correctly (label side up).
 - Gently remove and reinsert the CD.
 - Try the CD in a different compatible player to rule out a player malfunction.

SPECIFICATIONS

Feature	Detail
Format	Audio CD
Number of Discs	1
Product Dimensions	5.6 x 0.4 x 4.9 inches
Item Weight	3.36 ounces

Original Release Date	1992
Label	Rounder
ASIN	B00000039J

WARRANTY INFORMATION

This Audio CD is manufactured to high-quality standards. For information regarding any limited warranty that may apply, please refer to the packaging or contact the manufacturer, Rounder Records, directly. Please retain your proof of purchase for any warranty claims.

SUPPORT

For further assistance or inquiries regarding your **Brazil: Forró** Audio CD, please contact the customer support channels provided by Rounder Records. You may find contact information on their official website or through the retailer where the product was purchased.