

Legacy Recordings 1974932

R. Kelly 12 Play Audio CD User Manual

Model: 1974932

INTRODUCTION

This manual provides essential instructions for the proper use and care of your R. Kelly 12 Play Audio CD. Please read this guide thoroughly to ensure optimal playback quality and longevity of your product. The 12 Play album, released in 1993, is an Audio CD format from Legacy Recordings.

SETUP

Unpacking the Audio CD

1. Carefully remove the Audio CD from its packaging. Avoid touching the playing surface of the disc.
2. Inspect the disc for any visible damage, such as scratches or cracks, before first use.
3. Place the disc back into its jewel case when not in use to protect it from dust and damage.

Disc Handling

- Always hold the CD by its edges or by placing a finger through the center hole.
- Do not touch the shiny, playable side of the disc.
- Avoid bending the disc.



Image: Front cover of the R. Kelly 12 Play Audio CD. The cover displays R. Kelly in a black sleeveless top and pants, holding a stick, against a white background with tally marks and the album title.

OPERATING INSTRUCTIONS

Playing the Audio CD

1. Open the disc tray of your CD player or insert the disc into the player's slot.
2. Ensure the label side of the CD is facing upwards (or as indicated by your specific CD player's instructions).
3. Close the disc tray or allow the player to load the disc.
4. Press the 'Play' button on your CD player or remote control.
5. Adjust the volume to your desired listening level.

Track Navigation

- Use the 'Next Track' or 'Previous Track' buttons on your CD player to skip between songs.
- To fast forward or rewind within a track, hold down the 'Fast Forward' or 'Rewind' buttons.



Image: Back cover of the R. Kelly 12 Play Audio CD. This image displays the full tracklist of the album, including song titles and durations, along with production and copyright details.

MAINTENANCE

Cleaning the Audio CD

- If the disc surface becomes dirty, gently wipe it with a soft, lint-free cloth.
- Wipe from the center of the disc outwards in a straight line, not in a circular motion.
- For stubborn smudges, use a specialized CD cleaning solution or a small amount of water. Avoid harsh chemicals or abrasive materials.
- Ensure the disc is completely dry before inserting it into a player.

Storage

- Store the Audio CD in its original jewel case or a protective sleeve when not in use.
- Keep the CD away from direct sunlight, extreme temperatures, and high humidity.
- Avoid placing heavy objects on top of the CD case, as this can cause damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Disc does not play or is not recognized.	• Disc inserted incorrectly. • Disc is dirty or scratched. • CD player lens is dirty.	• Re-insert the disc with the label side up. • Clean the disc as described in the Maintenance section. • Try playing another CD to check if the player is functioning correctly.
Audio skips or stutters.	• Disc is dirty or scratched. • CD player is on an unstable surface. • CD player lens is dirty.	• Clean the disc thoroughly. • Place the CD player on a stable, flat surface. • If the issue persists with multiple discs, consider cleaning the CD player's lens (refer to your CD player's manual).

PRODUCT SPECIFICATIONS

Title: 12 Play

Artist: R. Kelly

Format: Audio CD

Brand/Label: Legacy Recordings

Model Number: 1974932

ASIN: B00000050T

UPC: 0012414152725

Original Release Date: 1993

Number of Discs: 1

Run Time: 1 hour and 3 minutes

Product Dimensions: 5.62 x 0.33 x 4.92 inches

Item Weight: 3.84 ounces

Language: English

WARRANTY AND SUPPORT

For specific warranty information regarding your R. Kelly 12 Play Audio CD, please refer to the terms provided by the retailer at the time of purchase. As this is an audio recording, warranty typically covers manufacturing defects. For general inquiries or support related to the product, please contact the manufacturer, Legacy Recordings, or your point of purchase.

Manufacturer: Legacy Recordings

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question