

[Manuals.plus](#) /

› [Sony Legacy](#) /

› Smooth Audio CD User Manual


Sony Legacy B00000052G

Smooth Audio CD User Manual

Model: B00000052G

1. PRODUCT OVERVIEW

The Smooth Audio CD (Model B00000052G) is a music album released by Sony Legacy in 1995. This compact disc contains a collection of tracks by the artist Smooth, primarily featuring Pop, Dance Pop, and Soul genres. It is designed for playback on standard audio CD players, computers with CD-ROM drives, and other compatible devices.

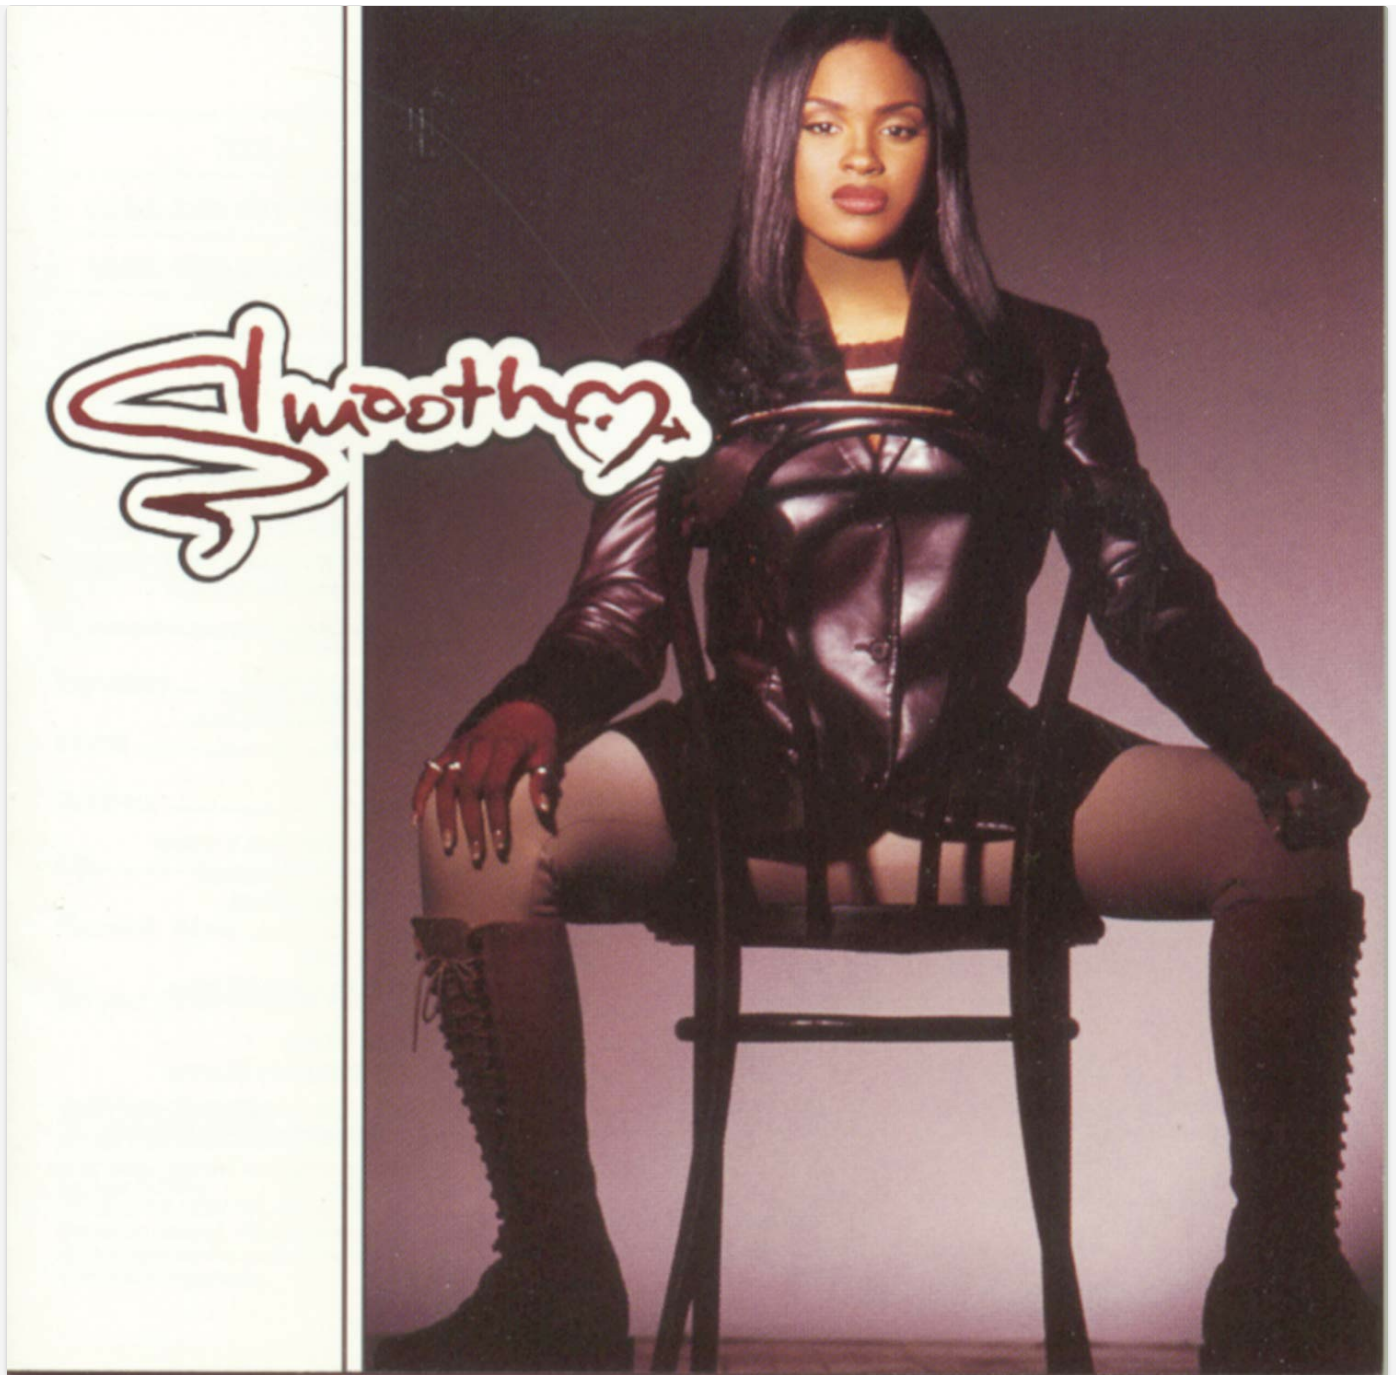

This image displays the front cover of the Smooth Audio CD. It features the artist, Smooth, seated on a chair, looking towards the viewer. The album title 'Smooth' is stylized on the left side of the cover. The overall color scheme is muted, with the artist in dark clothing against a subtle background.

2. SETUP

To prepare your Smooth Audio CD for playback, follow these steps:

1. **Unpack the CD:** Carefully remove the CD from its packaging. Ensure the disc is free from any dust or debris.
2. **Inspect the Disc:** Before insertion, visually inspect both sides of the CD for any visible scratches, smudges, or cracks. A clean, undamaged disc ensures optimal playback quality.
3. **Handle with Care:** Always hold the CD by its edges or by placing a finger through the center hole. Avoid touching the reflective surface to prevent fingerprints and scratches.

3. OPERATING INSTRUCTIONS

Playing the Smooth Audio CD is straightforward:

1. **Insert the CD:** Open the disc tray or slot of your CD player or computer. Gently place the Smooth CD into the tray or slot with the label side facing up.
2. **Close the Tray:** Close the disc tray or allow the player to automatically draw in the disc.
3. **Begin Playback:** Most CD players will automatically begin playing the first track. If not, press the 'Play' button on your device.
4. **Navigation:** Use the 'Next Track', 'Previous Track', 'Pause', and 'Stop' buttons on your player to control playback.
5. **Ejecting the CD:** When finished, press the 'Eject' button on your player to safely remove the disc.

4. MAINTENANCE AND CARE

Proper care will extend the life of your Smooth Audio CD:

- **Cleaning:** If the disc becomes dirty, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid bending the disc or placing heavy objects on it. Do not apply stickers or labels to the playing surface.

5. TROUBLESHOOTING

If you encounter issues with your Smooth Audio CD, consider the following:

Problem	Possible Cause	Solution
CD does not play or skips	Dirty or scratched disc; player malfunction	Clean the disc carefully. If scratches are deep, playback may be affected. Try the CD in another player to rule out player issues.
Sound quality is poor	Dust on disc; player's laser lens dirty	Clean the disc. If the problem persists, the player's laser lens might need cleaning (refer to your player's manual).
Disc not recognized	Disc inserted incorrectly; player incompatibility	Ensure the disc is inserted label-side up. Verify your player supports audio CDs.

6. SPECIFICATIONS

- **Product Type:** Audio CD
- **Model Number (ASIN):** B00000052G
- **Manufacturer:** Sony Legacy
- **Label:** Sony Legacy
- **Original Release Date:** 1995
- **Date First Available:** February 7, 2007
- **Run Time:** 58 minutes
- **Number of Discs:** 1
- **Language:** English

- **Product Dimensions:** 5.62 x 4.92 x 0.33 inches
- **Product Weight:** 3.84 ounces

7. SUPPORT INFORMATION

For questions regarding the content of this Audio CD, please refer to the album's liner notes or contact the record label, Sony Legacy, through their official channels. For issues related to purchase or delivery, please contact your retailer.

© 1995 Sony Legacy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question