

Blur 42876

Blur Audio CD User Manual

Model: 42876

INTRODUCTION

This user manual provides essential information for the proper use and care of your Blur Audio CD. Please read through the instructions to ensure optimal enjoyment and longevity of your product.

SETUP AND FIRST USE

1. **Unboxing:** Carefully remove the Audio CD from its packaging. Inspect the disc for any visible damage or scratches.
2. **Disc Handling:** Hold the CD by its edges or by placing a finger through the center hole to avoid touching the playing surface.
3. **Insertion:** Open the disc tray of your compatible CD player (e.g., home stereo, car CD player, computer CD/DVD drive). Place the CD with the label side facing up onto the tray spindle. Ensure it is seated correctly.
4. **Close Tray:** Gently close the disc tray. The player should automatically recognize the disc.



Figure 1: Front cover of the Blur Audio CD.

OPERATING INSTRUCTIONS

Once the CD is loaded, use your CD player's controls for playback:

- **Play/Pause:** Press the 'Play' button to start playback. Press 'Pause' to temporarily stop, and 'Play' again to resume.
- **Skip Tracks:** Use the 'Next Track' or 'Previous Track' buttons to navigate between songs.
- **Fast Forward/Rewind:** Hold down the 'Next Track' or 'Previous Track' buttons to fast forward or rewind within a song.
- **Stop:** Press the 'Stop' button to end playback and reset the disc to the beginning.



Figure 2: Back cover of the Blur Audio CD with tracklist and production details. For more information, visit www.virginrecords.com.

Tracklist

The Blur Audio CD features the following tracks:

1. Beetlebum
2. Song 2
3. Country Sad Ballad Man
4. M.O.R.
5. On Your Own
6. Theme from Retro
7. You're So Great
8. Death of a Party
9. Chinese Bombs
10. I'm Just a Killer For Your Love
11. Look Inside America
12. Strange News from Another Star
13. Movin' On
14. Essex Dogs

CARE AND MAINTENANCE

- **Cleaning:** If the disc becomes dirty, gently wipe the playing surface (the shiny side) with a soft, lint-free cloth. Wipe from the center outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the CD in its original jewel case or a suitable CD wallet to protect it from dust, scratches, and direct sunlight. Avoid exposing the disc to extreme temperatures or high humidity.
- **Handling:** Always handle the disc by its edges. Avoid bending the disc or placing heavy objects on it.

TROUBLESHOOTING

If you encounter issues with your Blur Audio CD, consider the following:

- **Disc Skipping or Not Playing:**
 - Check the disc for visible scratches, smudges, or dirt. Clean the disc as described in the 'Care and Maintenance' section.
 - Ensure the disc is correctly seated in the CD player's tray.
 - Try playing another audio CD to determine if the issue is with the player or the disc.
- **Disc Not Recognized:**
 - Verify that the disc is inserted correctly (label side up).
 - Ensure your player is compatible with standard audio CDs.
 - Restart your CD player or computer.

PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions	4.84 x 5.59 x 0.51 inches
Item Weight	3.1 ounces
Manufacturer	Wb / Parlophone
Item Model Number	42876
Original Release Date	1997
Date First Available	December 12, 2006
Label	Wb / Parlophone
ASIN	B000000WDA
Number of Discs	1

ADDITIONAL INFORMATION

For further details about the Blur Audio CD or other products, please refer to the official product page or contact the manufacturer.

This manual is for informational purposes only. Specifications are subject to change without notice.