

U2 CID U27

U2 Rattle & Hum Audio CD Instruction Manual

Model: CID U27

INTRODUCTION

This manual provides essential instructions for the proper handling, playback, and care of your U2 Rattle & Hum Audio CD. Following these guidelines will help ensure optimal audio quality and longevity of your disc.

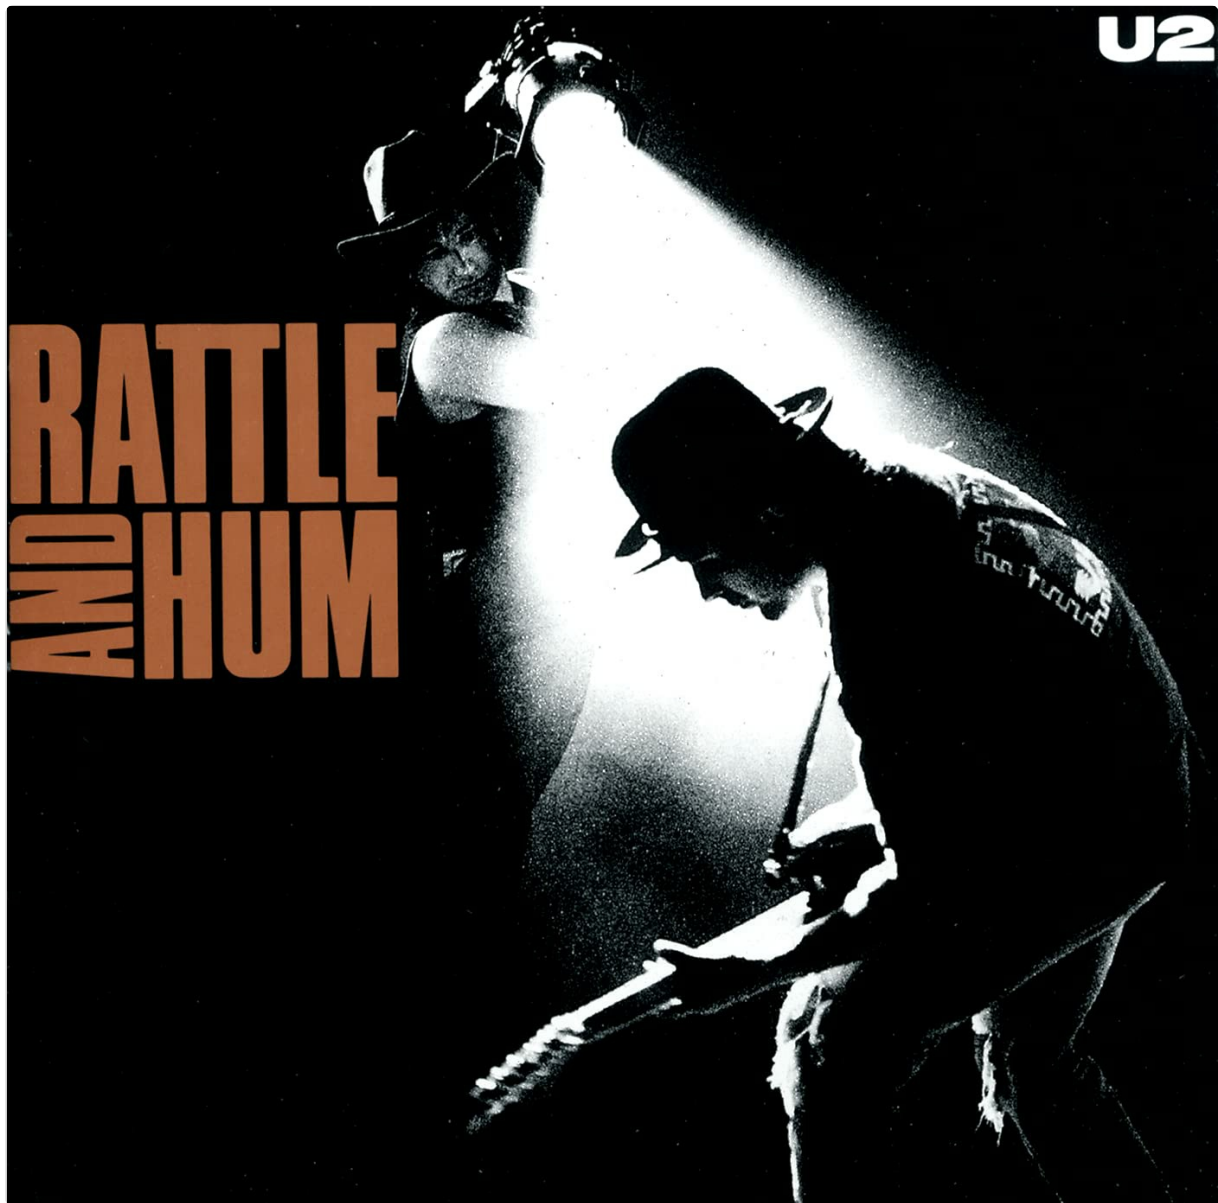


Image: Front cover of the U2 Rattle & Hum Audio CD. The cover features a black and white photograph of the band members.

SETUP

To begin enjoying your Audio CD, follow these simple steps:

1. **Unpack the CD:** Carefully remove the Audio CD from its packaging. Avoid touching the playing surface (the shiny side) of the disc.
2. **Open CD Player Tray:** Press the 'Open/Close' button on your CD player to open the disc tray.
3. **Insert the CD:** Place the CD into the disc tray with the label side facing upwards. Ensure it is seated correctly in the center of the tray.
4. **Close CD Player Tray:** Press the 'Open/Close' button again to close the disc tray. The player should now recognize the disc.
5. **Connect Audio System (if applicable):** Ensure your CD player is properly connected to your amplifier or speakers using appropriate audio cables. Refer to your CD player's and audio system's manuals for specific connection instructions.

OPERATING INSTRUCTIONS

Once the CD is loaded, you can control playback using your CD player's functions:

- **Play:** Press the 'Play' button to start playback from the beginning of the first track or the current paused position.
- **Pause:** Press the 'Pause' button to temporarily stop playback. Press 'Play' again to resume.
- **Stop:** Press the 'Stop' button to end playback and reset the disc to the beginning.
- **Skip Tracks:** Use the 'Next Track' (>>|) or 'Previous Track' (|<<) buttons to navigate between songs.
- **Fast Forward/Rewind:** Hold down the 'Fast Forward' (>>) or 'Rewind' (<<) buttons to scan through a track.
- **Volume Control:** Adjust the volume using the controls on your amplifier, receiver, or active speakers. Most CD players do not have their own volume control.

Track List

The U2 Rattle & Hum Audio CD features the following tracks:

1 HELTER SKELTER (3:07) **9 PRIDE (IN THE NAME OF LOVE)** (4:27)
2 VAN DIEMEN'S LAND (3:06) **10 ANGEL OF HARLEM** (3:49)
3 DESIRE (2:58) **11 LOVE RESCUE ME** (6:23)
4 HAWKMOON 269 (6:22) **12 WHEN LOVE COMES TO TOWN** (4:14)
5 ALL ALONG THE WATCHTOWER (4:24) **13 HEARTLAND** (5:02)

6 I STILL HAVEN'T FOUND WHAT I'M LOOKING FOR (5:53)
7 FREEDOM FOR MY PEOPLE (3:38)
8 SILVER AND GOLD (5:50)

14 GOD PART II (3:15)
15 THE STAR SPANGLED BANNER (4:43)
16 BULLET THE BLUE SKY (5:37)
17 ALL I WANT IS YOU (6:30)

BONO Vocals,
guitar, harmonica
THE EDGE Guitar
keyboards, vocals
ADAM CLAYTON Bass guitar
LARRY MULLEN Jr Drums

Produced by Jimmy Iovine
Manager: Paul McGuinness

842 299-2
CID U27
PY 900
LC0407

COMPACT
disc
DIGITAL AUDIO
A A D

0 42284 22992 0

ISLAND
© 1988 Island Records Ltd.
© 1988 Island Records Ltd.
ALL RIGHTS RESERVED. UNAUTHORISED COPYING, REPRODUCTION, HIRING, LENDING, PUBLIC PERFORMANCE AND BROADCASTING PROHIBITED

Image: Back cover of the U2 Rattle & Hum Audio CD. This image displays the full tracklist, track durations, and production credits for the album.

1. Helter Skelter (3:07)
2. Van Diemen's Land (3:06)
3. Desire (2:58)
4. Hawkmoon 269 (6:22)
5. All Along the Watchtower (4:24)
6. I Still Haven't Found What I'm Looking For (5:53)

7. Freedom for My People (:38)
8. Silver and Gold (5:50)
9. Pride (In the Name of Love) (4:27)
10. Angel of Harlem (3:49)
11. Love Rescue Me (6:23)
12. When Love Comes to Town (4:14)
13. Heartland (5:02)
14. God Part II (3:15)
15. The Star Spangled Banner (:43)
16. Bullet the Blue Sky (5:37)
17. All I Want Is You (6:30)

MAINTENANCE AND CARE

Proper care of your Audio CD will ensure its longevity and consistent sound quality:

- **Handling:** Always hold the CD by its edges or by placing a finger through the center hole. Avoid touching the shiny playing surface to prevent fingerprints and scratches.
- **Cleaning:** If the disc becomes dirty, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Use a specialized CD cleaning solution if necessary, but avoid abrasive cleaners or solvents.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep discs away from direct sunlight, high temperatures, and excessive humidity, as these conditions can cause warping or damage.
- **Avoid Bending:** Do not bend or flex the disc, as this can cause irreparable damage.

TROUBLESHOOTING

If you encounter issues during playback, consider the following common solutions:

Problem	Possible Cause	Solution
Disc does not play or is not recognized.	Disc inserted incorrectly, dirty disc, or player malfunction.	Ensure the disc is inserted label-side up. Clean the disc carefully. Try playing another CD to check if the player is functioning correctly.
Audio skips or stutters.	Scratches, dust, or smudges on the disc surface.	Clean the disc as described in the Maintenance section. Inspect for deep scratches; severely scratched discs may not play correctly.
No sound during playback.	Audio cables disconnected, amplifier/receiver off, or incorrect input selected.	Check all audio cable connections between the CD player and your audio system. Ensure your amplifier/receiver is powered on and the correct input source is selected.

Problem	Possible Cause	Solution
Disc tray will not open or close.	Obstruction or player mechanical issue.	Check for any physical obstructions. If the issue persists, consult your CD player's manual or a qualified technician.

SPECIFICATIONS

Artist: U2

Album Title: Rattle & Hum

Format: Audio CD

Model Number: CID U27

ASIN: B000001FS6

Number of Discs: 1

Language: English

Product Dimensions: 5.87 x 5.12 x 0.39 inches

Item Weight: 3.67 ounces

Label/Manufacturer: Island

Original Release Date: 1990

WARRANTY AND SUPPORT

Audio CDs are generally covered by a limited warranty against manufacturing defects. If you receive a defective disc (e.g., disc is warped, has significant playback issues not resolved by cleaning, or is physically damaged upon arrival), please contact the retailer from whom you purchased the product for assistance with a return or replacement.

For general inquiries about U2 or the Rattle & Hum album, please refer to official U2 fan resources or music information websites.