

- Manuals.plus /
- > Total /
- > Total Audio CD User Manual

Total Total

Total Audio CD User Manual

Brand: Total | Model: Total

INTRODUCTION

This manual provides essential information for the proper handling, playback, and care of your Total Audio CD. Please read these instructions carefully to ensure optimal performance and longevity of your product.



Image: The album cover for Total's debut album, featuring the group members. This image represents the product discussed in this manual.

SETUP

To begin playback, follow these steps:

1. **Unpack the CD:** Carefully remove the Audio CD from its packaging. Avoid touching the playing surface.
2. **Open CD Player Tray:** Locate the CD tray or slot on your compatible audio device (e.g., CD player, car stereo, computer drive).
3. **Insert the CD:** Place the CD into the tray or slot with the label side facing upwards. Ensure it is seated correctly.
4. **Close CD Player Tray:** Gently close the CD tray or allow the player to draw the CD into the slot.

OPERATING INSTRUCTIONS

Once the CD is loaded, you can control playback using your audio device's functions:

- **Play/Pause:** Press the "Play" button to start playback. Press "Pause" to temporarily stop and "Play" again to resume.

- **Stop:** Press the "Stop" button to end playback.
- **Skip Tracks:** Use the "Next Track" or "Previous Track" buttons to navigate between songs.
- **Fast Forward/Rewind:** Hold down the "Fast Forward" or "Rewind" buttons to scan through a track.
- **Volume Control:** Adjust the volume using the dedicated volume controls on your audio device.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Audio CD:

- **Handling:** Always hold the CD by its edges or by placing a finger through the center hole. Avoid touching the playing surface.
- **Cleaning:** If the CD becomes dirty, gently wipe the playing surface with a soft, lint-free cloth. Wipe from the center outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Prevent scratches by handling the CD carefully and storing it properly. Scratches can lead to playback errors.

TROUBLESHOOTING

If you encounter issues during playback, consider the following:

- **CD Not Playing:**
 - Ensure the CD is inserted correctly with the label side up.
 - Check if the CD player is powered on and functioning.
 - Verify the CD is clean and free from visible scratches or smudges.
- **Skipping or Stuttering:**
 - Clean the CD surface as described in the Maintenance section.
 - Check for deep scratches. Severely scratched CDs may not play correctly.
 - Ensure the CD player is on a stable surface to prevent vibrations.
- **No Sound:**
 - Check the volume level on your audio device and connected speakers/headphones.
 - Ensure all audio cables are securely connected.
 - Confirm the correct input source is selected on your audio system.

SPECIFICATIONS

Product Title	Total
Format	Audio CD
Artist/Brand	Total
Label	Bad Boy
Original Release Date	1996
Number of Discs	1

Language	English
Product Dimensions	4.88 x 5.59 x 0.47 inches
Item Weight	3.46 ounces
ASIN	B0000039Q5

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0000039Q5>

More documents and user manuals: <https://manuals.plus/>