

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [REPERTOIRE EUROPE/ZOOM](#) /
- › Easy - Audio CD User Manual

## REPERTOIRE EUROPE/ZOOM B000006YES

# Easy - Audio CD User Manual

Model: B000006YES

## INTRODUCTION

---

This manual provides essential information for the proper use, care, and maintenance of your "Easy" Audio CD by The Easybeats. This classic rock album, originally released in 1965, is presented in Audio CD format for high-quality sound reproduction.

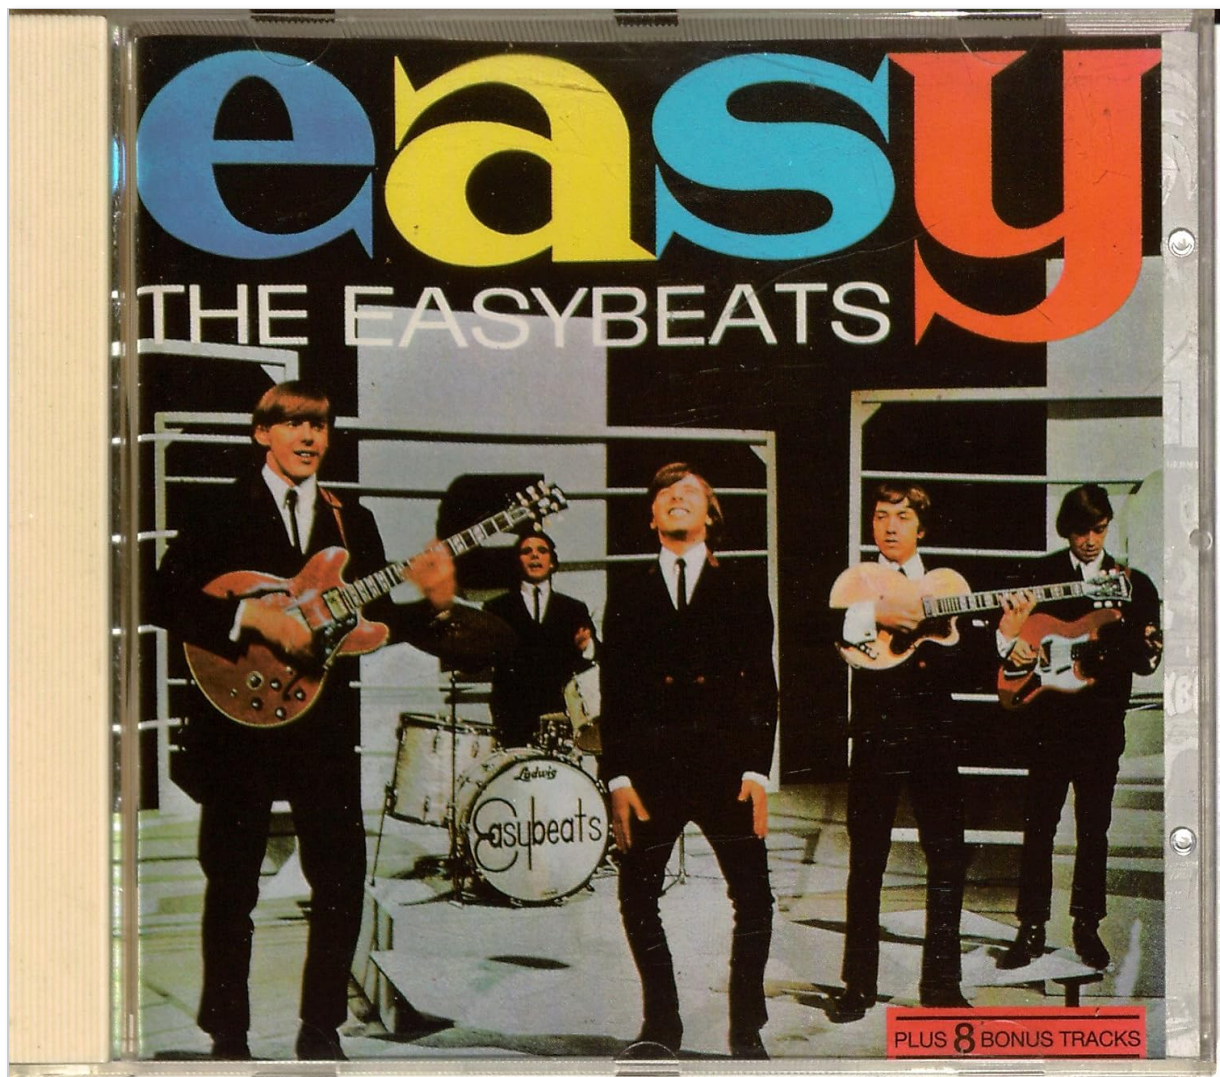


Image: The front cover of "Easy" Audio CD, featuring the band The Easybeats. The title "easy" is prominently displayed in large, colorful letters, with "THE EASYBEATS" below it. The band members are shown in a performance setting.

## SETUP

### 1. Unboxing and Initial Inspection

Carefully remove the Audio CD from its packaging. Inspect the disc for any visible damage, such as scratches, cracks, or smudges, before first use. A clean, undamaged disc ensures optimal playback quality.

### 2. Handling the CD

Always hold the CD by its edges or by placing a finger through the center hole. Avoid touching the shiny, playable surface of the disc to prevent fingerprints and scratches, which can affect playback.

## OPERATING

### 1. Inserting the CD into a Player

Open the disc tray of your CD player, car stereo, or computer's optical drive. Place the CD onto the tray with the label side facing upwards. Gently close the disc tray. Ensure the disc is seated correctly to prevent damage to the player or the disc.

### 2. Playback Controls

Once the CD is loaded, your player should automatically begin playback or display a menu. Use the standard controls on your CD player:

- **Play/Pause:** To start or temporarily stop playback.
- **Stop:** To end playback and reset the disc.
- **Skip/Next:** To advance to the next track.
- **Previous/Rewind:** To go back to the beginning of the current track or to the previous track.
- **Volume:** Adjust the audio output level.

### 3. Track List

The "Easy" Audio CD features the following tracks:

1. It's So Easy
2. She's So Fine
3. Wedding Ring
4. A Little Bit of Love
5. Come and See Her
6. I'll Make You Happy
7. Too Much
8. Sorry
9. Woman (You Make Me Feel So Good)
10. In My Book
11. Little Girl
12. Easy As Can Be
13. For My Woman (Bonus Track)
14. Say That You're Mine (Bonus Track)
15. The Old Oak Tree (Bonus Track)
16. I Can't Stand It (Bonus Track)
17. You Got It Off Me (Bonus Track)
18. She Said Alright (Bonus Track)
19. Ya Can't Do That (Bonus Track)
20. Find My Way Back Home (Bonus Track)

## MAINTENANCE

---

### 1. Cleaning the CD

If the disc surface becomes dirty or smudged, clean it gently with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, rather than in a circular motion. Do not use abrasive cleaners or solvents, as these can damage the disc. For stubborn marks, a slightly damp cloth with water or a specialized CD cleaning solution can be used, followed by drying with a clean, dry cloth.

### 2. Storage Guidelines

Store the Audio CD in its original jewel case or a protective sleeve when not in use. Keep discs away from direct sunlight, extreme temperatures, and high humidity, as these conditions can warp the disc or degrade the data layer over time. Store discs vertically to prevent bending.

## TROUBLESHOOTING

### 1. CD Not Playing

- **Check Disc Orientation:** Ensure the CD is inserted into the player with the label side facing up.
- **Clean the Disc:** Inspect the disc for dirt, dust, or fingerprints. Clean it as described in the Maintenance section.
- **Try Another Player:** Test the CD in a different CD player to determine if the issue is with the disc or your player.
- **Player Compatibility:** Ensure your player supports Audio CDs.

### 2. Skipping or Stuttering

- **Clean the Disc:** Minor smudges or dust are common causes of skipping. Clean the disc thoroughly.
- **Inspect for Scratches:** Deep scratches on the playable surface can cause permanent skipping.
- **Player Stability:** Ensure the CD player is on a stable, level surface to prevent vibrations from causing skips.

### 3. Disc Errors

- If your player displays a "Disc Error" message, first try cleaning the disc and reinserting it.
- If the error persists, the disc may be damaged or incompatible with your player.

## SPECIFICATIONS

Feature	Detail
Product Title	Easy
Format	Audio CD
Artist	The Easybeats
ASIN (Model Number)	B000006YES
Number of Discs	1
Language	English
Manufacturer/Label	REPERTOIRE EUROPE/ZOOM
Package Dimensions	5.55 x 4.97 x 0.54 inches
Item Weight	2.83 ounces
First Available Date	December 3, 2006

## WARRANTY AND SUPPORT

This Audio CD is manufactured to high-quality standards. In the unlikely event of a manufacturing defect, please contact the retailer or the label directly for assistance. Please note that physical damage due to improper handling or storage is not typically covered under warranty.

For further support or inquiries regarding this product, please refer to the contact information provided by

the label, REPERTOIRE EUROPE/ZOOM, or the original point of purchase.