

[manuals.plus](#) /

› [Estilo](#) /

› [Estilo Audio CD User Manual](#)

Estilo B000008MS2

Estilo Audio CD User Manual

Model: B000008MS2

1. PRODUCT OVERVIEW

This manual provides essential information for the Estilo Audio CD (Model: B000008MS2). It covers details about the album, basic usage, care, and specifications to ensure optimal enjoyment and longevity of your audio disc.



Image 1.1: Front cover of the Estilo Audio CD. The image shows seven band members, with the album title "Estilo" in a stylized font at the top right. The cover is encased in what appears to be a plastic wrap, indicating a new product.

2. TRACK LISTING

The Estilo Audio CD features the following tracks:

1. Amor Imposible 2
2. Luis Pulido
3. Tu Me Dijiste Adios
4. Palamo Querida
5. Sera Verdad
6. Creacion
7. Capa Mas
8. Linda Sensacion
9. Dia del Verano
10. Cuatro Copas

3. BASIC USAGE

3.1. Inserting the CD

To play the Estilo Audio CD, gently insert it into a compatible CD player (e.g., home stereo system, car CD player, computer CD/DVD drive) with the label side facing up. Ensure the disc is fully seated in the tray or slot.

3.2. Playing Tracks

Once inserted, most CD players will automatically begin playback. If not, press the 'Play' button on your device. Use the 'Next Track' or 'Previous Track' buttons to navigate between songs. The 'Pause' button will temporarily stop playback, and 'Stop' will end it.

4. CARE AND MAINTENANCE

Proper care will extend the life of your Estilo Audio CD and ensure consistent playback quality.

- **Handling:** Always hold the CD by its edges or by placing a finger through the center hole. Avoid touching the shiny playback surface to prevent fingerprints and smudges.
- **Cleaning:** If the disc becomes dirty, gently wipe it with a soft, lint-free cloth (e.g., microfiber) from the center outwards in a straight line. Do not wipe in a circular motion, as this can create scratches that affect playback. For stubborn marks, a slightly dampened cloth with water or a specialized CD cleaning solution can be used, followed by drying with a clean, dry cloth.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity, which can warp the disc or damage the data layer.
- **Avoid Scratches:** Do not place the CD on rough surfaces or stack it without protection. Deep scratches can permanently damage the disc and make it unplayable.

5. TROUBLESHOOTING

If you encounter issues while playing your Estilo Audio CD, consider the following common solutions:

- **Disc Skipping or Stuttering:**

- Check the disc for visible smudges, fingerprints, or dust. Clean the disc as described in Section 4.
- Inspect the disc for deep scratches. Minor surface scratches may not affect playback, but deep ones can cause issues.
- Ensure your CD player's lens is clean. Refer to your CD player's manual for cleaning instructions.
- Try playing the disc in another CD player to determine if the issue is with the disc or the player.

- **Disc Not Playing/Recognized:**

- Verify the disc is inserted correctly with the label side facing up.
- Ensure the CD player is powered on and functioning correctly.
- Clean the disc thoroughly.
- Some older CD players may have difficulty reading newer discs or vice-versa.

6. PRODUCT SPECIFICATIONS

Attribute	Detail
Format	Audio CD
ASIN	B000008MS2
Number of Discs	1
Label	EMI Latin
Manufacturer	EMI Latin
Package Dimensions	5.55 x 4.97 x 0.54 inches
Item Weight	2.88 ounces
Date First Available	February 10, 2007

© 2024 Estilo. All rights reserved.

For further assistance, please refer to the official website or contact your retailer.