

Legacy Recordings 2012443

Robert Johnson King Of The Delta Blues Singers Audio CD Instruction Manual

Model: 2012443 | Brand: Legacy Recordings

1. INTRODUCTION

This manual provides instructions for the Robert Johnson King Of The Delta Blues Singers Audio CD, Model 2012443. This album is a seminal collection of recordings by blues artist Robert Johnson. It features his influential works, including "Crossroad Blues" and "Come On In My Kitchen," which are foundational to the blues genre.



Image 1.1: Album cover for Robert Johnson's King Of The Delta Blues Singers Audio CD.

2. SETUP

1. **Unpack the Audio CD:** Carefully remove the CD from its packaging.
2. **Prepare CD Player:** Ensure your CD player is clean and compatible with standard audio CDs.
3. **Handle with Care:** Gently hold the CD by its edges to avoid touching the playing surface.
4. **Insert CD:** Open the CD tray or slot on your player and carefully place the CD with the label side facing up.
5. **Close Tray:** Close the CD tray or ensure the CD is fully inserted into the slot.

3. OPERATING INSTRUCTIONS

1. **Power On:** Power on your CD player and connected audio system.
2. **Select Input:** Select the CD input source on your audio receiver or amplifier.
3. **Start Playback:** Press the 'Play' button on your CD player or remote control.

- 4. **Adjust Volume:** Adjust the volume to a comfortable listening level.
- 5. **Navigate Tracks:** Use the 'Next Track' or 'Previous Track' buttons to navigate between songs.
- 6. **Stop/Pause:** Press 'Stop' to end playback or 'Pause' to temporarily halt it.

4. MAINTENANCE

- **Storage:** Store the CD in its original jewel case or a suitable protective sleeve when not in use to prevent scratches and dust accumulation.
- **Environmental Conditions:** Keep the CD away from direct sunlight, extreme temperatures, and high humidity.
- **Cleaning:** To clean the CD, gently wipe the playing surface with a soft, lint-free cloth, moving from the center outwards. Do not use abrasive materials or harsh chemicals.
- **Handling:** Avoid bending the CD or placing heavy objects on it.

5. TROUBLESHOOTING

5.1. CD Not Playing / No Sound

- **Incorrect Insertion:** Ensure the CD is inserted correctly with the label side up.
- **Power & Connections:** Verify that the CD player is powered on and properly connected to your audio system.
- **Input Selection:** Check the input selection on your audio receiver/amplifier.
- **Volume:** Confirm that the volume is not muted or set too low.

5.2. CD Skipping

- **Disc Condition:** Inspect the CD for visible scratches, smudges, or dirt on the playing surface.
- **Cleaning:** Clean the CD as described in the Maintenance section.
- **Player Stability:** Ensure the CD player is on a stable, level surface to prevent vibrations.
- **Persistent Issue:** If the issue persists, the CD may be damaged or the player may require servicing.

5.3. Disc Error Message

- **Reinsert Disc:** Remove the CD and reinsert it.
- **Disc/Player Issue:** If the error persists, the CD may be unreadable by your player, or the player itself may have an issue.

6. SPECIFICATIONS

Feature	Detail
Brand / Manufacturer	Legacy Recordings
Model Number	2012443
ASIN	B00000AG6X
Product Dimensions	5.5 x 0.4 x 4.9 inches
Item Weight	4 ounces

Number of Discs	1
Original Release Date	1998
Run Time	45 minutes
Language	English

7. WARRANTY AND SUPPORT

This product is manufactured by Legacy Recordings. For specific warranty details, please refer to the terms provided by the retailer at the time of purchase.

Return Policy: This product is eligible for a refund or replacement within 30 days, as per Amazon's standard return policy.

For further assistance or inquiries, please contact the manufacturer, Legacy Recordings, or refer to the retailer's customer support channels.

© 2024 Legacy Recordings. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question