

[Manuals.plus](#) /

› [Hasbro Gaming](#) /

› Electronic Hand Held Battleship Instruction Manual

Hasbro Gaming 4633

Electronic Hand Held Battleship Instruction Manual

INTRODUCTION

The Electronic Hand Held Battleship is a compact, portable version of the classic naval combat game. It features a palm-sized computer opponent and a remarkably easy-to-see display for strategic ship positioning and tracking hits and misses. Players can choose between automatic or manual fleet positioning and select from three different skill levels. The game includes electronic sound effects and automatic scoring to enhance the action.



This image shows the Electronic Hand Held Battleship game. On the left, the game is displayed in its original packaging, highlighting features like 'Electronic Hand-Held Battleship', '3 Games', '3 Skill Levels', and 'Battery Included'. On the right, the game unit is shown outside its packaging, revealing its blue casing, red circular display area, and yellow control buttons.

SETUP

Battery Installation

The Electronic Hand Held Battleship requires one CR2032 3V lithium button cell battery. Locate the battery compartment on the back of the device. Insert the battery correctly, ensuring the positive (+) side is facing up, as indicated by the markings inside the compartment. Close the battery compartment securely.

Caution:

- As with all small batteries, the battery used with this game should be kept away from small children who still put things in their mouths.
- If the battery is swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
- Make sure the battery is inserted correctly and follow the game and battery manufacturers' instructions.

Initial Setup

To begin playing, press the **ON + ENTER + FIRE** button. The game will prompt you to select your fleet's position (automatic or manual) and skill level. Follow the on-screen instructions to configure your game preferences.

OPERATING

Gameplay Overview

The game features 5 ships, similar to the full-size game. Hits and misses are tracked on a 9x10 square grid. Your objective is to sink all of the computer's battleships before it sinks yours.

Three different game modes are available, each requiring unique naval maneuvers to achieve the highest score.

Controls

- **ON + ENTER + FIRE Button:** (Red button) Powers the device on, confirms selections, and fires missiles.
- **Directional Buttons:** (Yellow buttons) Used to navigate the grid and select target coordinates.
- **RESET Button:** (Top right) Resets the game to its initial state.
- **GAME Button:** (Bottom center) Allows selection of different game modes.
- **SOUND Button:** (Bottom left) Toggles sound effects on or off.
- **HI SCORE Button:** (Bottom left) Displays the current high score.
- **NEW Button:** (Bottom left) Starts a new game.

Scoring

Scoring varies by skill level and gameplay actions:

- Skill Level 1 starts at 90 points.
- Skill Level 2 starts at 95 points.
- Skill Level 3 starts at 99 points.
- Lose 1 point for each missile you fire.
- Lose 3 points for each hit your ships take.
- Gain 5 points for each ship you sink in the game.

The game includes the following ship types with their corresponding hit requirements:

- **Carrier:** 5 hits
- **Battleship:** 4 hits
- **Destroyer:** 3 hits
- **Submarine:** 3 hits
- **Patrol Boat:** 2 hits

MAINTENANCE

- Keep the device clean and dry. Use a soft, dry cloth for cleaning. Avoid using abrasive cleaners or solvents.
- When not in use for extended periods, remove the battery to prevent leakage and potential damage to the device.
- Store the game in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Device does not power on:** Check battery installation and ensure the battery has sufficient charge. Replace the

battery if necessary.

- **Display is dim or unresponsive:** This often indicates a low battery. Replace the battery with a new CR2032 3V lithium button cell.
- **Game freezes or behaves erratically:** Try resetting the device by pressing the **RESET** button. If the issue persists, remove and reinsert the battery.
- For persistent issues not covered here, please refer to the manufacturer's support information.

SPECIFICATIONS

Product Dimensions	5.5 x 10.5 x 1 inches
Item Weight	0.64 ounces
ASIN	B00000IWIO
Item Model Number	4633
Manufacturer Recommended Age	8 - 12 years
Batteries	1 AAA batteries required. (included)
Manufacturer	Hasbro Games

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Electronic Hand Held Battleship, please contact Hasbro Gaming directly. Refer to the product packaging or Hasbro Gaming's official website for the most current contact details and support resources.

You can visit the Hasbro Gaming Store for more information:[Hasbro Gaming Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question