

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fisher-Price](#) /

› [Fisher-Price Brilliant Basics Corn Popper Instruction Manual](#)

Fisher-Price 72011

Fisher-Price Brilliant Basics Corn Popper Instruction Manual

Model: 72011

1. PRODUCT OVERVIEW

The Fisher-Price Brilliant Basics Corn Popper is a classic push toy designed to encourage movement and provide engaging play for toddlers. As the toy is pushed, brightly colored balls pop around inside a clear dome, creating exciting sounds and action.

Key Features:

- Classic push toy fun
- Exciting ball-popping sounds and action
- Sturdy design for new walkers



Figure 1: Front view of the Fisher-Price Brilliant Basics Corn Popper.

2. SETUP

The Fisher-Price Brilliant Basics Corn Popper requires minimal assembly. The handle comes in two sections and attaches to the main body of the toy.

1. Unpack all components from the packaging. You should have the main corn popper unit, two handle sections, and a small bag containing screws.
2. Connect the two handle sections by aligning the ends and pushing them firmly together until they click into place. Ensure the decorative side of the handle is facing forward.
3. Attach the assembled handle to the main corn popper unit. Align the bottom of the handle with the designated slots on the back of the corn popper unit. Push down firmly until the handle is securely seated.
4. Secure the handle to the main unit using the provided screws. Insert the screws into the designated holes

on the back of the corn popper unit where the handle connects, and tighten them with a Phillips head screwdriver (not included).

5. Verify that all connections are secure before allowing a child to use the toy.



Figure 2: Side view of the Corn Popper, illustrating the handle and main unit.

3. OPERATING INSTRUCTIONS

The Corn Popper is designed for simple, intuitive play.

1. Ensure the toy is fully assembled and all screws are tightened.
2. Place the Corn Popper on a flat, clear surface.

3. Encourage the child to grasp the handle firmly.
4. Guide the child to push the toy along the floor. As the wheels turn, the internal mechanism will cause the colorful balls inside the clear dome to pop and create sounds.
5. The faster the toy is pushed, the more active the ball-popping action will be.



Figure 3: A child demonstrating the use of the Corn Popper.

4. MAINTENANCE

To ensure the longevity and safe operation of your Corn Popper, follow these maintenance guidelines:

- **Cleaning:** Wipe the toy with a damp cloth and mild soap. Do not immerse in water. Ensure the toy is completely dry before storage or next use.
- **Inspection:** Regularly check for any loose parts, cracks, or damage. Ensure the handle is securely attached and the wheels spin freely.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.
- **Battery Replacement:** If your model includes electronic features (e.g., sounds or lights), it requires 3 AA batteries. To replace, locate the battery compartment (usually on the underside of the main unit), open it with a Phillips head screwdriver, insert new batteries observing polarity (+/-), and securely close the compartment. Dispose of old batteries responsibly.

5. TROUBLESHOOTING

If you encounter issues with your Corn Popper, refer to the following common solutions:

- **Balls not popping or electronic features not working:**
 - If your model has electronic features (sounds/lights), ensure fresh 3 AA batteries are correctly installed.
 - Ensure the toy is being pushed forward on a flat surface. The mechanical popping mechanism relies on wheel rotation.
 - Check for any obstructions in the clear dome or around the wheels that might hinder the balls' movement.
 - Verify that the handle is securely attached, as a loose handle might affect the toy's stability and the effectiveness of the popping action.
- **Wheels not turning smoothly:**
 - Inspect the wheels for any hair, string, or debris that may be tangled around the axles. Carefully remove any obstructions.
 - Ensure the toy is used on appropriate surfaces. Rough or very soft surfaces (like thick carpet) may impede smooth wheel movement.
- **Loose handle:**
 - Re-tighten the screws securing the handle to the main unit.
 - Ensure the two handle sections are firmly connected.

6. SPECIFICATIONS

Product Dimensions	6 x 8 x 23.25 inches
Item Weight	1.26 pounds
Model Number	72011
ASIN	B00000IZOU
Manufacturer Recommended Age	12 months - 6 years
Batteries	3 AA batteries required.

Release Date	June 12, 2006
Manufacturer	Fisher-Price

7. WARRANTY AND SUPPORT

For warranty information, product registration, or further support, please visit the official Fisher-Price website or contact their customer service department. Keep your purchase receipt for warranty claims.

Online Support: www.fisher-price.com

Customer Service: Refer to the Fisher-Price website for regional contact information.