

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nintendo](#) /

› [Game Boy Color - Atomic Purple User Manual](#)

Nintendo CGB-001

Game Boy Color - Atomic Purple User Manual

Model: CGB-001 | Brand: Nintendo

INTRODUCTION

Welcome to the world of portable gaming with your new Game Boy Color - Atomic Purple. This handheld system, an upgraded version of the original Game Boy, offers a vibrant color display and enhanced processing power for an immersive gaming experience. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.

PRODUCT OVERVIEW

The Game Boy Color features an 8-bit CPU and a small LCD screen capable of displaying 56 colors simultaneously from a 32,000-color palette. Its translucent Atomic Purple casing allows a glimpse into the internal components, giving it a distinctive "Glacier" look. The system is compatible with the entire library of original Game Boy games, in addition to its own dedicated Game Boy Color titles.



Figure 1: The Game Boy Color Atomic Purple console, shown alongside an external battery pack and a power adapter. This image highlights the translucent design of the console.



Figure 2: A close-up view of the Game Boy Color Atomic Purple console with a game cartridge partially inserted into the slot at the top. This demonstrates how game cartridges are loaded into the device.

SETUP

1. Battery Installation

The Game Boy Color requires two (2) AA batteries for operation. These batteries are typically included with your purchase.

1. Locate the battery compartment cover on the back of the Game Boy Color.
2. Slide the cover downwards to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks securely into place.

2. Inserting a Game Cartridge

1. Ensure the Game Boy Color is powered off.
2. Hold the game cartridge with the label facing the front of the Game Boy Color.
3. Gently slide the cartridge into the slot at the top of the console until it is fully seated. Do not force the cartridge.

OPERATING

1. Powering On/Off

- To power on the Game Boy Color, slide the POWER switch located on the top-left side of the console to the "ON" position. The power indicator light will illuminate.
- To power off, slide the POWER switch to the "OFF" position.

2. Basic Controls

Control	Function
D-Pad (Directional Pad)	Moves characters or navigates menus (Up, Down, Left, Right).
A Button	Confirms selections, performs primary actions (e.g., jump, attack).
B Button	Cancels selections, performs secondary actions (e.g., run, special move).
START Button	Pauses game, opens in-game menus.
SELECT Button	Selects options, performs specific in-game functions.
Volume Dial	Adjusts the sound volume. Located on the left side of the console.
Headphone Jack	For private listening with 3.5mm headphones. Located on the bottom of the console.

MAINTENANCE

1. Cleaning

- Use a soft, dry cloth to clean the exterior of the Game Boy Color.
- For stubborn dirt, slightly dampen the cloth with water. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaners, as these can damage the casing or screen.
- To clean game cartridge contacts, use a cotton swab lightly dampened with isopropyl alcohol. Allow to dry completely before reinserting.

2. Battery Care

- Remove batteries if the Game Boy Color will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

3. Storage

- Store the Game Boy Color in a cool, dry place, away from direct sunlight and extreme temperatures.
- Avoid placing heavy objects on the console to prevent damage to the screen or casing.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Game Boy Color does not power on.	<ul style="list-style-type: none">Check if batteries are inserted correctly and have sufficient charge. Replace with new AA batteries if necessary.Ensure the POWER switch is fully in the "ON" position.
No sound or distorted sound.	<ul style="list-style-type: none">Adjust the Volume Dial on the left side of the console.If using headphones, ensure they are fully plugged into the headphone jack and are functioning correctly.The internal speaker may be faulty. If issues persist, professional repair may be required.
Game does not load or freezes.	<ul style="list-style-type: none">Ensure the game cartridge is fully and correctly inserted into the slot.Clean the contacts on the game cartridge and inside the Game Boy Color's cartridge slot using a cotton swab and isopropyl alcohol.Try a different game cartridge to determine if the issue is with the console or the specific game.
Screen displays lines or is blank.	<ul style="list-style-type: none">This can sometimes indicate a loose connection or damage to the LCD screen. Gently press around the screen edges.Ensure the console has adequate power from fresh batteries.If the problem persists, the screen may require professional repair or replacement.

SPECIFICATIONS

- Model Number:** CGB-001
- Dimensions:** 5.04 x 1.57 x 1.02 inches
- Weight:** 3.52 ounces
- Power Source:** 2 AA batteries (included)
- CPU:** 8-bit processor
- Display:** LCD, capable of displaying 56 colors simultaneously from a 32,000-color palette
- Release Date:** November 18, 1998
- Manufacturer:** Nintendo

WARRANTY AND SUPPORT

For specific warranty information regarding your Game Boy Color, please refer to the documentation included with your original purchase. As this is a legacy product, warranty terms may vary depending on the seller and region.

For further support, including technical assistance or inquiries about replacement parts, please visit the official Nintendo support website or contact their customer service. You can often find helpful resources, FAQs, and community forums online.

Note: Due to the age of the product, direct manufacturer support for repairs may be limited. Independent repair services or online communities may offer solutions for common issues.

