

[Manuals.plus](#) /

› [Cuisinart](#) /

› Cuisinart LPP Little Pro Plus 3-Cup Food Processor and Juicer User Manual

Cuisinart LPP Little Pro Plus

Cuisinart LPP Little Pro Plus 3-Cup Food Processor and Juicer User Manual

Model: LPP Little Pro Plus

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- To protect against electrical hazards, do not immerse the motor base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands and utensils away from the cutting blade during operation to prevent personal injury and/or damage to the food processor.
- The cutting blade is sharp. Handle with care.
- Ensure all parts are correctly assembled and locked before operation. The appliance features a safety interlock system.

PRODUCT OVERVIEW

The Cuisinart LPP Little Pro Plus is a versatile kitchen appliance designed for food processing and juicing. It includes several components for various tasks.



Image: The Cuisinart LPP Little Pro Plus 3-Cup Food Processor and Juicer, shown assembled with the processing bowl and lid. This compact appliance features a white finish and is ready for various kitchen tasks.

Components:

- **Motor Base:** The main power unit.
- **Work Bowl (3-cup capacity):** For processing ingredients.
- **Work Bowl Cover:** With a feed tube for adding ingredients.
- **Chopping/Mixing Blade:** For chopping, mincing, puréeing, and mixing.
- **Reversible Slicing/Shredding Disc:** For slicing and shredding.
- **Dough Blade:** For kneading small batches of dough.
- **Citrus Juicer Attachment:** Includes a reamer, strainer, and cover for extracting juice from citrus fruits.
- **Juicing Cones:** Three different sizes for various citrus fruits.

SETUP AND ASSEMBLY

Proper assembly is crucial for safe and effective operation. Always ensure the unit is unplugged before assembly or disassembly.

Food Processor Assembly:

1. Place the motor base on a clean, dry, flat surface.
2. Fit the work bowl onto the motor base, aligning the handle with the front of the base, then twist clockwise until it locks into place.
3. Carefully place the desired blade (chopping/mixing or dough blade) or disc (slicing/shredding) onto the center stem in the work bowl. Ensure it sits securely.
4. Add ingredients to the work bowl.
5. Place the work bowl cover onto the work bowl, aligning the tab on the cover with the slot on the work bowl handle. Twist clockwise until it locks. The safety interlock must engage for the unit to operate.

Citrus Juicer Assembly:

1. Assemble the food processor work bowl and cover as described above, but without any blades or discs.
2. Place the juicer attachment (strainer) into the work bowl.
3. Select the appropriate juicing cone (reamer) for your citrus fruit and place it onto the strainer.
4. Place the juicer cover over the reamer.

OPERATING INSTRUCTIONS

Always ensure the unit is properly assembled and locked before plugging it in and operating.

Food Processing:

1. After assembling the food processor with the desired blade or disc and ingredients, plug the unit into a standard electrical outlet.
2. Use the 'ON' or 'PULSE' setting to operate. The 'PULSE' setting provides greater control for chopping and dicing.
3. For continuous operation, select 'ON'. For short bursts, use 'PULSE'.
4. When using the slicing/shredding disc, feed ingredients through the feed tube using the food pusher. Never use your fingers.
5. Do not overload the work bowl. The maximum capacity is 3 cups for most ingredients.
6. When finished, turn the unit 'OFF' and unplug it before disassembling.

Citrus Juicing:

1. Assemble the juicer attachment as described in the Setup section.
2. Plug the unit into an electrical outlet.
3. Cut citrus fruits (lemons, limes, oranges, grapefruits) in half.
4. Place a fruit half onto the reamer and press down gently. The motor will activate, and juice will flow into the work bowl.
5. Continue until all juice is extracted.
6. When finished, turn the unit 'OFF' and unplug it before disassembling and cleaning.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance. Always unplug the unit before cleaning.

Cleaning Instructions:

- **Motor Base:** Wipe clean with a damp cloth. Never immerse the motor base in water or other liquids.
- **Work Bowl, Cover, Blades, Discs, and Juicer Parts:** These parts are dishwasher safe (top rack recommended). Alternatively, hand wash them in warm, soapy water. Rinse thoroughly and dry.
- Handle blades and discs with extreme care as they are very sharp.
- For stubborn food residue, soak parts in warm, soapy water before cleaning.

Storage:

Store the assembled unit or its components in a dry, safe place, out of reach of children.

TROUBLESHOOTING

If you encounter issues with your Cuisinart LPP Little Pro Plus, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; parts not assembled correctly; safety interlock not engaged.	Ensure unit is plugged in. Check that the work bowl and cover are correctly locked into place.
Motor stops during operation.	Overload; motor overheating.	Turn off and unplug. Remove some ingredients. Let the motor cool down for 10-15 minutes before restarting.
Food is unevenly processed.	Too many ingredients; ingredients not cut to uniform size.	Process in smaller batches. Cut ingredients into similar-sized pieces before processing. Use the 'PULSE' function for better control.
Juicer leaks.	Juicer attachment not seated correctly.	Ensure the juicer strainer is properly seated in the work bowl and the work bowl is locked onto the base.

If the problem persists after trying these solutions, contact Cuisinart Customer Service.

SPECIFICATIONS

- **Model:** LPP Little Pro Plus
- **Brand:** Cuisinart
- **Capacity:** 3-Cup Work Bowl
- **Wattage:** 300 watts
- **Material:** Stainless Steel (Blade), Durable Plastic (Housing, Bowl)
- **Color:** White
- **Special Feature:** Safety Lock System
- **Included Components:** Chopping Blade, Container, Lid, Juicer Attachment, Juicing Cones
- **Product Care:** Hand Wash recommended for some parts, Dishwasher Safe (top rack) for others.

WARRANTY AND SUPPORT

Warranty Information:

The Cuisinart LPP Little Pro Plus comes with a **3-year limited warranty** on the appliance and a **5-year warranty** on the motor from the date of purchase. This warranty covers defects in materials and workmanship under normal home use. It does not cover damage resulting from accident, misuse, abuse, commercial use, or unauthorized modification.

Customer Support:

For warranty claims, technical assistance, or to purchase replacement parts, please contact Cuisinart Customer Service. Visit the official Cuisinart website for up-to-date contact information and support resources.

Website: www.cuisinart.com

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question