

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Victor](#) /
- › [76.1 Mhz Inter FM Super Duper Jungle Pre](#)

Victor VICP-68642

76.1 Mhz Inter FM Super Duper Jungle Pre - Audio CD User Guide

Model: VICP-68642

1. INTRODUCTION

This user guide provides essential information for the 76.1 Mhz Inter FM Super Duper Jungle Pre Audio CD. This disc features a Japanese exclusive collection of 70's and 80's disco tracks, compiled for an immersive listening experience. Please read this manual carefully to ensure proper handling and enjoyment of your audio CD.

2. PRODUCT OVERVIEW

The 76.1 Mhz Inter FM Super Duper Jungle Pre Audio CD is a standard compact disc designed for playback on compatible audio equipment. It contains a curated selection of disco music from the 1970s and 1980s, presented as a non-stop mix. The album art, as shown below, features a distinctive design reflecting the compilation's theme.

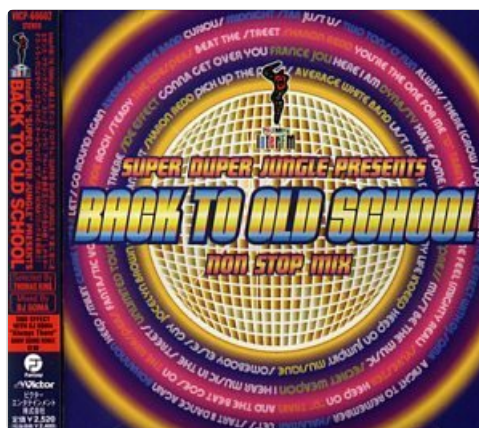


Image 2.1: Front cover of the 76.1 Mhz Inter FM Super Duper Jungle Pre Audio CD. The cover displays the title "BACK TO OLD SCHOOL" prominently, with "SUPER DUPER JUNGLE PRESENTS" above it. The background features concentric circles in shades of orange and purple, with various track titles and artist names spiraling outwards.

3. SETUP

To begin listening to your Audio CD, follow these simple steps:

1. **Prepare your CD Player:** Ensure your CD player, car stereo, or computer's optical drive is clean and powered on.
2. **Open the Disc Tray:** Press the Eject button on your CD player to open the disc tray.
3. **Insert the CD:** Carefully hold the CD by its edges to avoid touching the playing surface. Place the CD into the disc tray with the label side facing upwards.
4. **Close the Disc Tray:** Gently push the disc tray back into the player or press the Eject button again to close it.
5. **Select Input:** If your audio system has multiple inputs, ensure the correct input (e.g., "CD" or "Disc") is selected.

4. OPERATING INSTRUCTIONS

Once the CD is loaded, you can control playback using your CD player's standard functions:

- **Play/Pause:** Press the **PLAY** or **PLAY/PAUSE** button to start or temporarily stop playback.
- **Stop:** Press the **STOP** button to end playback and reset the disc to the beginning.
- **Skip Tracks:** Use the **SKIP FORWARD** (>>|) or **SKIP BACKWARD** (|<<) buttons to navigate between tracks.
- **Fast Forward/Rewind:** Hold down the **FAST FORWARD** or **REWIND** buttons to quickly scan through the audio.
- **Volume Control:** Adjust the volume using the volume controls on your audio system or amplifier.

5. MAINTENANCE AND CARE

Proper care will extend the life of your Audio CD and ensure optimal sound quality:

- **Handling:** Always hold the CD by its outer edges or by inserting a finger through the center hole. Avoid touching the shiny playing surface.
- **Cleaning:** If the CD becomes dirty, gently wipe it with a soft, lint-free cloth (e.g., a microfiber cloth) in a straight line from the center to the outer edge. Do not wipe in a circular motion. Use a specialized CD cleaning solution if necessary, but avoid abrasive cleaners or solvents.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Do not place the CD on rough surfaces or expose it to sharp objects that could scratch the playing surface.

6. TROUBLESHOOTING

If you encounter issues while playing your Audio CD, consider the following:

- **CD Not Playing:**
 - Ensure the CD is inserted correctly with the label side up.
 - Check if the CD player is powered on and the correct input is selected.
 - Inspect the CD for visible damage or excessive dirt. Clean if necessary.
 - Try playing another audio CD to determine if the issue is with the player or the disc.
- **Skipping or Stuttering:**
 - Clean the CD thoroughly as described in the Maintenance section.
 - Check for deep scratches on the playing surface. Severe scratches may prevent proper playback.
 - Ensure the CD player is on a stable, level surface to prevent vibrations.
- **No Sound:**

- Verify that your audio system's volume is turned up and not muted.
- Check all cable connections between the CD player and your amplifier/speakers.
- Ensure the correct audio input is selected on your amplifier.

7. SPECIFICATIONS

Feature	Detail
Format	Audio CD
Number of Discs	1
ASIN	B00000JAFB
Date First Available	November 1, 2006
Package Dimensions	5.55 x 4.97 x 0.54 inches
Item Weight	2.83 ounces

8. WARRANTY AND SUPPORT

This Audio CD is manufactured to high-quality standards. In the unlikely event of a manufacturing defect, please contact the retailer or distributor from whom you purchased the product for assistance. Keep your proof of purchase for any warranty claims.

For general inquiries regarding the content or production of this album, please refer to the contact information provided by the record label, Victor, typically found on the CD packaging or their official website.

