

[Manuals.plus](#) /

› [Capcom](#) /

› Capcom 1942 Game Boy Color Instruction Manual

Capcom Game Boy Color

Capcom 1942 Game Boy Color Instruction Manual

INTRODUCTION

This manual provides essential information for playing 1942 on the Game Boy Color system. It covers game setup, basic controls, gameplay mechanics, and maintenance tips to ensure an optimal gaming experience.

1942 is a classic vertical-scrolling shooter developed by Capcom, where players pilot a P-38 Lightning aircraft to combat enemy forces across various stages.

SETUP

Inserting the Game Pak

1. Ensure your Game Boy Color system is powered off.
2. Hold the 1942 Game Pak with the label facing forward.
3. Gently slide the Game Pak into the Game Pak slot on the top of your Game Boy Color system until it clicks into place.

Powering On

1. With the Game Pak securely inserted, slide the POWER switch on your Game Boy Color system to the "ON" position.
2. The Capcom logo and game title screen should appear. If not, ensure the Game Pak is fully inserted and the system has fresh batteries.



Image: The 1942 Game Boy Color game cartridge and its packaging, illustrating the product for identification.

OPERATING INSTRUCTIONS

Basic Controls

- **Directional Pad (D-Pad):** Moves your aircraft left, right, up, and down.
- **A Button:** Fires your main weapon (machine gun). Hold down for continuous fire.
- **B Button:** Performs a special maneuver (Loop). This allows you to temporarily avoid enemy fire. Limited uses per level.
- **START Button:** Pauses the game and accesses the in-game menu.
- **SELECT Button:** Not used during gameplay in 1942.

Gameplay Overview

In 1942, you control a P-38 Lightning fighter plane. Your objective is to shoot down enemy aircraft and destroy ground targets while avoiding incoming fire. The game progresses through various levels, each culminating in a boss battle.

Power-Ups

Collect power-up items dropped by certain enemy planes to enhance your aircraft's capabilities, such as increasing firepower or gaining additional loops.

Continuing and Saving Progress

The game features unlimited continues, allowing you to restart from the beginning of the current level after your aircraft is destroyed. Progress can be saved using a password system, which is typically displayed after completing certain stages. Note down these passwords to resume your game later.



Image: A close-up view of the 1942 Game Boy Color game cartridge, showing the label and physical form factor.

MAINTENANCE

Cleaning the Game Pak

To ensure proper function, keep the Game Pak's connector pins clean. If the game fails to start, gently clean the

gold-colored connector pins on the bottom of the Game Pak with a cotton swab lightly dampened with isopropyl alcohol. Allow it to dry completely before reinserting into the Game Boy Color.

Storage

Store the Game Pak in its original case or a protective sleeve when not in use to prevent dust and scratches. Avoid exposing the Game Pak to extreme temperatures, direct sunlight, or moisture.

TROUBLESHOOTING

Game Does Not Start

- Ensure the Game Boy Color system is powered on and has fresh batteries.
- Remove the Game Pak and reinsert it firmly into the slot.
- Clean the Game Pak's connector pins as described in the Maintenance section.

Graphics or Sound Issues

- If graphics are distorted or sound is absent/garbled, try reinserting the Game Pak.
- Ensure the Game Boy Color's volume is turned up and the headphone jack is clear.

SPECIFICATIONS

Feature	Detail
Product Type	Video Game
Platform	Game Boy Color
Rating	Everyone
Item Weight	2.4 ounces
Product Dimensions	4.9 x 0.9 x 4.9 inches
Manufacturer	Valley Media - Woodland Video Games (Published by Capcom)
ASIN	B00000K1WG

WARRANTY AND SUPPORT

As this is a legacy product, direct manufacturer support or warranty may no longer be available. For general Game Boy Color system troubleshooting or historical information regarding Capcom titles, please refer to official Nintendo or Capcom archives, or reputable retro gaming communities.

