

[Manuals.plus](#) /

› [Aftermath](#) /

› Dr. Dre 2001 Audio CD Instruction Manual

## Aftermath 490486

# Dr. Dre 2001 Audio CD Instruction Manual

## INTRODUCTION


---

This manual provides essential information for the proper use and care of your Dr. Dre 2001 Audio CD. Please read these instructions carefully to ensure optimal listening experience and longevity of your product.

## PRODUCT OVERVIEW

---

The Dr. Dre 2001 Audio CD is a standard compact disc containing the album "2001" by Dr. Dre. It is designed for playback on any compatible audio CD player.

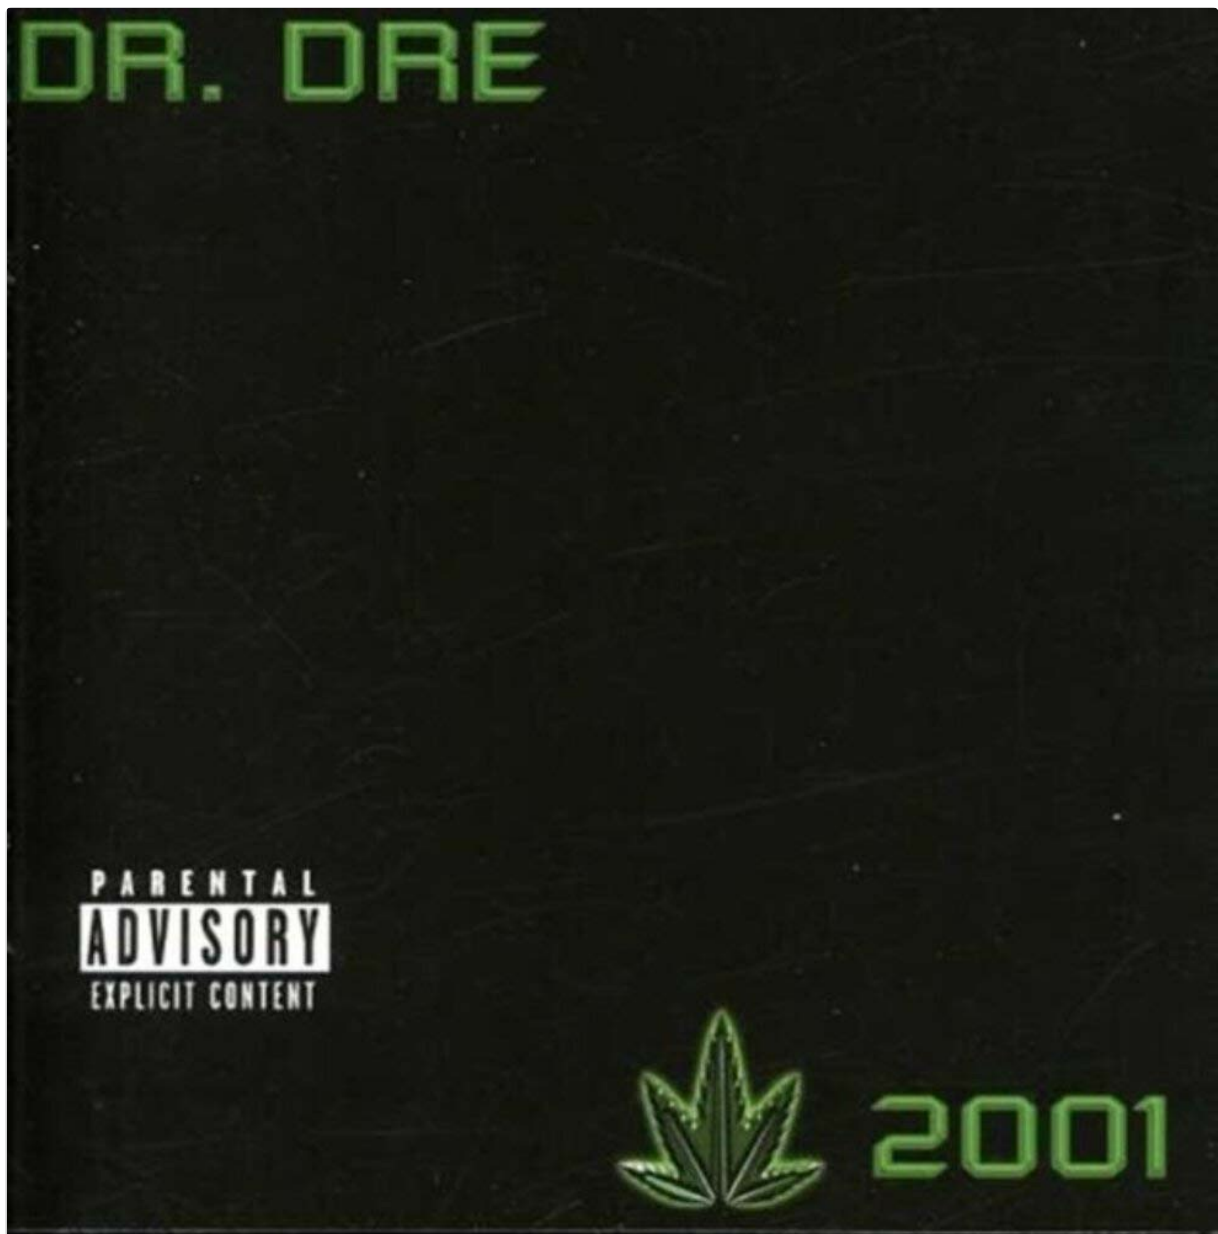

*Image: Front cover of the Dr. Dre 2001 Audio CD. The cover features the album title and artist name.*

## SETUP AND INSTALLATION

---

1. **Unpack the CD:** Carefully remove the Audio CD from its packaging. Avoid touching the playing surface.
2. **Open CD Player Tray:** Press the 'Open/Close' button on your CD player to open the disc tray.
3. **Insert CD:** Place the CD into the tray with the label side facing upwards. Ensure it is seated correctly in the center of the tray.
4. **Close CD Player Tray:** Press the 'Open/Close' button again to close the tray. The CD player will typically begin reading the disc automatically.

## OPERATION

---

- **Play/Pause:** Press the 'Play' button to start playback. Press 'Pause' to temporarily stop, and 'Play' again to resume.
- **Skip Tracks:** Use the 'Next Track' or 'Previous Track' buttons to navigate between songs.

- **Fast Forward/Rewind:** Hold down the 'Next Track' or 'Previous Track' buttons during playback to fast forward or rewind within a track.
- **Stop:** Press the 'Stop' button to end playback and reset the CD to the beginning.
- **Eject:** Press the 'Open/Close' or 'Eject' button to remove the CD from the player.

## CARE AND MAINTENANCE

- **Handling:** Always hold the CD by its edges or by placing a finger through the center hole. Avoid touching the playing surface to prevent fingerprints and scratches.
- **Cleaning:** If the CD becomes dirty, gently wipe the playing surface with a soft, lint-free cloth. Wipe from the center outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Bending:** Do not bend the CD, as this can cause irreparable damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
CD skips or stutters during playback.	Dirt, dust, or scratches on the playing surface.	Clean the CD carefully with a soft, lint-free cloth. Inspect for deep scratches. Try playing on a different CD player.
CD does not play or is not recognized.	CD inserted incorrectly, dirty CD, or CD player malfunction.	Ensure the CD is inserted label-side up. Clean the CD. Check if the CD player is functioning correctly with other discs.
Sound quality is poor.	Dirty CD, faulty audio cables, or speaker issues.	Clean the CD. Check all audio connections between the CD player and amplifier/speakers.

## SPECIFICATIONS

**Product Type:** Audio CD

**Artist:** Dr. Dre

**Album Title:** 2001

**Manufacturer/Label:** Aftermath

**Item Model Number:** 490486

**Number of Discs:** 1

**Original Release Date:** 1999

**Product Dimensions:** 5.12 x 5.67 x 0.39 inches

**Product Weight:** 3.39 ounces

**Language:** English

**SPARS Code:** DDD

## IMPORTANT INFORMATION

This Audio CD is intended for personal listening purposes. Unauthorized duplication, public performance, or broadcasting is prohibited by copyright law.

For further assistance or information regarding Dr. Dre's music, please refer to official artist resources or the record label's website.