

[manuals.plus](#) /

› [Westinghouse](#) /

› [Westinghouse 6632900 Ribbed Glass Ceiling Light Instruction Manual](#)

Westinghouse 6632900

Westinghouse 6632900 Ribbed Glass Ceiling Light Instruction Manual

Model: 6632900

1. PRODUCT OVERVIEW

The Westinghouse 6632900 is a one-light flush-mount interior ceiling fixture designed to provide essential lighting. It features a polished brass finish base and a satin white ribbed glass shade in a mushroom shape. This fixture is suitable for various indoor settings, including foyers, kitchens, and bathrooms, and its flush-mount design accommodates both low and high ceilings.

Key features include:

- One-light flush-mount interior ceiling fixture.
- Polished brass finish with satin white ribbed glass.
- Dimensions: 4-5/8 inches high by 8 inches in diameter.
- Requires one medium-base light bulb, 60-watt maximum (not included).
- UL listed for safety.



Figure 1: Westinghouse 6632900 Ribbed Glass Ceiling Light installed in a kitchen setting.

2. SAFETY INFORMATION

Read all instructions carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, or other hazards.

- **WARNING:** To avoid electric shock, disconnect power at the circuit breaker or fuse box before installation or servicing.
- This fixture is intended for indoor use only.
- Ensure all electrical connections comply with local codes and ordinances, as well as the National Electric Code (NEC). If you are unfamiliar with proper electrical wiring connections, consult a qualified electrician.
- Do not exceed the maximum wattage specified for the light bulb (60-watt maximum).
- The fixture is UL listed, indicating compliance with safety standards.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, contact Westinghouse customer service.

- Flush-mount ceiling fixture base (polished brass finish)
- Satin white ribbed glass shade
- Mounting hardware (screws, wire nuts, etc.)

Note: One medium-base light bulb (60-watt maximum) is required but not included in the package.

4. SETUP AND INSTALLATION

Follow these steps for safe and proper installation of your ceiling light fixture.

1. **Turn Off Power:** Before starting, ensure the power to the junction box is turned off at the circuit breaker or fuse box.
2. **Prepare Wiring:** Carefully pull the electrical wires from the junction box. Connect the fixture's wires to the house wires according to standard electrical practices (e.g., black to black, white to white, ground to ground) using the provided wire nuts.
3. **Mount Fixture Base:** Secure the fixture's mounting bracket to the junction box using the screws provided. Then, attach the fixture base to the mounting bracket, ensuring it is flush against the ceiling.
4. **Install Light Bulb:** Screw in one medium-base light bulb (E26, 60-watt maximum) into the socket. Do not overtighten.
5. **Attach Glass Shade:** Carefully align the satin white ribbed glass shade with the fixture base. Secure it in place using the raised screws on the base. Ensure the glass is firmly attached but do not overtighten the screws to avoid cracking the glass.
6. **Restore Power:** Once installation is complete, restore power at the circuit breaker and test the light fixture.

This fixture is suitable for installation in various indoor rooms such as foyers, kitchens, and bathrooms.

5. OPERATING INSTRUCTIONS

The Westinghouse 6632900 ceiling light operates via a standard wall switch (not included). Once installed and powered, simply use the wall switch to turn the light on or off.

- Ensure the correct bulb type and wattage (E26 medium-base, 60-watt maximum) is used for optimal performance and safety.
- The fixture is designed to provide soft, ambient light.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your light fixture.

- **Cleaning:** Disconnect power before cleaning. Wipe the polished brass finish with a soft, dry cloth. For the glass shade, use a mild glass cleaner and a soft cloth. Avoid abrasive cleaners or solvents that may damage the finish or glass.
- **Bulb Replacement:** Ensure power is off before replacing the light bulb. Allow the old bulb to cool before removing it. Replace with a new E26 medium-base bulb, not exceeding 60 watts.

- **Inspection:** Periodically check for any loose connections or signs of wear. If any issues are found, consult a qualified electrician.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Bulb is loose or burned out. Incorrect wiring.	Check circuit breaker/fuse. Tighten or replace bulb. Verify wiring connections (consult electrician if unsure).
Light flickers.	Loose bulb. Loose wiring connection. Faulty bulb.	Tighten bulb. Check wiring connections (power off). Replace bulb.

8. SPECIFICATIONS

Attribute	Detail
Model Number	6632900
Brand	Westinghouse
Fixture Type	Flush Mount Ceiling Light
Dimensions (Height x Diameter)	4-5/8 inches x 8 inches (Product Dimensions: 5.75 x 8.5 x 8.5 inches)
Material	Glass, Brass
Finish	Polished Brass
Shade Material	Satin White Ribbed Glass
Bulb Base	E26 Medium
Max Wattage	60 watts
Number of Light Sources	1
Power Source	Corded Electric
Indoor/Outdoor Usage	Indoor
Safety Rating	UL Listed
Item Weight	1.45 Pounds

9. WARRANTY AND SUPPORT

This Westinghouse interior ceiling fixture is backed by a **five-year limited manufacturer's warranty** against defects in materials and workmanship.

For warranty claims, technical assistance, or to inquire about replacement parts, please contact Westinghouse customer support. Refer to the product model number 6632900 when contacting support.

Please retain your proof of purchase for warranty purposes.

© 2024 Westinghouse. All rights reserved.