

Mad Catz Dual Force Analog Controller

Mad Catz Dual Force Analog Controller

USER MANUAL

Introduction

Thank you for choosing the Mad Catz Dual Force Analog Controller for your PlayStation console. This manual provides essential information for setting up, operating, and maintaining your controller to ensure optimal performance and longevity. Please read this manual thoroughly before use.

This wired controller is designed to enhance your gaming experience with its responsive controls, tactile rubber grips, and powerful vibration feedback.

Setup

1. **Unpack the Controller:** Carefully remove the controller from its packaging. Ensure all components are present.
2. **Connect to PlayStation Console:** Locate an available controller port on your PlayStation console. Insert the controller's cable connector firmly into the port. The controller is plug-and-play and does not require additional drivers.
3. **Power On Console:** Turn on your PlayStation console. The controller should be automatically recognized.



Image: The Mad Catz Dual Force Analog Controller, showing its wired connection. This image illustrates the controller's design and the cable used for connecting to the console.

Operating Instructions

The Dual Force Analog Controller offers versatile control options for various game types.

- **Control Layout:** The controller features a standard PlayStation button layout, including directional pad (D-pad), action buttons (Triangle, Circle, Cross, Square), L1/L2/R1/R2 shoulder buttons, Start, Select, and two analog sticks. The tactile rubber grips provide a comfortable and secure hold during gameplay.
- **Three Modes:** The controller supports three distinct operational modes:
 - **Steering Wheel Mode:** Optimized for racing games, providing precise steering control.
 - **Dual Analog Mode:** Utilizes both analog sticks for advanced control in games that support dual analog input.
 - **Digital Mode:** Standard digital input, suitable for classic games or those not requiring analog precision.

Refer to your game's instructions to determine the optimal mode for play. Mode selection is typically automatic or can be toggled via a dedicated button on the controller (if present) or within the game's options menu.

- **Vibration Function:** The controller provides maximum vibration feedback in all vibration-compatible games. This feature enhances immersion by providing tactile responses to in-game events such as impacts, explosions, or engine revs. Ensure the vibration function is enabled in your game's settings if you wish to experience this feature.

Maintenance

- **Cleaning:** To clean the controller, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals, solvents, or abrasive cleaners, as these can damage the controller's finish or internal components.
- **Storage:** When not in use, store the controller in a clean, dry place away from direct sunlight and extreme temperatures. Avoid wrapping the cable too tightly around the controller to prevent damage to the wiring.
- **Handling:** Avoid dropping the controller or subjecting it to strong impacts, which can cause internal damage.

Troubleshooting

Controller Not Responding:

Ensure the controller cable is securely plugged into the PlayStation console's controller port. Try a different port if available. Verify that the console is powered on and functioning correctly.

Vibration Not Working:

Check the in-game settings to ensure that the vibration function is enabled. Not all games support vibration feedback. Confirm that the game you are playing is compatible with vibration features.

Buttons or Analog Sticks Not Functioning Correctly:

Inspect the buttons and sticks for any physical obstructions or damage. If the issue persists, try testing the controller with a different game or console to isolate the problem.

Specifications

Feature	Detail
Product Type	Wired Analog Controller
Compatibility	PlayStation Game Console
Modes Supported	Steering Wheel, Dual Analog, Digital
Vibration Feedback	Maximum vibration in compatible games
Grips	Tactile Rubber Grips
Package Dimensions	9.17 x 5.43 x 3.46 inches
Item Weight	1 pound
Manufacturer	Mad Catz, Inc
ASIN	B00002QUKN
Date First Available	February 11, 2015

Warranty and Support

For warranty information and technical support, please refer to the official Mad Catz website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the manufacturer's support page or contact their customer service department.

© 2024 Mad Catz, Inc. All rights reserved. Product specifications are subject to change without notice.