

manuals.plus /

> [Nintendo](#) /

> [Nintendo Game Boy Pocket MGB-001 Instruction Manual](#)

## Nintendo MGB-001

# Nintendo Game Boy Pocket (MGB-001) Instruction Manual

Model: MGB-001

## 1. PRODUCT OVERVIEW

---

The Nintendo Game Boy Pocket (model MGB-001) is a compact, monochrome handheld video game system. It offers a portable gaming experience with a clear LCD screen and requires two AAA batteries for operation. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Game Boy Pocket.



Image 1.1: Front view of the Game Boy Pocket. This image displays the device's screen, D-pad, A and B buttons, Start and Select buttons, and the Nintendo logo.

## 2. SETUP

### 2.1 Battery Installation

1. Locate the battery compartment cover on the back of the Game Boy Pocket.
2. Slide the cover downwards to open the compartment.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals are aligned correctly as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.

**Important:** Always use fresh AAA batteries. Remove batteries if the unit will not be used for an extended period to prevent leakage and damage.

### 2.2 Inserting a Game Pak

1. Ensure the Game Boy Pocket is powered off.
2. Hold the Game Pak with the label facing the same direction as the Game Boy Pocket's screen.
3. Gently slide the Game Pak into the slot at the top of the Game Boy Pocket until it is fully seated. Do not force

the Game Pak.

4. To remove a Game Pak, ensure the unit is off, then gently pull the Game Pak straight out of the slot.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Powering On/Off

- **To Power On:** Slide the POWER switch, located on the right side of the unit, to the "ON" position. The power indicator light will illuminate.
- **To Power Off:** Slide the POWER switch to the "OFF" position. The power indicator light will turn off.

### 3.2 Basic Controls

- **Directional Pad (D-Pad):** Located on the left side, used for character movement and menu navigation.
- **A Button:** Typically used for action, confirmation, or jumping.
- **B Button:** Typically used for canceling, running, or secondary actions.
- **START Button:** Used to pause games, confirm selections, or begin gameplay.
- **SELECT Button:** Used for various in-game functions, often for menu navigation or selecting options.

### 3.3 Volume Control

Adjust the volume using the VOLUME dial located on the left side of the Game Boy Pocket. Rotate the dial upwards to increase volume and downwards to decrease it.

### 3.4 Contrast Adjustment

Adjust the screen contrast using the CONTRAST dial located on the top-left side of the unit. Rotate the dial to achieve optimal screen visibility in different lighting conditions.

## 4. MAINTENANCE

---

### 4.1 Cleaning the Unit

- Use a soft, dry cloth to wipe the exterior of the Game Boy Pocket.
- For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- Keep the Game Pak slot free of dust and debris. Use compressed air if necessary, but avoid inserting objects into the slot.

### 4.2 Battery Care

- Always remove batteries from the Game Boy Pocket if it will not be used for an extended period (e.g., several weeks or months). This prevents battery leakage, which can corrode internal components.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.

### 4.3 Screen Care

- Avoid pressing on the LCD screen with sharp objects.
- Clean the screen with a soft, lint-free cloth. Do not use liquid cleaners directly on the screen.
- Protect the screen from scratches by storing the Game Boy Pocket in a protective case when not in use.

## 5. TROUBLESHOOTING

If you encounter issues with your Game Boy Pocket, refer to the following common problems and solutions:

- **Unit does not power on:**
  - Ensure batteries are correctly inserted with the correct polarity.
  - Replace old batteries with fresh AAA batteries.
  - Check for any corrosion in the battery compartment. If present, carefully clean with a cotton swab and a small amount of isopropyl alcohol (ensure unit is off and dry before reinserting batteries).
- **Game does not start or freezes:**
  - Ensure the Game Pak is fully and correctly inserted into the slot.
  - Clean the Game Pak's connector pins with a cotton swab and a small amount of isopropyl alcohol. Allow to dry completely before reinserting.
  - Try a different Game Pak to determine if the issue is with the console or the game cartridge.
- **Screen is dim or difficult to see:**
  - Adjust the CONTRAST dial on the top-left side of the unit.
  - Ensure you are playing in adequate lighting conditions, as the Game Boy Pocket screen is not backlit.
  - Check battery levels; low batteries can affect screen brightness.
- **Sound issues (no sound or distorted sound):**
  - Adjust the VOLUME dial on the left side of the unit.
  - Ensure headphones (if used) are properly connected and functional.
  - Some games may have in-game volume settings; check the game's manual.
- **Dead pixels or lines on the screen:**
  - This can sometimes occur with older LCD screens. While minor issues might resolve themselves, persistent dead pixels or lines usually indicate a hardware issue that may require professional repair.

## 6. SPECIFICATIONS

<b>Model Number</b>	MGB-001
<b>Manufacturer</b>	Nintendo
<b>Power Source</b>	2 x AAA Batteries
<b>Screen Type</b>	Monochrome LCD (non-backlit)
<b>Dimensions (Approx.)</b>	9.5 x 4.6 x 0.9 inches (24.1 x 11.7 x 2.3 cm)
<b>Weight (Approx.)</b>	4.8 ounces (136 grams) without batteries
<b>First Available</b>	February 22, 2007

## 7. WARRANTY AND SUPPORT

This product is an older model and may no longer be covered by a manufacturer's warranty. For support regarding original Nintendo products, please refer to the official Nintendo support website or contact their customer service for information on legacy products.

For further assistance or inquiries, please visit the official Nintendo website: [Nintendo Support](#)

