

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Nintendo](#) /
- › [Pit-Fighter Super Nintendo Game Instruction Manual](#)

Nintendo B00002SW4F

# Pit-Fighter Super Nintendo Game Instruction Manual

Model: B00002SW4F

## PRODUCT OVERVIEW

---

Pit-Fighter is a fighting game released for the Super Nintendo Entertainment System. Players select one of three characters to compete in a series of underground battles against various opponents. The objective is to defeat all adversaries and emerge as the ultimate champion.



Image: The Pit-Fighter game cartridge for Super Nintendo, displayed alongside its original packaging. This image illustrates the physical product.

## SETUP

---

1. **Prepare Your Console:** Ensure your Super Nintendo Entertainment System (SNES) console is powered off and disconnected from the power outlet before inserting or removing game cartridges.
2. **Insert Game Cartridge:** Hold the Pit-Fighter game cartridge with the label facing forward. Gently slide the cartridge into the cartridge slot on your SNES console until it clicks securely into place. Do not force the cartridge.
3. **Connect Peripherals:** Connect your SNES controller(s) to the controller ports on the front of the console.
4. **Power On:** Connect the SNES console to a power outlet and turn on your television. Then, press the POWER button on the SNES console. The game's title screen should appear.

## OPERATING INSTRUCTIONS (GAMEPLAY)

---

Pit-Fighter allows players to engage in one-on-one or two-on-one combat within an arena setting. The game features three distinct characters, each with unique attributes and special moves.

## Character Selection:

- **Buzz:** A former professional wrestler known for powerful grappling and a strong body slam maneuver.
- **Ty:** A champion kickboxer specializing in agile kicks and quick strikes.
- **Kato:** A martial arts expert proficient in karate, featuring a lethal dragon punch technique.

## Basic Controls:

Controls are typically configured for the standard SNES controller. Refer to the in-game options or the original game manual for precise button assignments.

- **Directional Pad:** Moves your character around the arena.
- **A/B/X/Y Buttons:** Perform various attacks, including punches, kicks, and special moves.
- **L/R Buttons:** May be used for blocking or specific character actions.
- **START Button:** Pauses the game or confirms selections.
- **SELECT Button:** May be used for specific in-game functions or menu navigation.

## Gameplay Mechanics:

- **Combat:** Engage opponents using a combination of punches, kicks, and character-specific special moves.
- **Weapons:** Various objects may appear in the arena that can be picked up and used as temporary weapons to inflict additional damage.
- **Opponents:** Progress through a series of increasingly challenging opponents, including notable adversaries like Chainman Eddie and The Masked Warrior.
- **Victory Condition:** Defeat all opponents in a match to advance to the next stage.

## MAINTENANCE

---

Proper care of your Pit-Fighter game cartridge ensures its longevity and reliable performance.

- **Storage:** Store the game cartridge in its original case or a protective sleeve when not in use to prevent dust accumulation and physical damage. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Cleaning:** If the game cartridge's connector pins appear dirty, gently clean them with a cotton swab lightly dampened with isopropyl alcohol. Allow the pins to dry completely before reinserting the cartridge into the console. Do not use abrasive materials or harsh chemicals.
- **Handling:** Avoid touching the metal connector pins on the bottom of the cartridge to prevent corrosion or damage from oils and dirt on your hands.

## TROUBLESHOOTING

---

If you encounter issues while playing Pit-Fighter, consider the following troubleshooting steps:

- **Game Not Starting/Freezing:**
  - Ensure the cartridge is fully and correctly inserted into the SNES console.
  - Power off the console, remove the cartridge, gently clean the connector pins (as described in Maintenance), and reinsert it.
  - Verify that your SNES console and television are properly connected and functioning.
- **Difficulty Level:** Note that Pit-Fighter is known for its challenging difficulty. Players may find opponents

to be aggressive, with rapid attacks that can lead to quick defeats. This is an inherent characteristic of the game design.

- **Sound/Graphics Issues:**

- Check all audio/video cables connecting your SNES to your television.
- Ensure your television is set to the correct input source.

## SPECIFICATIONS

---

<b>ASIN</b>	B00002SW4F
<b>Product Dimensions</b>	5.3 x 3.4 x 0.8 inches
<b>Item Weight</b>	5 ounces
<b>Rated</b>	Everyone
<b>Manufacturer</b>	THQ (PC Games)
<b>Date First Available</b>	January 1, 2000

## WARRANTY AND SUPPORT

---

This product is a vintage video game cartridge. Specific warranty information may no longer be applicable or available from the original manufacturer. For support regarding the functionality of the game, please refer to online communities or resources dedicated to retro gaming.

For general inquiries about Super Nintendo Entertainment System hardware, please consult the official Nintendo support channels or documentation for the console itself.