

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nintendo](#) /

› [Nintendo Kirby's Dream Land Game Boy Standard Instruction Manual](#)

### Nintendo Kirby's Dream Land

# Nintendo Kirby's Dream Land Game Boy Standard Instruction Manual

Model: Kirby's Dream Land | Platform: Game Boy

## INTRODUCTION

This manual provides essential information for playing Kirby's Dream Land on the Nintendo Game Boy. Kirby's Dream Land is a classic platformer where players control Kirby, a small, spherical character, on a quest to recover the stolen Twinkle Stars from King Dedede.

The game features a single-player experience, guiding Kirby through various environments such as castles, caves, dungeons, and forests. Kirby possesses unique abilities to navigate obstacles and defeat enemies, including running, jumping, floating, swimming, and inhaling opponents.



**Image:** Original cover art for Kirby's Dream Land on Game Boy, featuring Kirby and various characters from the game.

## SETUP

- Prepare your Game Boy:** Ensure your Nintendo Game Boy system is powered off and has sufficient battery life.
- Insert the Game Pak:** Gently slide the Kirby's Dream Land Game Pak into the cartridge slot on top of your Game Boy system. Ensure it is fully seated and flush with the system's casing. Do not force the cartridge.
- Power On:** Turn on your Game Boy system using the power switch. The Nintendo logo should appear, followed by the game's title screen.
- Adjust Volume and Contrast:** Use the volume dial and contrast slider on your Game Boy to adjust audio and screen visibility to your preference.

If the game does not start, power off the system, remove the Game Pak, and re-insert it firmly. Ensure the cartridge contacts are clean.

## OPERATING INSTRUCTIONS

Kirby's Dream Land utilizes the standard controls of the Nintendo Game Boy system.

- **Directional Pad (D-Pad):** Use the D-Pad to move Kirby left, right, up, and down.
- **A Button:** Press the A button to jump. Holding the A button allows Kirby to float for a short period.
- **B Button:** Press the B button to inhale enemies or objects. Once inhaled, press B again to spit them out as projectiles.
- **Start Button:** Press the Start button to pause the game and access the pause menu.
- **Select Button:** The Select button may be used for certain in-game actions or menu navigation, depending on the context.

Explore Dream Land, defeat King Dedede's minions, and recover the stolen Twinkle Stars to restore peace to the land.

## MAINTENANCE

Proper care of your Kirby's Dream Land Game Pak will ensure its longevity and optimal performance.

- **Storage:** Store the Game Pak in its original case or a protective cartridge holder when not in use to prevent dust and damage.
- **Cleaning:** If the game is not functioning correctly, gently clean the gold connector pins on the bottom of the cartridge with a cotton swab lightly dampened with isopropyl alcohol. Allow to dry completely before re-inserting into the Game Boy.
- **Temperature:** Avoid exposing the Game Pak to extreme temperatures, direct sunlight, or high humidity.
- **Handling:** Handle the Game Pak by its edges to avoid touching the connector pins or scratching the label.

## TROUBLESHOOTING

Problem	Solution
Game does not start or freezes.	<ul style="list-style-type: none"><li>• Ensure the Game Pak is fully inserted into the Game Boy.</li><li>• Clean the cartridge's connector pins as described in the Maintenance section.</li><li>• Check Game Boy batteries; replace if low.</li><li>• Try the Game Pak in a different Game Boy system if available to rule out system issues.</li></ul>
Graphics appear distorted or incomplete.	<ul style="list-style-type: none"><li>• Adjust the contrast slider on your Game Boy.</li><li>• Clean the cartridge's connector pins.</li><li>• Ensure the Game Pak is securely inserted.</li></ul>
No sound or distorted sound.	<ul style="list-style-type: none"><li>• Adjust the volume dial on your Game Boy.</li><li>• Ensure headphones (if used) are properly connected.</li><li>• Clean the headphone jack if necessary.</li></ul>

## SPECIFICATIONS

**Product Title:** Kirby's Dream Land Game Boy Standard

**Brand:** Nintendo

**Model:** Kirby's Dream Land

**Platform:** Game Boy

**ASIN:** B000035XB0

**UPC:** 045496730239

**Product Dimensions:** 2.8 x 2.5 x 0.3 inches

**Item Weight:** 0.8 ounces

**Language:** English

**Manufacturer:** Nintendo

**Date First Available:** January 1, 2000

**Player Count:** One player

## WARRANTY AND SUPPORT

---

Specific warranty and support information for this product is not available in the provided documentation.

For general inquiries regarding Nintendo products, please refer to the official Nintendo support website or contact their customer service.

For further assistance, you may visit the [Nintendo Store on Amazon](#).