

[manuals.plus](#) /› [MIDWAY](#) /› [Pac-Mania Sega Genesis Instruction Manual](#)

MIDWAY Pac-Mania Sega Genesis

Pac-Mania Sega Genesis Instruction Manual

Model: Pac-Mania Sega Genesis

1. INTRODUCTION

Welcome to the world of Pac-Mania! This classic arcade game, reimagined for the Sega Genesis, brings the beloved Pac-Man experience into a new dimension. Navigate through mazes, eat all the pellets, and avoid the ghosts, now with the added ability to jump over obstacles and enemies. This manual provides comprehensive instructions to help you get the most out of your Pac-Mania game.



Image: The complete Pac-Mania package, including the game box, cartridge, instruction manual, and a game player response card.

2. SETUP

To begin playing Pac-Mania on your Sega Genesis console, follow these simple steps:

- 1. Prepare Your Console:** Ensure your Sega Genesis console is properly connected to your television and power source. Refer to your Sega Genesis console's instruction manual for detailed setup information if needed.
- 2. Insert the Game Cartridge:** Gently insert the Pac-Mania game cartridge into the cartridge slot on your Sega Genesis console. Ensure it is fully seated. Do not force the cartridge.



Image: The Pac-Mania game cartridge securely placed within its original protective case.

3. **Power On:** Turn on your television and select the correct input channel. Then, power on your Sega Genesis console.
4. **Start the Game:** The game should load automatically. If not, turn the console off and on again, ensuring the cartridge is correctly inserted.

3. OPERATING (GAMEPLAY)

Pac-Mania retains the core gameplay of the original Pac-Man while introducing new elements. Your objective is to clear each maze of all pellets while avoiding the four ghosts: Blinky, Pinky, Inky, and Clyde.

Controls

- **Directional Pad (D-Pad):** Move Pac-Man up, down, left, and right through the maze.
- **A, B, or C Button:** Press any of these buttons to make Pac-Man jump. Jumping allows Pac-Man to clear small obstacles or leap over ghosts, providing a strategic advantage.
- **Start Button:** Pause the game during play or begin a new game from the title screen.

Gameplay Elements

- **Pellets:** Small dots scattered throughout the maze. Eat all of them to complete a level.
- **Power Pellets:** Larger, flashing pellets. Eating one turns the ghosts blue for a short period, making them vulnerable. During this time, Pac-Man can eat the ghosts for bonus points. Eaten ghosts return to their home base and

regenerate.

- **Bonus Items:** Various items (e.g., fruit, keys) appear periodically in the maze. Eating these grants additional points.
- **Ghosts:** Blinky (red), Pinky (pink), Inky (cyan), and Clyde (orange). Each ghost has a distinct personality and movement pattern. Avoid them when they are not blue.
- **Jump Feature:** A new mechanic in Pac-Mania. Use the jump button to evade ghosts or navigate tricky maze sections. Timing is crucial.

Scoring

Points are awarded for eating pellets, power pellets, bonus items, and especially for eating ghosts after consuming a power pellet. The score increases with each ghost eaten during a single power pellet's effect.

4. MAINTENANCE

Proper care of your Pac-Mania game cartridge will ensure its longevity and reliable performance.

- **Handling:** Always hold the cartridge by its plastic casing. Avoid touching the gold connector pins at the bottom, as oils and dirt can interfere with connectivity.



Image: A detailed view of the Pac-Mania Sega Genesis cartridge, highlighting the game label and the electrical connector pins.

- **Cleaning:** If the game does not start or experiences glitches, the connector pins may be dirty. Use a cotton swab lightly dampened with isopropyl alcohol to gently clean the gold pins. Allow to dry completely before reinserting into the console. Do not use abrasive materials or harsh chemicals.
- **Storage:** Store the cartridge in its original case or a protective sleeve when not in use to prevent dust accumulation and physical damage. Keep it away from extreme temperatures, direct sunlight, and high humidity.
- **Avoid Liquids:** Never expose the cartridge to liquids. Spills can cause permanent damage to the internal components.

5. TROUBLESHOOTING

If you encounter issues while playing Pac-Mania, try the following solutions:

Problem	Solution
Game does not start or freezes.	<ul style="list-style-type: none">• Ensure the cartridge is fully and correctly inserted into the console.• Clean the cartridge's gold connector pins as described in the Maintenance section.• Try another game cartridge to verify the console is functioning correctly.• Power cycle the console (turn off, wait 10 seconds, turn on).
Graphics or sound are distorted.	<ul style="list-style-type: none">• Check all audio/video cables connecting the console to the television.• Clean the cartridge pins.• Ensure the television is set to the correct input.
Controller inputs are unresponsive.	<ul style="list-style-type: none">• Ensure the controller is securely plugged into the console.• Try a different controller if available.• Clean the controller port on the console if dust or debris is visible.

6. SPECIFICATIONS

- **Product Name:** Pac-Mania
- **Platform:** Sega Genesis
- **Manufacturer:** Midway (Original arcade by Namco)
- **Release Date:** January 1, 2000 (Date First Available on Amazon, actual game release was earlier)
- **ASIN:** B000035XK1
- **Item Weight:** Approximately 0.8 ounces
- **Package Dimensions:** Approximately 6.9 x 5.2 x 1.1 inches
- **Rating:** Everyone (Rated E)
- **Compatible Console Models:** SEGA Genesis 1 (and other compatible Genesis models)

7. WARRANTY AND SUPPORT

As an older game title, specific manufacturer warranty information may no longer be applicable. For issues related to the game cartridge itself, please refer to the retailer's return policy where the game was purchased.

For general support regarding Sega Genesis consoles or classic gaming, numerous online communities and fan forums can provide assistance and troubleshooting tips. Always ensure you are consulting reputable sources.

Note: This manual provides general guidance. Specific issues may require professional assistance or consultation with experienced retro gaming enthusiasts.