

Nintendo Special Pikachu Edition

Nintendo Pokemon Yellow Version: Special Pikachu Edition Instruction Manual

Model: Special Pikachu Edition (ASIN: B000047GEI)

INTRODUCTION

Welcome to the world of Pokémon! This manual provides essential information for setting up, operating, and maintaining your *Pokémon Yellow Version: Special Pikachu Edition* game cartridge for the Nintendo Game Boy system. Prepare to embark on an adventure to become the greatest Pokémon trainer.

SETUP

1. Console Compatibility

This game cartridge is designed for use with the following Nintendo Game Boy systems:

- Original Game Boy (GB)
- Game Boy Color (GBC)
- Game Boy Advance (GBA)
- Game Boy Advance SP (GBA SP)

2. Inserting the Game Cartridge

1. Ensure your Game Boy console is powered off.
2. Hold the game cartridge with the label facing upwards.
3. Gently slide the cartridge into the cartridge slot on your Game Boy console until it clicks into place. Do not force the cartridge.
4. Power on your Game Boy console. The Nintendo logo should appear, followed by the game's title screen.



Image: Front view of the Pokémon Yellow Version: Special Pikachu Edition Game Boy cartridge. The cartridge features a yellow casing with a label depicting Pikachu.

OPERATING INSTRUCTIONS

1. Starting the Game

After inserting the cartridge and powering on your Game Boy, press the **START** button on the title screen to begin a new game or continue a saved game.

2. Basic Gameplay

- **Movement:** Use the directional pad (D-pad) to move your character around the game world.
- **Interaction:** Press the **A** button to interact with people, objects, and confirm selections.
- **Cancel/Back:** Press the **B** button to cancel actions or go back in menus.
- **Menu:** Press the **START** button to open the main menu, which includes options for Pokémon, Item Bag, Save, and Options.
- **Pikachu:** In this special edition, your starter Pokémon, Pikachu, will follow you outside its Poké Ball. You can check its mood and status by interacting with it.

3. Saving Your Progress

To save your game progress, open the main menu by pressing **START**, then select the **SAVE** option. It is crucial to save regularly to avoid losing progress. The game cartridge uses an internal battery to retain save data. If this battery depletes, you will be unable to save your game.

MAINTENANCE

1. Cartridge Care

- Keep the cartridge clean and free from dust and dirt. Use a soft, dry cloth to wipe the exterior.
- Avoid touching the metal connector pins at the bottom of the cartridge. If they become dirty, gently clean them with a cotton swab lightly dampened with isopropyl alcohol. Ensure they are completely dry before reinserting into the console.
- Store the cartridge in its protective case or a safe place away from extreme temperatures, direct sunlight, and moisture.

2. Save Battery Replacement

Pokémon Yellow Version, like many classic Game Boy titles, uses a small internal battery (typically a CR1616 coin cell) to maintain your save data. Over time, this battery will deplete, leading to an inability to save your game. Replacing this battery requires specific tools and careful handling.

Procedure for Battery Replacement (Advanced Users Only):

1. Obtain a new CR1616 coin cell battery and a specialized Game Boy cartridge screwdriver (3.8mm security bit).
2. Carefully open the cartridge casing using the screwdriver.
3. Locate the old battery, which is typically soldered to the circuit board.
4. *Desoldering and soldering skills are required for proper replacement.* If you are not comfortable with this, seek professional assistance.
5. Remove the old battery and solder the new CR1616 battery in its place, ensuring correct polarity.
6. Reassemble the cartridge casing.

Incorrect battery replacement can damage the cartridge. Consider professional services if unsure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Game does not start or displays garbled graphics.	• Cartridge not fully inserted. • Dirty connector pins on cartridge or console. • Console malfunction.	• Ensure cartridge is fully seated in the console. • Clean cartridge connector pins (refer to Maintenance section). • Test with another Game Boy game to rule out console issues.
Unable to save game progress.	• Internal save battery is depleted. • Corrupted save data.	• Replace the internal CR1616 save battery (refer to Maintenance section). • Start a new game; if saving works, the previous save may have been corrupted.
Game freezes during play.	• Loose cartridge connection. • Console malfunction.	• Remove and reinsert the cartridge firmly. • Clean cartridge connector pins. • Ensure console batteries are fresh or power adapter is stable.

SPECIFICATIONS

Product Name	Pokémon Yellow Version: Special Pikachu Edition
Brand	Nintendo
Model Number (ASIN)	B000047GEI
Platform	Game Boy
Compatible Consoles	Game Boy (GB), Game Boy Color (GBC), Game Boy Advance (GBA), Game Boy Advance SP (GBA SP)
Release Date	October 18, 1999
Item Dimensions (L x W x H)	5.39 x 2.48 x 0.75 inches
Item Weight	0.96 ounces
Save Battery Type	CR1616 Coin Cell (for save data retention)
ESRB Rating	Everyone

SUPPORT AND WARRANTY

Customer Support

For further assistance, technical support, or inquiries regarding your Nintendo product, please visit the official Nintendo support website or contact their customer service. Specific contact details may vary by region. You can find more information and support resources on the [Nintendo Store on Amazon](#) or the official Nintendo website.

Warranty Information

This product is a vintage game cartridge. Original manufacturer warranties may no longer be applicable. Please refer to the terms and conditions of your retailer or seller for any applicable return or warranty policies at the time of purchase.

© 1999-2024 Nintendo. All rights reserved. Pokémon Yellow Version: Special Pikachu Edition.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question