

[manuals.plus](#) /› [Breadman](#) /› [Breadman TR444 2-Pound Rapid-Bake Bread Machine User Manual](#)

Breadman TR444

Breadman TR444 2-Pound Rapid-Bake Bread Machine User Manual

Model: TR444

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Breadman TR444 2-Pound Rapid-Bake Bread Machine. Please read all instructions carefully before using the appliance to ensure proper function and to prevent injury or damage.

The Breadman TR444 is designed to simplify homemade bread baking, offering a variety of settings for different bread types and crust preferences. Its rapid-bake feature allows for fresh bread in approximately one hour, and the 13-hour delay timer provides convenience for fresh bread at any time.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use oven mitts when handling hot parts, such as the bread pan or heating element.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.


- To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

COMPONENTS OVERVIEW

Familiarize yourself with the main parts of your Breadman TR444 bread machine.



*Figure 1: Breadman TR444 Bread Machine exterior.
Shows the main unit with its control panel, viewing
window, and lid.*

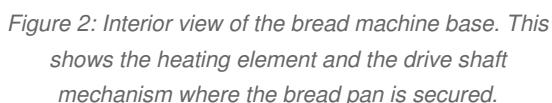

*Figure 2: Interior view of the bread machine base. This
shows the heating element and the drive shaft
mechanism where the bread pan is secured.*



*Figure 3: The nonstick bread pan with the kneading
paddle installed. This is where ingredients are placed
for mixing and baking.*

*Figure 4: Another view of the Breadman TR444 Bread
Machine, highlighting its compact design.*

- **Main Unit:** Houses the motor, heating element, and control panel.
- **Bread Pan:** Removable nonstick pan for mixing and baking.

- **Kneading Paddle:** Attaches to the drive shaft in the bread pan for mixing ingredients.
- **Lid:** Covers the baking chamber, often with a viewing window.
- **Control Panel:** Features an LED display and buttons for program selection, crust color, loaf size, and delay timer.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the bread machine and all accessories from the packaging. Retain packaging for future storage or shipping.
2. **Cleaning:** Wash the bread pan and kneading paddle with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the bread machine on a stable, heat-resistant, and dry surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
4. **Install Bread Pan:** Insert the clean bread pan into the baking chamber of the main unit. Press down firmly and turn clockwise until it locks into place.
5. **Install Kneading Paddle:** Attach the kneading paddle onto the drive shaft inside the bread pan. Ensure it is securely seated.
6. **Power Connection:** Plug the power cord into a grounded electrical outlet. The machine will beep, and the default program will display on the LED screen.

OPERATING INSTRUCTIONS

Adding Ingredients

1. Always add liquid ingredients first, followed by dry ingredients. Make a small indentation in the dry ingredients for the yeast, ensuring it does not come into direct contact with liquids or salt initially.
2. Measure all ingredients precisely. Inaccurate measurements can affect bread quality.
3. For best results, use ingredients at room temperature.

Program Selection

The Breadman TR444 offers up to 22 bread settings. Use the "MENU" button to cycle through the available programs. The LED display will show the selected program number and estimated baking time.

- **Basic:** For white and mixed breads.
- **French:** For light breads made from fine flour.
- **Whole Wheat:** For breads with a high percentage of whole wheat flour.
- **Rapid Bake:** For quick white bread in approximately 59 minutes.
- **Sweet:** For breads with high sugar, fats, and proteins.
- **Dough:** Prepares dough for rolls, pizza, or pastries to be baked in a conventional oven.
- *Refer to your recipe book for specific program recommendations.*

Loaf Size and Crust Color

- **Loaf Size:** Press the "LOAF SIZE" button to select between 1-pound, 1.5-pound, or 2-pound loaves. The indicator on the display will show your selection.
- **Crust Color:** Press the "CRUST" button to choose light, medium, or dark crust. The indicator will

change accordingly.

Delay Timer Function (13-Hour Advance Programming)

The delay timer allows you to program the machine to start baking at a later time, up to 13 hours in advance. This is ideal for having fresh bread ready for breakfast or dinner.

1. Add all ingredients to the bread pan.
2. Select your desired program, loaf size, and crust color.
3. Press the "+" or "-" buttons to set the desired delay time. The display will show the total time until the bread is finished (including resting, kneading, rising, and baking).
4. Press the "START/STOP" button. The timer will begin counting down, and the machine will start automatically when the set time is reached.
5. **Note:** *Do not use the delay timer with recipes containing highly perishable ingredients like milk, eggs, or fresh fruit, as they may spoil before baking begins.*

Starting and Stopping

- **Start:** After selecting all settings, press the "START/STOP" button once. The machine will beep, and the program will begin.
- **Stop/Cancel:** To stop a program or cancel the delay timer, press and hold the "START/STOP" button for approximately 3 seconds until a beep sounds and the display resets.

After Baking

Once the baking cycle is complete, the machine will beep and may enter a "Keep Warm" cycle (check your specific model's features). Carefully remove the bread pan using oven mitts. Invert the pan to release the bread onto a wire rack to cool. If the kneading paddle remains in the bread, remove it carefully with a non-metallic utensil.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your bread machine.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Bread Pan and Kneading Paddle:** Remove the bread pan and kneading paddle. Wash them with warm, soapy water and a soft sponge. Do not use abrasive cleaners or metal scouring pads, as this can damage the nonstick coating. Rinse thoroughly and dry completely.
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. If necessary, use a mild detergent. Do not immerse the main unit in water or spray it with liquids.
4. **Baking Chamber:** Use a soft, damp cloth to wipe out any crumbs or residue from the interior baking chamber.
5. **Storage:** Ensure all parts are clean and dry before storing the bread machine in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Bread does not rise.	Expired yeast, incorrect water temperature, too much salt, or incorrect program.	Check yeast expiration date. Use lukewarm water (105-115°F / 40-46°C). Reduce salt. Ensure correct program is selected for yeast type.
Bread is too dense.	Too much flour, too little liquid, or old yeast.	Measure flour accurately (spoon into cup, level off). Increase liquid slightly. Use fresh yeast.
Crust is too dark/light.	Incorrect crust setting.	Adjust the "CRUST" setting to desired preference (light, medium, dark).
Kneading paddle stuck in bread.	Common occurrence.	Allow bread to cool slightly. Carefully remove the paddle using a non-metallic utensil.
Machine does not start.	Not plugged in, "START/STOP" button not pressed, or power outage.	Ensure power cord is securely plugged in. Press "START/STOP" button firmly. Check household circuit breaker.

SPECIFICATIONS

- Model:** TR444
- Capacity:** 1, 1.5, and 2-pound loaves
- Dimensions:** Approximately 11 x 9.5 x 15 inches (L x W x H)
- Weight:** Approximately 17.6 Pounds
- Voltage:** 120 Volts (AC)
- Material:** Plastic housing, nonstick bread pan
- Programs:** Up to 22 settings, including Rapid Bake, French, Whole Wheat, Dough.
- Delay Timer:** Up to 13 hours

WARRANTY AND SUPPORT

The Breadman TR444 Bread Machine comes with a one-year limited warranty against defects in materials and workmanship from the date of purchase. This warranty does not cover damage resulting from misuse, accident, alteration, or commercial use.

For warranty claims, technical support, or replacement parts, please refer to the contact information provided in your original purchase documentation or visit the official Breadman website.

Please retain your proof of purchase for warranty validation.