

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [De'Longhi](#) /

› [De'Longhi Deluxe Burr Coffee Grinder DCG4T User Manual](#)

De'Longhi DCG4T

De'Longhi Deluxe Burr Coffee Grinder

Model: DCG4T

INTRODUCTION

This manual provides instructions for the safe and efficient operation and maintenance of your De'Longhi Deluxe Burr Coffee Grinder, Model DCG4T. Please read all instructions carefully before using the appliance and retain this manual for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

PRODUCT OVERVIEW

Familiarize yourself with the components of your De'Longhi coffee grinder.



Figure 1: Front view of the De'Longhi Deluxe Burr Coffee Grinder. This image displays the main unit with the grind selector dial, the power switch, and the transparent ground coffee collection bin, which has measurement markings up to 24 tablespoons.

1. Bean Hopper Lid
2. Bean Hopper
3. Grind Selector Dial (Extra-fine, Fine, Medium, Coarse)
4. Quantity Selector Dial (2-24 tablespoons)
5. Power Switch (On/Off)
6. Ground Coffee Collection Bin Lid
7. Ground Coffee Collection Bin
8. Burr Grinding Mechanism (internal)

SETUP

Before first use, ensure all packaging materials are removed and clean the removable parts as described in the "Maintenance and Cleaning" section.

1. Place the grinder on a stable, flat, and dry surface.
2. Ensure the ground coffee collection bin is correctly inserted into its compartment.
3. Open the bean hopper lid.
4. Add whole coffee beans to the bean hopper. Do not overfill. The maximum capacity is approximately 1.5 pounds of coffee

beans.

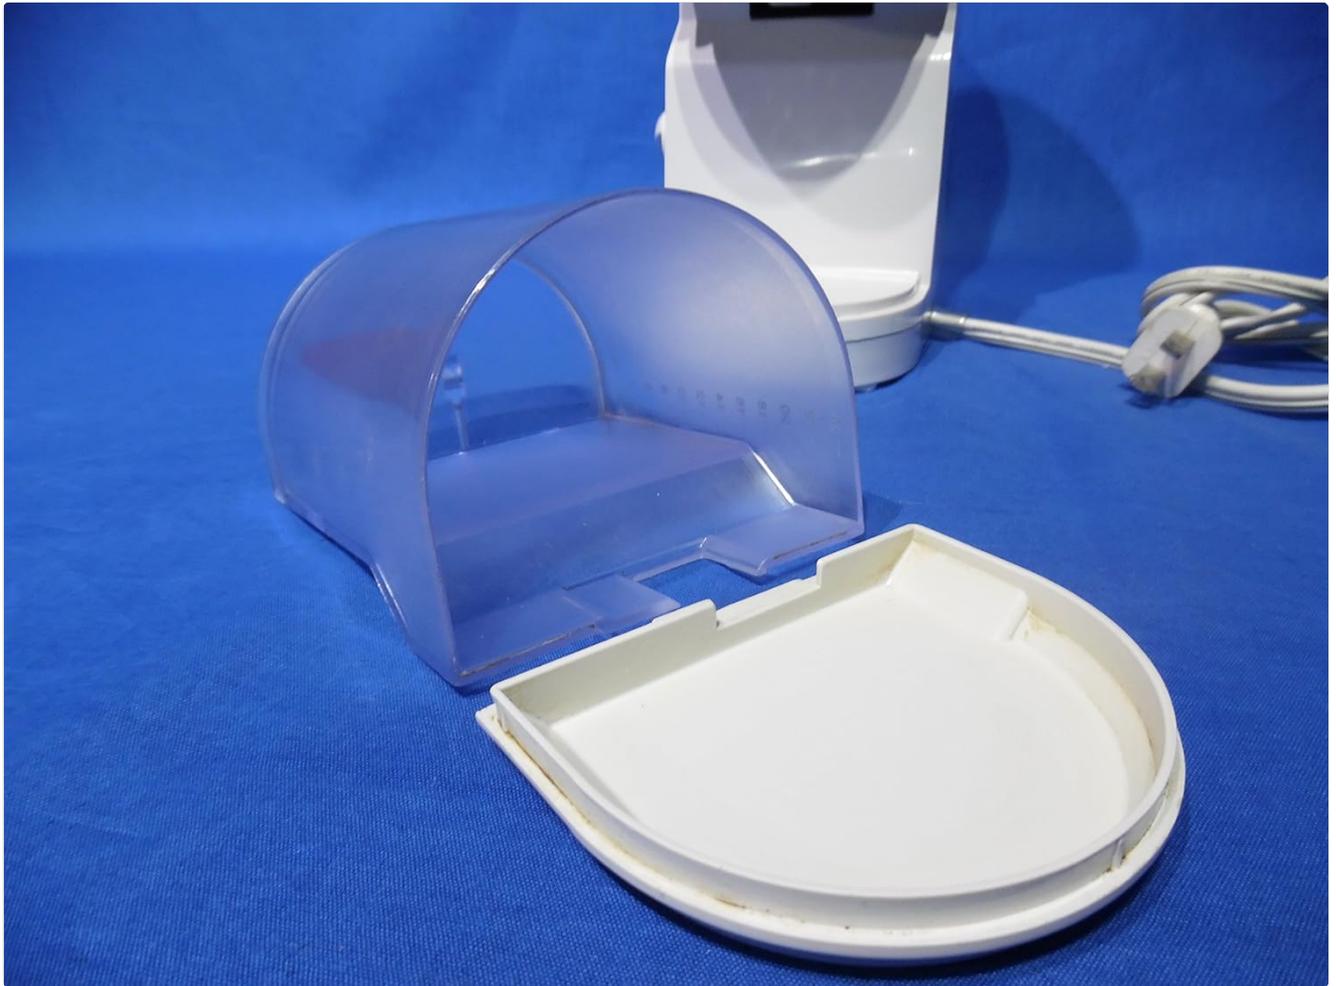


Figure 2: Top view of the grinder with the bean hopper open, ready for coffee beans. The burr mechanism is visible at the bottom of the hopper.

5. Close the bean hopper lid securely.
6. Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

Follow these steps to grind your coffee beans.

1. **Select Grind Fineness:** Rotate the grind selector dial to your desired setting.
 - **Extra-fine:** Suitable for espresso machines.
 - **Fine:** Recommended for drip coffee makers.
 - **Medium:** Ideal for drip coffee makers.
 - **Coarse:** Best for percolators or French press.
2. **Select Quantity:** Rotate the quantity selector dial to the number of tablespoons of coffee you wish to grind. The grinder can process from 2 to 24 tablespoons at one time.
3. **Start Grinding:** Press the power switch to the "On" position. The grinder will operate until the selected quantity of coffee has been ground, then it will automatically shut off.
4. **Collect Ground Coffee:** Once grinding is complete, pull the ground coffee collection bin straight out from the unit. Remove its lid and pour the ground coffee into your coffee maker or storage container.
5. **Turn Off:** If you need to stop grinding before the selected quantity is reached, simply press the power switch to the "Off"

position.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your grinder.

1. **Before Cleaning:** Always unplug the grinder from the electrical outlet before cleaning.
2. **Cleaning the Collection Bin:** Remove the ground coffee collection bin. Hand wash the removable plastic bin and its lid with warm, soapy water. Rinse thoroughly and dry completely before reinserting.

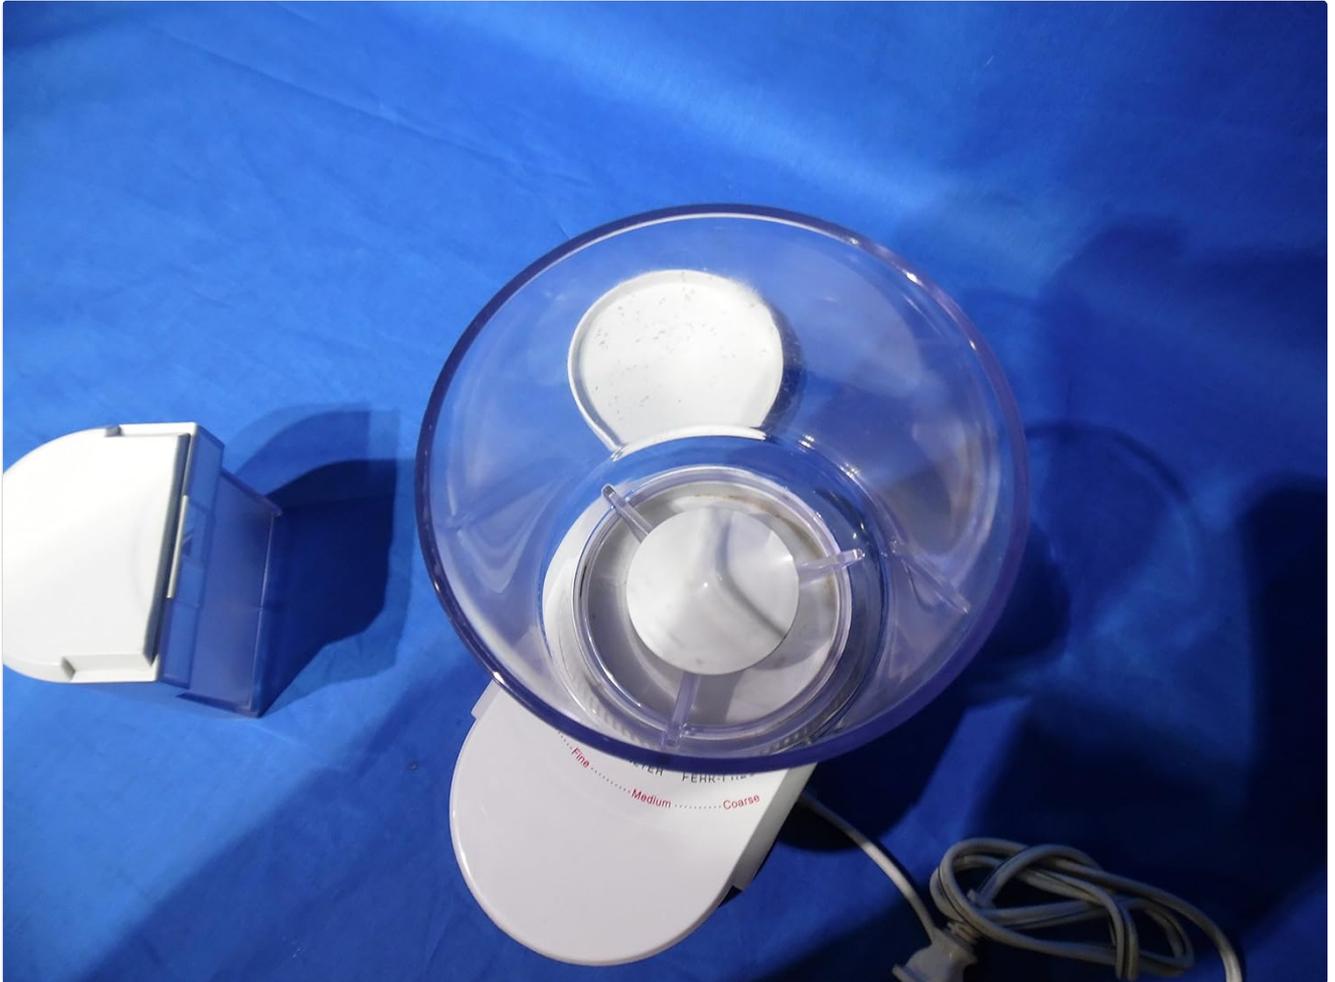


Figure 3: The ground coffee collection bin detached from the grinder, ready for cleaning. The main unit's opening where the bin sits is also visible.

3. **Cleaning the Exterior:** Wipe the exterior of the grinder with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
4. **Cleaning the Burr Mechanism:** Use a small brush (not included) to remove any residual coffee grounds from the burr grinding mechanism inside the bean hopper.
5. **Storage:** Store the grinder in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Grinder does not turn on.	<ul style="list-style-type: none"> • Not plugged in. • Power switch is off. • Ground coffee bin not properly inserted. 	<ul style="list-style-type: none"> • Ensure the power cord is securely plugged into a working outlet. • Turn the power switch to the "On" position. • Check that the ground coffee collection bin is fully and correctly seated.
Grinder runs but no coffee is dispensed.	<ul style="list-style-type: none"> • No coffee beans in the hopper. • Beans are stuck or clogged. 	<ul style="list-style-type: none"> • Add whole coffee beans to the hopper. • Unplug the unit, then gently shake or tap the grinder to dislodge beans. Use a brush to clear any blockages in the burr area.
Inconsistent grind.	<ul style="list-style-type: none"> • Burrs are dirty or worn. • Incorrect grind setting for bean type. 	<ul style="list-style-type: none"> • Clean the burr grinding mechanism thoroughly. • Experiment with different grind settings to find the optimal one for your beans and brewing method.

SPECIFICATIONS

- **Model:** DCG4T
- **Brand:** De'Longhi
- **Color:** White
- **Material:** Plastic
- **Item Weight:** 3 Pounds
- **Wattage:** 150 watts
- **Capacity:** Approximately 1.5 Pounds (coffee beans)
- **Dimensions:** 11-1/4 inches (height) x 5-3/4 inches (width) (approximate)
- **UPC:** 044387231244



Figure 4: Underside of the grinder, displaying the manufacturer's label with electrical specifications and serial number.

WARRANTY

This product comes with a **1-year manufacturer's warranty**. For detailed warranty terms and conditions, please refer to the documentation included with your purchase or contact De'Longhi customer support.

CUSTOMER SUPPORT

For assistance, service, or to inquire about parts, please visit the official De'Longhi website or contact their customer service department. Contact information can typically be found on the manufacturer's website or in the product packaging.

Online Resources: www.delonghi.com