

[manuals.plus](#) /

› [Farberware](#) /

› [Farberware Tabletop Knife Sharpener FULST11 Instruction Manual](#)

Farberware FULST11

Farberware Tabletop Knife Sharpener FULST11 Instruction Manual

1. PRODUCT OVERVIEW

The Farberware Tabletop Knife Sharpener is designed to restore a sharp, fine edge to cutlery. It utilizes ceramic rods to achieve optimal knife angles for effective sharpening. This sharpener features a contoured body for a secure grip and a non-slip bottom for stability during use.



Image 1.1: Front view of the Farberware Tabletop Knife Sharpener.

Key features include:

- **Ceramic Rods:** Designed to sharpen and restore fine-edge cutlery.
- **Ergonomic Grip:** Contoured body for comfortable and secure handling.
- **Non-slip Base:** Provides stability during the sharpening process.
- **Lightweight Construction:** Made from durable plastic for easy storage and portability.

FARBERWARE



Image 1.2: Diagram highlighting the ceramic sharpening rods and the non-slip base for stability.

2. SETUP

Before use, place the Farberware Tabletop Knife Sharpener on a stable, flat surface. Ensure the surface is clean and dry to maximize the effectiveness of the non-slip base.



Image 2.1: The sharpener positioned on a cutting board, ready for use.

3. OPERATING INSTRUCTIONS

Follow these steps to sharpen your knives effectively:

1. Hold the sharpener firmly with one hand on a stable surface.
2. At a 90-degree angle, insert the knife blade into the sharpening slot.
3. With moderate downward pressure, pull the knife blade through the sharpening slot towards you.
4. Repeat this action as needed until the desired sharpness is achieved.

Important Safety Note: Do not use this sharpener with serrated knives. Always exercise caution when handling sharp objects.

**Sharpening
Instructions:**

1. At a 90 degree angle, insert the knife blade into the sharpening slot
2. With moderate pressure, press down and pull the knife blade through the sharpening slot toward you
3. Repeat as needed for optimal sharpness



Image 3.1: Visual guide for the knife sharpening process.



Image 3.2: The knife sharpener in active use, demonstrating proper technique.

4. MAINTENANCE

To maintain your Farberware Tabletop Knife Sharpener:

- Hand wash the sharpener with warm water and a mild detergent.
- Rinse thoroughly and dry immediately after washing.
- Do not place in a dishwasher.

5. TROUBLESHOOTING

No specific troubleshooting information is provided for this product. If you encounter issues, ensure you are following the operating instructions correctly and that the sharpener is clean and undamaged.

6. SPECIFICATIONS

Attribute	Detail

Brand	Farberware
Model Number	FULST11
Color	Black
Material	Plastic
Product Dimensions	19.05 x 5.08 x 6.99 cm (7.5 x 2 x 2.75 inches)
Item Weight	70 g (0.15 lbs)

FARBERWARE®

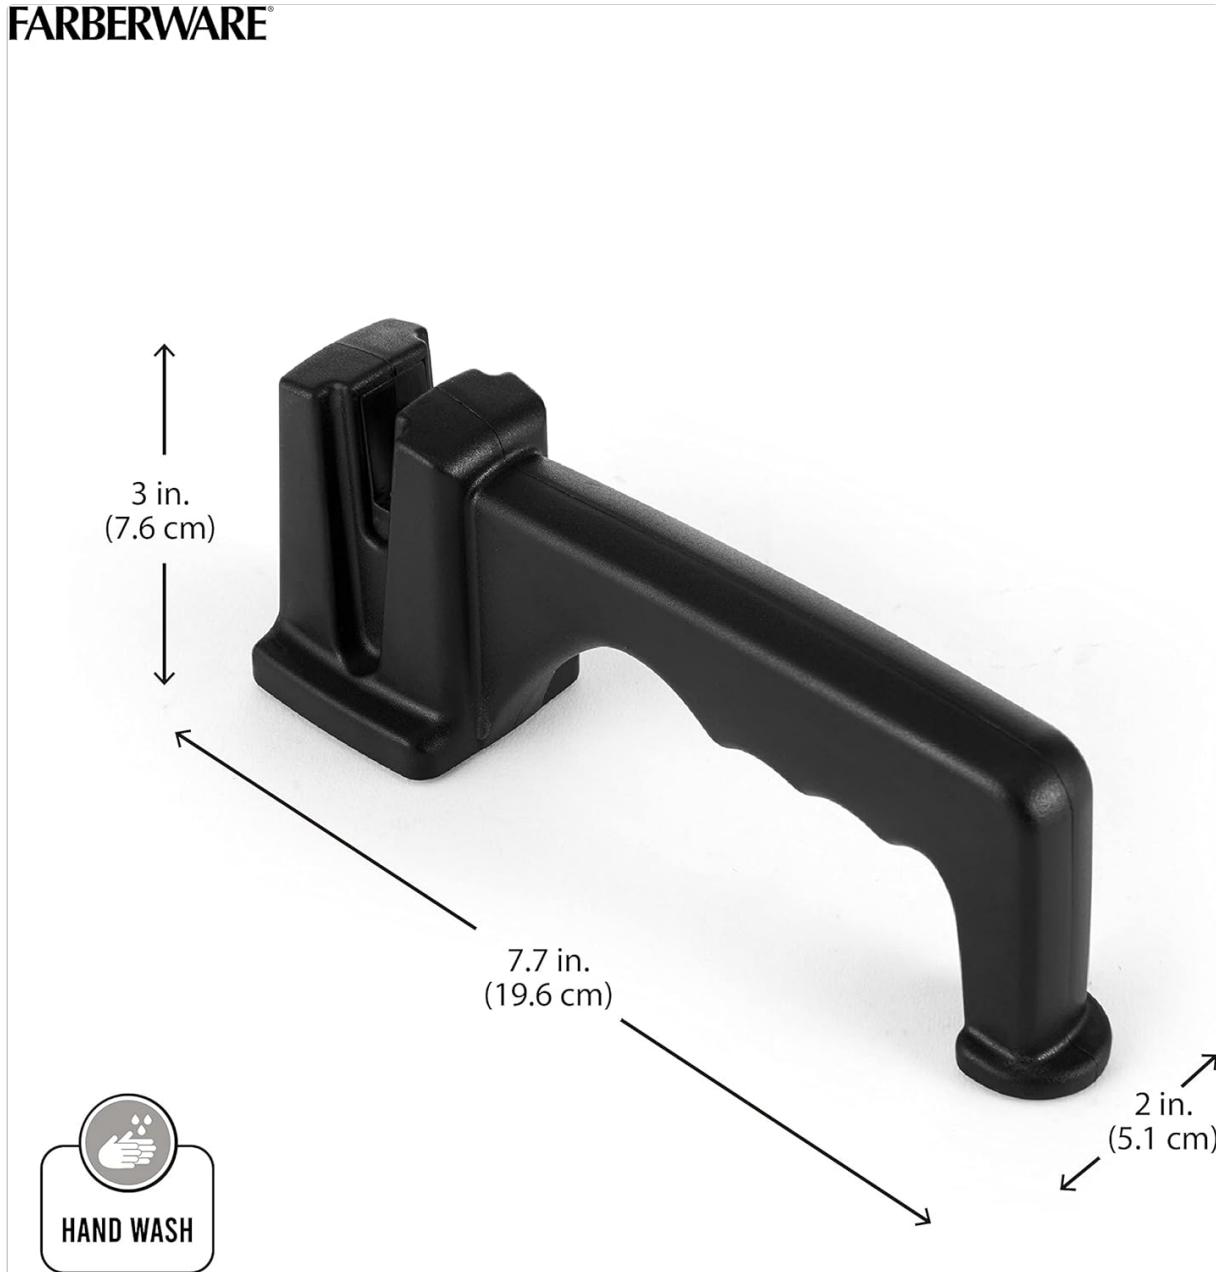


Image 6.1: Dimensions of the Farberware Tabletop Knife Sharpener.

7. WARRANTY AND SUPPORT

No specific warranty or support information is provided in the product details. For inquiries regarding warranty or support, please refer to the product packaging or contact Farberware customer service directly.

