

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Dreamworks](#) /
- › [Elliott Smith - Figure 8 Audio CD User Manual](#)

### Dreamworks 2068532

# Elliott Smith - Figure 8 Audio CD User Manual

Model: 2068532


## INTRODUCTION

---

This manual provides essential information for the proper use and care of your Elliott Smith "Figure 8" Audio CD. This album, released in 2000 by Dreamworks, features 16 tracks and is designed for playback on standard audio CD players.

## PRODUCT OVERVIEW

---

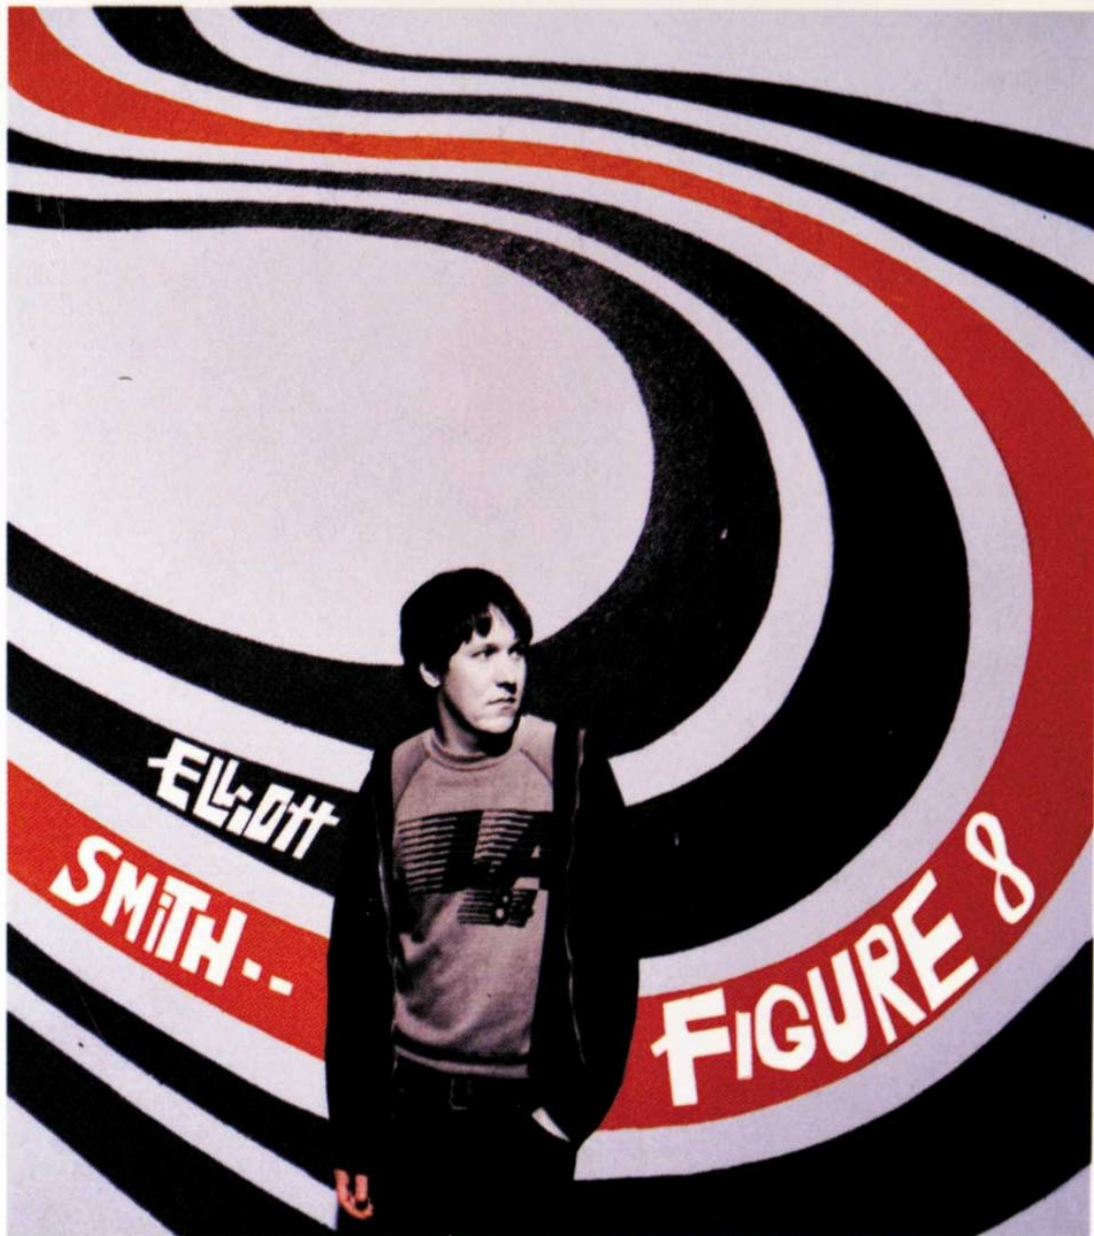

**Figure 8 Album Front Cover:** This image displays the front cover artwork of the "Figure 8" Audio CD, featuring a distinctive black and red spiral pattern with Elliott Smith positioned centrally.



**Figure 8 Album Back Cover:** This image shows the back cover of the "Figure 8" Audio CD, which includes the album's tracklist and a continuation of the spiral design, featuring an inverted image of Elliott Smith.

## SETUP

To begin using your Audio CD, ensure you have a compatible CD player (e.g., home stereo system, portable CD player, car CD player, or computer with a CD-ROM drive).

1. **Unboxing:** Carefully remove the Audio CD from its packaging. Avoid touching the playing surface (the shiny side) of the disc. Hold the disc by its edges or the center hole.
2. **Inspection:** Before insertion, visually inspect the disc for any visible scratches, smudges, or debris on the playing surface. A clean disc ensures optimal playback.

## OPERATING INSTRUCTIONS

Follow these steps to play your Audio CD:

1. **Insert Disc:** Open the CD tray or slot on your CD player. Gently place the disc into the tray with the label side facing up. Ensure it is seated correctly.
2. **Close Tray:** Close the CD tray or allow the player to draw the disc in. The player should automatically begin reading the disc.

3. **Playback:** Most CD players will automatically start playing the first track. Use the player's controls (Play, Pause, Stop, Skip, Fast Forward, Rewind) to navigate through the album.
4. **Track Selection:** Refer to the album's back cover or liner notes for the tracklist. You can typically select specific tracks using the number pad on your CD player or remote control.

## MAINTENANCE AND CARE

---

Proper care will extend the life of your Audio CD and ensure continued high-quality playback:

- **Handling:** Always hold the CD by its outer edges or by placing a finger through the center hole. Avoid touching the shiny playing surface to prevent fingerprints and scratches.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., a microfiber cloth). Wipe from the center of the disc outwards in straight lines, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep discs away from direct sunlight, extreme temperatures, and high humidity, as these can cause warping or damage.
- **Avoid Bending:** Do not bend or flex the disc, as this can cause irreparable damage.

## TROUBLESHOOTING

---

If you encounter issues during playback, consider the following:

- **Disc Skipping or Freezing:**
  - Check the disc for smudges or dirt and clean it as described in the "Maintenance" section.
  - Inspect the disc for deep scratches. Severe scratches may prevent proper playback.
  - Ensure the CD player is on a stable, level surface to prevent vibrations.
  - Try playing another CD to determine if the issue is with the disc or the player.
- **Disc Not Recognized:**
  - Ensure the disc is inserted correctly with the label side facing up.
  - Clean the disc.
  - Restart your CD player.
  - Verify that your player supports standard audio CDs.
- **No Sound:**
  - Check the volume level on your CD player and connected audio system.
  - Ensure all audio cables are securely connected.
  - Verify that the correct input source is selected on your audio receiver or amplifier.

## SPECIFICATIONS

---

<b>Title</b>	Figure 8
<b>Artist</b>	Elliott Smith
<b>Format</b>	Audio CD

<b>Manufacturer/Label</b>	Dreamworks
<b>Model Number</b>	2068532
<b>ASIN</b>	B00004S6GL
<b>UPC</b>	0600445022522
<b>Number of Discs</b>	1
<b>Original Release Date</b>	2000
<b>Product Dimensions</b>	5.63 x 4.96 x 0.39 inches
<b>Language</b>	English

## WARRANTY INFORMATION

---

Specific warranty information for this audio CD is not provided. Typically, audio CDs are covered by a limited warranty against manufacturing defects at the point of purchase. Please retain your proof of purchase.

## SUPPORT

---

For further assistance regarding the "Figure 8" Audio CD, please contact the retailer from whom you purchased the product. For general inquiries about Elliott Smith's music or Dreamworks releases, you may refer to official artist or label websites, if available.

Product identification: **UPC: 0600445022522**

