

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KitchenAid](#) /

› [KitchenAid Classic Series 4.5 Quart Tilt-Head Stand Mixer User Manual](#)

KitchenAid K45SSWH

KitchenAid Classic Series 4.5 Quart Tilt-Head Stand Mixer

Model: K45SSWH | Brand: KitchenAid

OVERVIEW

The KitchenAid Classic Series 4.5 Quart Tilt-Head Stand Mixer is designed for durability and performance, capable of handling a wide range of recipes from cookies to bread. Its robust metal construction ensures longevity, while the versatile 10-speed control allows for gentle stirring, thorough mixing, and efficient whipping.

Key features include:

- Built to take it all on with the durable and built-to-last metal construction, and 59 touchpoints around the mixer bowl for great mixing results.
- 4.5 Quart Stainless Steel Bowl to mix up to 8 dozen cookies in a single batch. Dishwasher safe.
- Easily add ingredients with the tilt-head design, providing better access to the bowl. The head locks in place while mixing.
- 10 speeds for nearly any task or recipe, from mixing ingredients together on the stir speed, to whipping cream at speed 8, ensuring thorough ingredient incorporation every time.
- Over 10 optional hub-powered attachments available (sold separately) to expand your mixer's capabilities, from food grinders to pasta makers and more.
- Includes (1) 4.5 Quart Stainless Steel Bowl, (1) Coated Flat Beater, (1) Coated Dough Hook, (1) 6-Wire Whip.

COMPONENTS & WHAT'S INCLUDED

Your KitchenAid Classic Series Stand Mixer comes with the following essential components:

- 4.5 Quart Stainless Steel Bowl
- Coated Flat Beater
- Coated Dough Hook
- 6-Wire Whip



The KitchenAid Classic Series Stand Mixer comes with a durable 4.5-quart stainless steel bowl, a coated flat beater for normal to heavy mixtures, a coated dough hook for kneading yeast doughs, and a 6-wire whip for incorporating air into ingredients.

Please note: No official product videos from the seller were available for embedding in this manual.

SETUP

Follow these steps to set up your KitchenAid Stand Mixer:

1. Place the mixer on a clean, dry, flat, and stable surface.
2. Ensure the speed control lever is in the "Off/0" position.
3. Tilt the motor head back by pushing the lock lever to the "Unlock" position and gently lifting the head.
4. Place the 4.5-quart stainless steel bowl onto the clamping plate, aligning the bowl pins with the notches in the plate. Twist the bowl clockwise until it locks securely.
5. Attach the desired accessory (flat beater, dough hook, or wire whip) by sliding it onto the attachment shaft and pushing it up as far as it will go. Then, turn the accessory counter-clockwise until it hooks onto the pin on the shaft.

6. Lower the motor head by pushing the lock lever to the "Unlock" position and gently lowering the head until it clicks into the "Lock" position.
7. Plug the mixer into a grounded 115V AC, 60 Hz, 3-wire cord, 3-prong plug outlet.





Properly attaching the mixing bowl and desired accessory is crucial for safe and effective operation. Ensure the bowl is securely twisted into the base and the accessory is firmly clicked into the attachment shaft.

OPERATING INSTRUCTIONS

The KitchenAid Stand Mixer offers precise control for all your mixing needs:

- **Speed Control:** The mixer features 10 distinct speeds. Use the "Stir" setting for slow mixing, combining, and mashing. Speeds 1-10 offer progressively faster mixing for kneading, beating, creaming, and whipping. Always start at a lower speed and gradually increase as needed to prevent splashing.
- **Tilt-Head Design:** The tilt-head allows for easy access to the bowl and attachments. Simply push the lock lever to "Unlock" to raise the head for adding ingredients or changing accessories. Push the lever back to "Lock" to secure the head in place during operation.
- **Multipurpose Attachment Hub:** The front of the mixer features a power hub designed to operate various optional attachments (sold separately), such as pasta makers, food grinders, and more. To use, simply remove the hub cover and insert the attachment shaft, securing it with the attachment knob.



The tilt-head design allows for easy access to the mixing bowl, making it simple to add ingredients during operation. The 10-speed control provides versatility for various recipes, from gentle stirring to high-speed whipping.

MAINTENANCE AND CLEANING

Proper care will ensure the longevity of your KitchenAid Stand Mixer:

- **Mixing Bowl and Accessories:** The 4.5-quart stainless steel bowl, coated flat beater, coated dough hook, and 6-wire whip are all dishwasher safe. For best results, place them on the top rack of your dishwasher.
- **Main Unit:** To clean the main mixer unit, wipe it down with a soft, damp cloth. Do not immerse the mixer in water or place it in a dishwasher, as this can damage the motor and electrical components.
- **Attachment Hub:** Keep the attachment hub clean and free of debris. If using optional attachments, follow their specific cleaning instructions.



After use, the stainless steel bowl and included accessories are dishwasher safe for convenient cleaning. The main mixer unit should be wiped clean with a damp cloth to maintain its appearance and functionality.

TROUBLESHOOTING

If you encounter any issues with your KitchenAid Stand Mixer, try the following:

- **Mixer Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check that the speed control lever is not in the "Off/0" position.
- **Attachments Not Fitting:** Make sure the motor head is fully lowered and locked into place. Ensure the accessory is correctly aligned with the attachment shaft pin.
- **Excessive Noise or Vibration:** This may occur with very heavy loads. Ensure the mixer is on a stable, flat surface. If the issue persists, reduce the load.

For more detailed troubleshooting or persistent issues, please refer to the official user manuals:

- [User Manual \(PDF\)](#)
- [User Guide \(PDF\)](#)

SPECIFICATIONS

Attribute	Value
Brand	KitchenAid
Model Name	Classic Series
Model Number	K45SSWH
Color	White
Product Dimensions	14.1"D x 8.7"W x 13.9"H
Capacity	4.5 Quarts
Item Weight	24.2 Pounds
Max Watts	275W
Speeds	10
Blade Material	Stainless Steel
Dishwasher Safe (Bowl & Attachments)	Yes

WARRANTY AND SUPPORT

Your KitchenAid Classic Series Stand Mixer is backed by a manufacturer's warranty. Please refer to the included User Manual for specific warranty details and registration information.

For additional support, product information, or to explore optional attachments, visit the official KitchenAid Store:

[Visit the KitchenAid Store](#)